

LS 180.B
LS 185.B
LS 190.B

Workshop
Manual

REPAIR MANUAL



LS180.B
LS185.B
LS190.B

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
HIGH-FLOW HYDRAULIC POWER SYSTEM	A.16.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A

POWER PRODUCTION

B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

POWER TRAIN

C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

TRAVELLING

D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
STEERING Steering clutch	D.20.F
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Wheels	D.50.C
Final drive	D.15.A

BODY AND STRUCTURE

E

USER CONTROLS AND SEAT	E.32.A
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

ENVIRONMENT CONTROL Air-conditioning system E.40.C

SAFETY SECURITY ACCESSORIES Safety E.50.B

WORKING ARM H

BOOM Lift H.20.B

SINGLE ARM Lift H.40.B

SINGLE ARM TOOL ATTACHMENT Tilt H.50.C

TOOLS AND COUPLERS J

CARRYING Unarticulated tools J.50.B

COUPLING Hydraulic coupling J.80.C

COUPLING Mechanical coupling J.80.B

INTRODUCTION

Contents

INTRODUCTION

Basic instructions (- A.90.A.05)	3
Torque (- A.90.A.10)	7
Conversion factors (- A.92.A.21)	11

Basic instructions (- A.90.A.05)

Technical Information

This manual has been produced by a new technical information system. This new system is designed to deliver technical information electronically through CDROM and in paper manuals. A coding system called ICE has been developed to link the technical information to other Product Support functions e.g. Warranty.

Technical information is written to support the maintenance and service of the functions or systems on a customer's machine. When a customer has a concern on his machine it is usually because a function or system on his machine is not working at all, is not working efficiently, or is not responding correctly to his commands. When you refer to the technical information in this manual to resolve that customer's concern, you will find all the information classified using the new ICE coding, according to the functions or systems on that machine. Once you have located the technical information for that function or system then you will find all the mechanical, electrical or hydraulic devices, components, assemblies and sub-assemblies for that function or system. You will also find all the types of information that have been written for that function or system, the technical data (specifications), the functional data (how it works), the diagnostic data (fault codes and troubleshooting) and the service data (remove, install adjust, etc.).

By integrating this new ICE coding into technical information, you will be able to search and retrieve just the right piece of technical information you need to resolve that customer's concern on his machine. This is made possible by attaching 3 categories to each piece of technical information during the authoring process.

The first category is the Location, the second category is the Information Type and the third category is the Product:

LOCATION - is the component or function on the machine, that the piece of technical information is going to describe e.g. Fuel tank.

INFORMATION TYPE - is the piece of technical information that has been written for a particular component or function on the machine e.g. Capacity would be a type of Technical Data that would describe the amount of fuel held by the Fuel tank.

PRODUCT - is the model that the piece of technical information is written for.

Every piece of technical information will have those 3 categories attached to it. You will be able to use any combination of those categories to find the right piece of technical information you need to resolve that customer's concern on his machine.

That information could be:

the description of how to remove the cylinder head

a table of specifications for a hydraulic pump

a fault code

a troubleshooting table

a special tool

How to Use this Manual

This manual is divided into Sections. Each Section is then divided into Chapters. Contents pages are included at the beginning of the manual, then inside every Section and inside every Chapter. An alphabetical Index is included at the end of a Chapter. Page number references are included for every piece of technical information listed in the Chapter Contents or Chapter Index.

Each Chapter is divided into four Information types:

(D) Technical Data (specifications) for all the mechanical, electrical or hydraulic devices, components and assemblies.

(C) Functional Data (how it works) for all the mechanical, electrical or hydraulic devices, components and assemblies.

INTRODUCTION

(G) Diagnostic Data (fault codes, electrical and hydraulic troubleshooting) for all the mechanical, electrical or hydraulic devices, components and assemblies.

(F) Service data (remove disassembly, assemble, install) for all the mechanical, electrical or hydraulic devices, components and assemblies.

Sections

Sections are grouped according to the main functions or a systems on the machine. Each Section is identified by a letter A, B, C etc. The amount of Sections included in the manual will depend on the type and function of the machine that the manual is written for. Each Section has a Contents page listed in alphabetic/numeric order. This table illustrates which Sections could be included in a manual for a particular product.

PRODUCT	SECTION										
	A - Distribution Systems										
	B - Power Production										
	C - Power Train										
	D - Travelling										
	E - Body and Structure										
	F - Frame Positioning										
	G - Tool Positioning										
	H - Working Arm										
	J - Tools and Couplers										
	K - Crop Processing										
L - Field Processing											
Tractors	X	X	X	X	X	X		X	X		
Vehicles with working arms: backhoes, excavators, skid steers,	X	X	X	X	X	X	X	X	X		
Combines, forage harvesters, balers,	X	X	X	X	X	X	X	X	X	X	
Seeding, planting, floating, spraying equipment,	X	X	X	X	X	X	X		X		X
Mounted equipment and tools,					X	X	X		X		

Chapters

Each Chapter is identified by a letter and number combination e.g. Engine B.10.A The first letter is identical to the Section letter i.e. Chapter B.10 is inside Section B, Power Production.

CONTENTS

The Chapter Contents lists all the **(D)** technical data (specifications), **(C)** functional data (how it works), **(F)** service data (remove, install adjust, etc..) and **(G)** diagnostic data (fault codes and troubleshooting) that have been written in that Chapter for that function or system on the machine.

Contents

POWER PRODUCTION ENGINE _ 10.A

TECHNICAL DATA	
ENGINE - General specification (B.10.A - D.40.A.10)	3
FUNCTIONAL DATA	
ENGINE - Dynamic description (B.10.A - C.30.A.10)	4
SERVICE	
ENGINE - Remove (B.10.A - F.10.A.10)	5
DIAGNOSTIC	
ENGINE - Troubleshooting (B.10.A - G.40.A.10)	6

INDEX

REPAIR MANUAL
DISTRIBUTION SYSTEMS



LS180.B
LS185.B
LS190.B

Contents

DISTRIBUTION SYSTEMS - A

PRIMARY HYDRAULIC POWER SYSTEM LS180.B , LS185.B , LS190.B	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM LS180.B , LS185.B , LS190.B	A.12.A
HIGH-FLOW HYDRAULIC POWER SYSTEM LS180.B , LS185.B , LS190.B	A.16.A
ELECTRICAL POWER SYSTEM LS180.B , LS185.B , LS190.B	A.30.A
LIGHTING SYSTEM LS180.B , LS185.B , LS190.B	A.40.A

DISTRIBUTION SYSTEMS - A

PRIMARY HYDRAULIC POWER SYSTEM - 10.A

**LS180.B
LS185.B
LS190.B**

Contents

DISTRIBUTION SYSTEMS - A

PRIMARY HYDRAULIC POWER SYSTEM - 10.A

TECHNICAL DATA

PRIMARY HYDRAULIC POWER SYSTEM

Capacity (A.10.A - D.40.A.20)	4
Special tools (A.10.A - D.20.A.40)	4
General specification (A.10.A - D.40.A.10)	5
Relief valve	
General specification (A.10.A.16 - D.40.A.10)	6
Hydraulic pump	
General specification (A.10.A.20 - D.40.A.10)	7
Oil filter by-pass	
General specification (A.10.A.25 - D.40.A.10)	8

FUNCTIONAL DATA

PRIMARY HYDRAULIC POWER SYSTEM

Identification (A.10.A - C.40.C.01)	9
Hydraulic schematic frame 01 (A.10.A - C.20.H.01)	10
Hydraulic schematic frame 02 (A.10.A - C.20.H.02)	11
Hydraulic schematic frame 03 (A.10.A - C.20.H.03)	13
Hydraulic schematic frame 04 (A.10.A - C.20.H.04)	15
Hydraulic schematic frame 05 (A.10.A - C.20.H.05)	17
Hydraulic schematic frame 06 (A.10.A - C.20.H.06)	18
Hydraulic pump	
Sectional view (A.10.A.20 - C.10.A.30)	19

SERVICE

PRIMARY HYDRAULIC POWER SYSTEM

Cleaning (A.10.A - F.30.A.10)	20
Decontaminating (A.10.A - F.30.A.60)	24
Relief valve	
Flow test (A.10.A.16 - F.40.A.45)	26
Pressure test (A.10.A.16 - F.40.A.30)	28
Hydraulic pump	
Flow test (A.10.A.20 - F.40.A.45)	29
Disassemble (A.10.A.20 - F.10.A.25)	31
Visual inspection (A.10.A.20 - F.40.A.10)	36
Assemble (A.10.A.20 - F.10.A.20)	38
Remove (A.10.A.20 - F.10.A.10)	43

Install (A.10.A.20 - F.10.A.15)	45
Charge pump	
Pressure test (A.10.A.21 - F.40.A.30)	47
Reservoir	
Apply vacuum (A.10.A.22 - F.35.A.50)	51
Filling (A.10.A.22 - F.60.A.10)	52
Remove (A.10.A.22 - F.10.A.10)	53
Install (A.10.A.22 - F.10.A.15)	56
Visual inspection (A.10.A.22 - F.40.A.10)	58
Oil filter	
Remove (A.10.A.24 - F.10.A.10)	59
Install (A.10.A.24 - F.10.A.15)	60
Oil cooler	
Remove (A.10.A.32 - F.10.A.10)	61
Install (A.10.A.32 - F.10.A.15)	62
DIAGNOSTIC	
Sensing system	
Temperature sensor - Testing (A.10.A.95.90 - G.40.A.20)	63
Filter restriction sensor - Testing (A.10.A.95.94 - G.40.A.20)	63

Hydraulic pump - Disassemble (A.10.A.20 - F.10.A.25)

1. Draw alignment marks on the housing with a white marker. These marks will be referenced during assembly.



GD98J801 1

2. Loosen and remove the socket bolts and washers.



GD98J802 2

3. Remove the cover.




GD98J803 3

4. Remove the gear plate.




GD98J804 4

5. Remove the dowel pins.

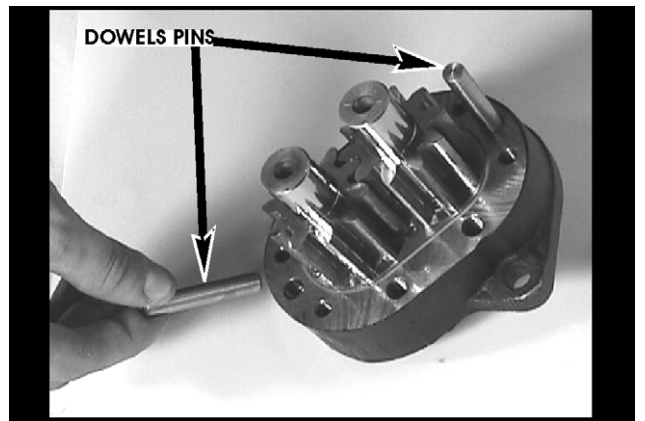


GD98J805_2 5

6. Rotate the gear teeth until one gear tooth is centered inside two gear teeth. Draw a mark with a white marker. This mark will be referenced during assembly.

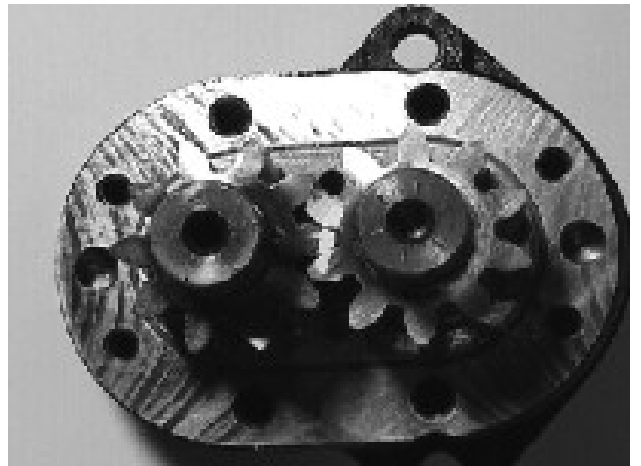

GD98J806 6

7. Remove the drive shaft.

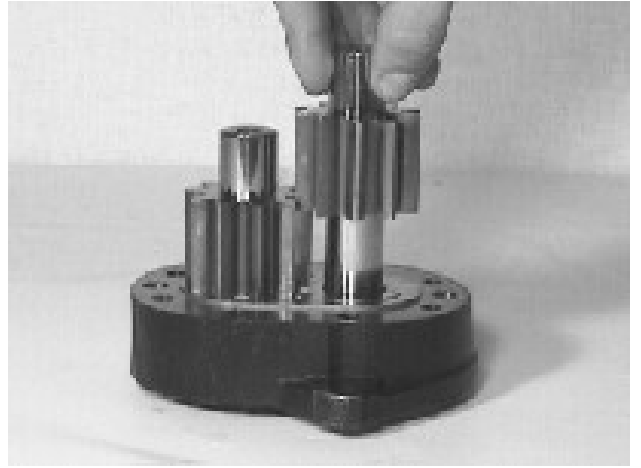

GD98J807 7

8. Remove the idler shaft.



GD98J808 8

9. Remove the wear plate from the cover.



GD98J809 9



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

10. Remove the wear plate from the body.



GD98J810 10

11. Remove and discard the seal ring from the cover.



GD98J811_2 11

12. Remove and discard the seal ring from the body.



GD98J812_2 12

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>