

SERVICE MANUAL

T5.90 / T5.100 / T5.110 / T5.120

Tier 4B (final)

Tractor

PIN HLRT5120AJLE00620 and above

Part number 51543579

1st edition English
November 2018



Link Product / Engine

Product	Market Product	Engine
T5.100 Without cab, with Dual Command™ transmission [HLRT5100JJLE03967 -]	North America	F5GFL413H*C005
T5.100 With cab, with Dual Command™ transmission [HLRT5100CJLE03039 -]	North America	F5GFL413H*C005
T5.110 Without cab, with Dual Command™ transmission [HLRT5110CJLE04139 -]	North America	F5GFL413G*C005
T5.110 With cab, with Dual Command™ transmission [HLRT5110CJLE04173 -]	North America	F5GFL413G*C005
T5.120 Without cab, with Dual Command™ transmission [HLRT5120EJLE00119 -]	North America	F5GFL413F*C010
T5.120 With cab, with Dual Command™ transmission [HLRT5120AJLE00620 -]	North America	F5GFL413F*C010
T5.90 Without cab, with Dual Command™ transmission [HLRT5090PJLE03963 -]	North America	F5GFL413J*C005
T5.90 With cab, with Dual Command™ transmission [HLRT5090AJLE03730 -]	North America	F5GFL413J*C005

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
[18.112] Slip clutch or flywheel damper	18.4
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components	21.3
[21.110] Master clutch housing	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.104] Power shuttle transmission hydraulic components	21.6
[21.154] Power shuttle transmission internal components	21.7
[21.160] Creeper	21.8

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

[21.162] Reverser	21.9
[21.168] Hi-Lo unit	21.10
[21.109] Transmission cooler and lines.....	21.11
[21.118] Transmission/Rear drive	21.12
[21.148] Transmission/Rear drive internal components	21.13
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.224] Trailer brake pneumatic control	33.3
Hydraulic systems.....	35

[35.304] Combination pump units	35.1
[35.204] Remote control valves	35.2
[35.100] Main lift system.....	35.3
[35.114] Three-point hitch control valve	35.4
[35.116] Three-point hitch cylinder	35.5
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch	37.3
[37.120] Rear three-point hitch linkage.....	37.4
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator.....	55.5

[55.302] Battery.....	55.6
[55.202] Cold start aid	55.7
[55.011] Fuel tank system	55.8
[55.010] Fuel injection system.....	55.9
[55.014] Engine intake and exhaust system.....	55.10
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.11
[55.640] Electronic modules.....	55.12
[55.513] Cab transmission controls.....	55.13
[55.024] Transmission control system.....	55.14
[55.020] Transmission speed sensors.....	55.15
[55.022] Transmission temperature sensors	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.031] Parking brake electrical system	55.18
[55.512] Cab controls.....	55.19
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.20
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.21
[55.523] Cab hitch controls	55.22
[55.130] Rear three-point hitch electronic control system	55.23
[55.518] Wiper and washer system.....	55.24
[55.404] External lighting	55.25
[55.405] External lighting switches and relays	55.26
[55.408] Warning indicators, alarms, and instruments	55.27
[55.035] Remote control valve electric control	55.28
[55.DTC] FAULT CODES.....	55.29
Front loader and bucket.....	82
[82.100] Arm.....	82.1
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals.....	90

[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.156] Cab windshield and windows	90.5
[90.110] Operator platform less cab	90.6
[90.118] Protections and footboards.....	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels	90.10
[90.102] Engine shields, hood latches, and trims	90.11
[90.116] Fenders and guards.....	90.12



INTRODUCTION

Safety rules

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non-observance of simple and fundamental safety regulations.

For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED: by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of machine, regardless of how well the machine in question was designed and built.

A careful and prudent mechanic is the best insurance against any accident.

Precise observance of the most basic safety rule is normally sufficient to avoid many serious accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

GENERALITIES

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts.
It is advised to wear approved safety clothing, e.g: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Operate the vehicle and use the implements exclusively from the driver's seat.
- Do not carry out operations on the vehicle with the engine running, unless specifically indicated.
- Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out with the greatest care and attention.
- Service stairs and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- Disconnect the batteries and label all controls to indicate that the vehicle is being serviced. Block the machine and all equipment which should be raised.
- Do not check or fill fuel tanks, accumulator batteries, nor use starting liquid when smoking or near naked flames, as these fluids are inflammable.
- Brakes are inoperative if manually released for repair or maintenance purposes.
In such cases, the machine should be kept constantly under control using blocks or similar devices.
- The fuel nozzle should always be in contact with the filling aperture. Maintain this position until filling operations are completed in order to avoid possible sparks caused by the accumulation of static electricity.
- Only use specified towing points for towing the tractor. Connect the parts carefully and make sure that all pins and/or locks are secured in position before applying traction.
Never remain near the towing bars, cables or chains that are operating under load
- To move a disabled machine, use a trailer or a low-boy, if available.
- When loading or unloading the vehicle from the trailer, or other means of transport, select a flat area capable of sustaining the trailer or truck wheels, firmly secure the tractor to the truck or trailer and lock the wheels in the position.
- For electrical heaters, battery-chargers and similar equipment use exclusive auxiliary power supplies with a efficient ground to avoid electrical shock hazard.
- Always use lifting equipment and similar of appropriate capacity to lift or move heavy components.
- Take extra care if bystanders are present.
- Never pour gasoline or diesel oil into open, wide and low containers.
- Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-flammable non-toxic proprietary solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.

- Limit the air pressure to a maximum of **2.1 bar (30.5 psi)**, according to local regulations.
- Do not run the engine in confined spaces without suitable ventilation.
- Do not smoke, use naked flames, or cause sparks in the area when fuel filling or handling highly inflammable liquids.
- Never use naked flames for lighting when working on the machine or checking for leaks.
- All movements must be carried out carefully when working under, on or near the vehicle and wear protective equipment: helmets, goggles and special footwear.
- When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
- If operating outside the workshop, position the machine on a flat surface and lock in position. If working on a slope, lock the vehicle in position and move to a flat area as soon as possible in order to ensure a safety position.
- Damaged or bent chains or cables are unreliable. Do not use them for lifting or trailing.
Always use suitable protective gloves when handling chains or cables.
- Chains should always be safely secured. Ensure that the connection is strong enough to hold the expected load. No persons should stop near the fastening point, trailing chains or cables.
- Maintenance and repair operations must be carried out in a CLEAN and DRY area, eliminate any water or oil spillage immediately.
- Do not create piles of oil or grease--soaked rags as they represent a serious fire hazard; store them in a closed metal container.
Before starting the vehicle or implements, make sure that the driver's seat is locked in position and always check that the area is free of persons or obstacles.
- Empty pockets of all objects that may unintentionally fall into the vehicle parts when disassembled.
- In the presence of protruding metal parts, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
- Handle all parts carefully, do not put your hands or fingers between moving parts, wear suitable safety clothing -- safety goggles, gloves and shoes.

WELDING OPERATIONS

- When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles.
DO NOT LOOK AT ARC WITHOUT PROPER EYE PROTECTION.
- Where possible, remove the part or tool that requires arc welding from the tractor.
- Disconnect both cables from the battery. Isolate the cable ends to avoid contact with each other and the tractor.
- Position the welder ground clamp as near as possible to the area where welding is taking place.
- Remove the electronic control units located on the tractor if welding is to be carried out near these control units.
- Never allow welding cables to lay on, near or across any electrical wiring or electronic component while welding is in progress.
- Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.

START UP

- Never start the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never bring your head, body, arms, legs, feet, hands, fingers near fans or rotating belts.

MOTOR

- Always loosen the radiator cap slowly before removing it to allow any remaining pressure in the system to be discharged. Coolant should be topped up only when the engine is stopped or idle if hot.
- Never fill up with fuel when the engine is running, especially if hot, in order to prevent the outbreak of fire as a result of fuel spillage
- Never check or adjust fan belt tension when the engine is running.

- Never adjust the fuel injection pump when the vehicle is moving.
- Never lubricate the vehicle when the engine is running.

ELECTRICAL SYSTEMS

- If it is necessary to use auxiliary batteries, the cables must be connected at both sides as follows: (+) with (+) and (-) with (-).
- Avoid short-circuiting the terminals. GAS RELEASED FROM BATTERIES IS HIGHLY INFLAMMABLE.
- During charging, leave the battery compartment uncovered to improve ventilation.
- Do not check charge by placing metal articles across battery terminals.
- Avoid sparks or flames near the battery zone to prevent explosion hazards.
- Before servicing operations, check for fuel or current leaks. Eliminate any eventual leaks before starting work.
- Never charge batteries in confined spaces. Make sure that there is adequate ventilation in order to prevent accidental explosion hazards as a result of the accumulation of gases released during charging operations.
- Always disconnect the battery before performing any kind of servicing on the electrical system.

HYDRAULIC SYSTEMS

- Some fluid slowly coming out from a very small port can be almost invisible and be strong enough to penetrate the skin. Check for leaks using a piece of cardboard, NEVER USE HANDS.
- If any liquid penetrates skin tissue, call for medical aid immediately
- Serious skin infections may result if medical attention is not given.
- Use the specific tools when checking pressure values on the hydraulic system.

WHEELS AND TYRES

- Make certain that tires are correctly inflated to the pressure indicated by the Manufacturer. Periodically check possible damages to the rims and tires.
- Stand away from (at the side of) the tyre when checking inflation pressure.
- Only check pressure when the vehicle is unloaded and the tyres are cold, to avoid incorrect readings as a result of over-pressure.
- Do not re-use parts of recovered wheels as incorrect welding or brazing may heat the material, causing it to weaken and eventually damage or break the wheel.
- Never cut, nor weld a rim with the inflated tire assembled.
- When removing the wheels, lock both the front and rear vehicle wheels.
- Always position support stands when raising the vehicle, in order to conform to current safety regulations.
- Deflate the tyre before removing any object caught into the tyre tread.
- Never inflate tyres using inflammable gases; this could cause an explosion and put operator safety at risk.

REMOVAL AND RE-FITTING

- Lift and handle all heavy parts using suitable lifting equipment and make sure that all slings and hooks are correctly secured.
- Handle all parts carefully during lifting operations, be careful to personnel working near the load to be lifted. Never insert hands or fingers between parts, always wear approved accident prevention clothing (goggles, gloves and work boots).
- Avoid twisting chains or metal cables and always wear safety gloves when handling cables or chains.




SERVICE MANUAL

Engine

T5.100 With cab, with Dual Command™ transmission [HLRT5100CJLE03039 -], T5.100 Without cab, with Dual Command™ transmission [HLRT5100JJLE03967 -], T5.110 With cab, with Dual Command™ transmission [HLRT5110CJLE04173 -], T5.110 Without cab, with Dual Command™ transmission [HLRT5110CJLE04139 -], T5.120 With cab, with Dual Command™ transmission [HLRT5120AJLE00620 -], T5.120 Without cab, with Dual Command™ transmission [HLRT5120EJLE00119 -], T5.90 With cab, with Dual Command™ transmission [HLRT5090AJLE03730 -], T5.90 Without cab, with Dual Command™ transmission [HLRT5090PJLE03963 -]

Engine - Torque

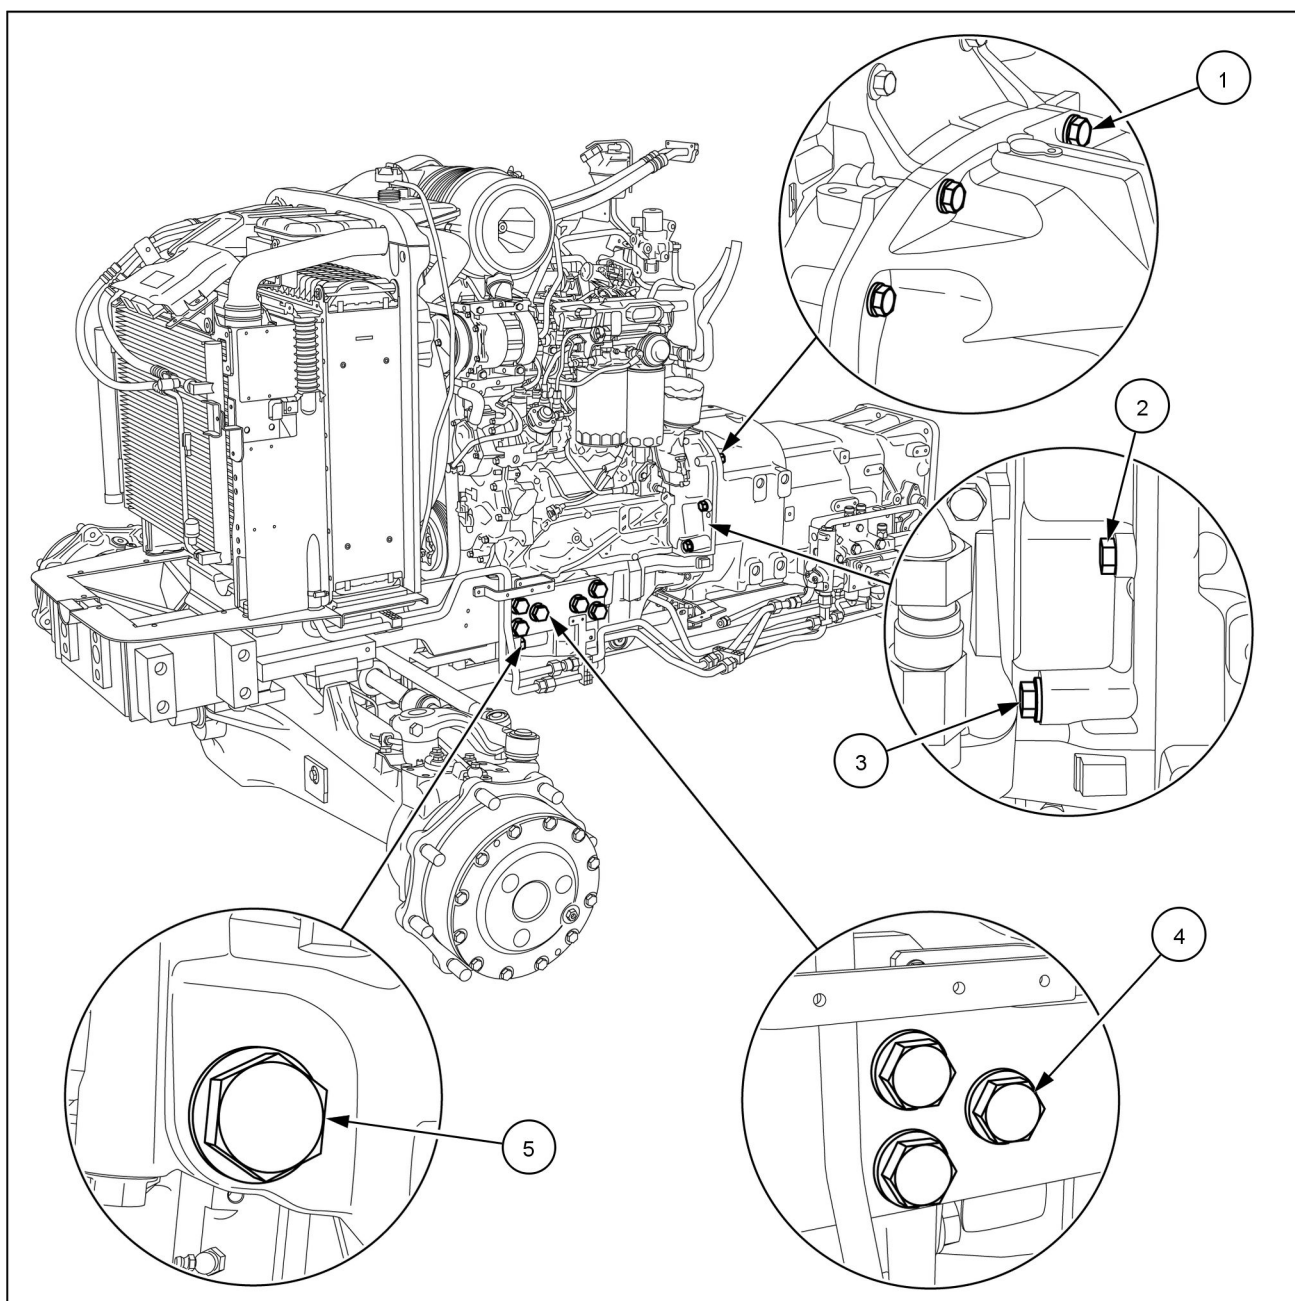

MOIL17TR02997GA 1

Part to tighten	Thread	Tighten torque
Bolt (5) securing the front axle to the engine block	M20 x 1.5 x 130	587 N·m (432.95 lb ft)
Bolt (4) securing the engine block to the front axle	M20 x 1.5 x 110	587 N·m (432.95 lb ft)
Bolt (1) securing the gearbox to the engine block	M12 x 1.25 x 50	121 N·m (89.25 lb ft)
Bolt (2) securing the engine block to the gearbox	M12 x 1.25 x 50	121 N·m (89.25 lb ft)
Bolt (3) securing the engine block to the gearbox	M12 x 1.25 x 90	121 N·m (89.25 lb ft)

Engine - Remove

⚠ WARNING

Heavy objects!

Lift and handle all heavy components using lifting equipment with adequate capacity. Always support units or parts with suitable slings or hooks. Make sure the work area is clear of all bystanders. Failure to comply could result in death or serious injury.

W0398A

⚠ WARNING

Avoid injury!

Handle all parts carefully. Do not place your hands or fingers between parts. Use Personal Protective Equipment (PPE) as indicated in this manual, including protective goggles, gloves, and safety footwear.

Failure to comply could result in death or serious injury.

W0208A

Prior operation:

Hood - Remove (90.100)


Side panels - Remove (90.100)

Fender - Remove - Front (90.116)

Selective Catalytic Reduction (SCR) muffler and catalyst - Remove (10.500)


Cab and platform - Remove (90.150)

1. Position wooden wedges (1) between the front axle and the front axle support (2) to prevent articulation.

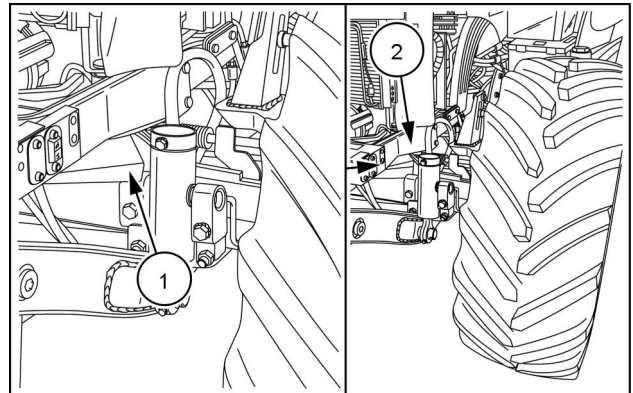


MOIL17TR00033AA 1

2. Position a container for transmission oil recovery under the transmission casing near the drain plug (1).
3. Remove the plug (1) and drain the transmission oil.

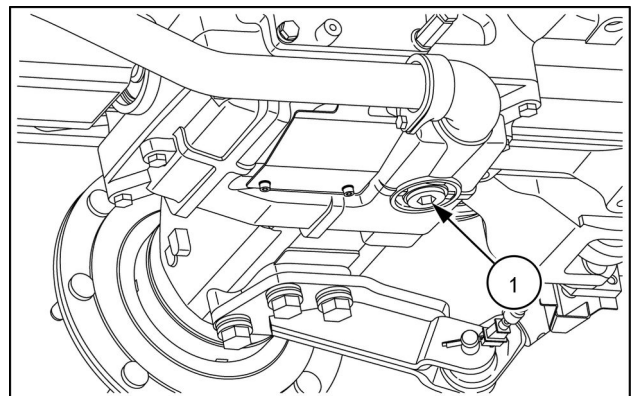


MOIL17TR00040AA 2

4. Disconnect the front lift coupling (1), if present.

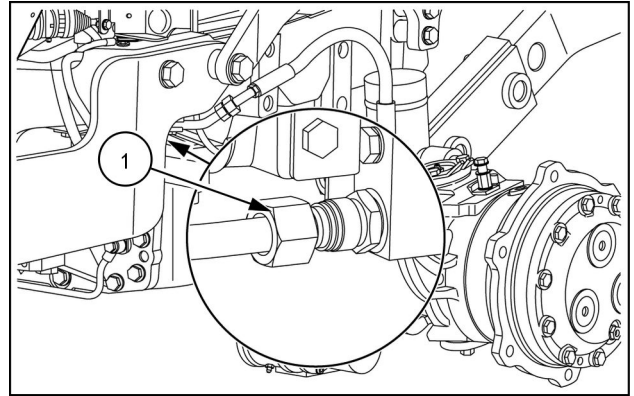


MOIL17TR00035AA 3

5. Remove both side members (1) of the front loader as described in **Front loader side member - Remove (82.100)**.

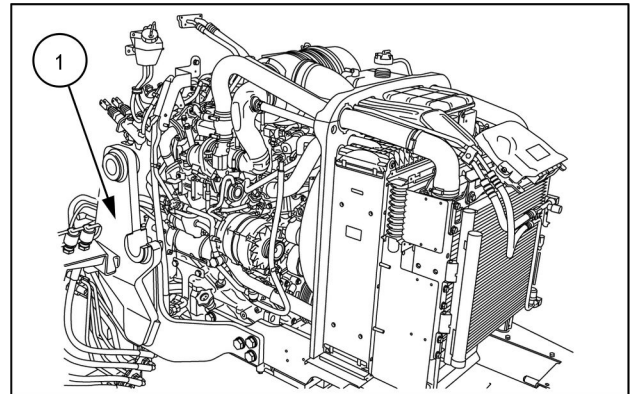


MOIL17TR02980AA 4

6. On the left-hand side of the engine, disconnect the steering cylinder control lines (1).

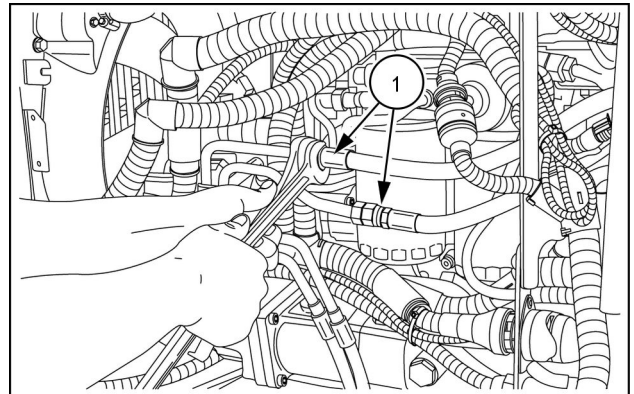


MOIL17TR00029AA 5

7. Disconnect the hydraulic couplings (3) on the capacitor (4) and loosen the screw (1) on the retaining clamp.
8. Disconnect the sensor wiring (2).

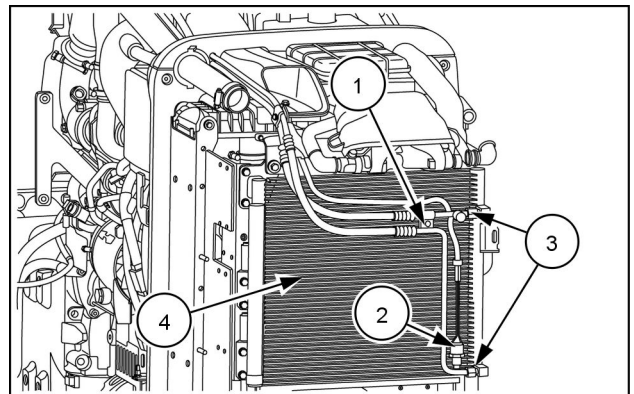


MOIL17TR00041AA 6

9. If present, loosen the retaining clamps (2) on the tubing (1).
10. Remove the pipe (1).

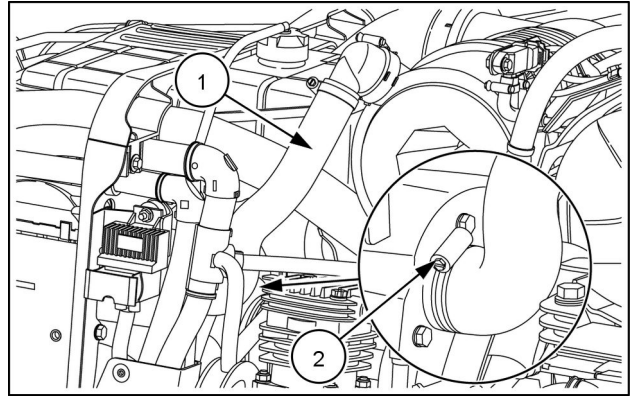


MOIL17TR00028AA 7

11. Loosen the retaining nut (1) on the locking bracket (2).
12. Remove the locking bracket (2).

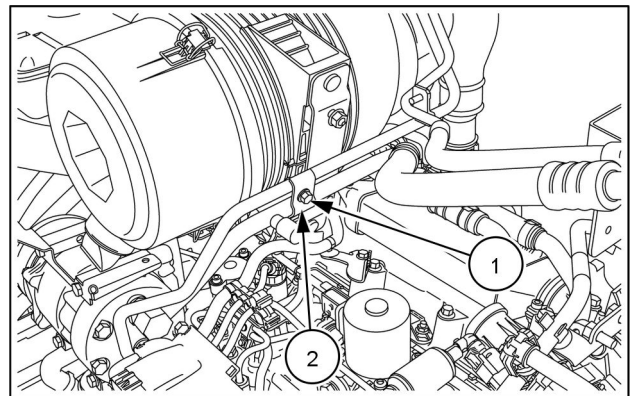


MOIL17TR02989AA 8

13. Disconnect couplings (1) and (2) of the air conditioning lines.

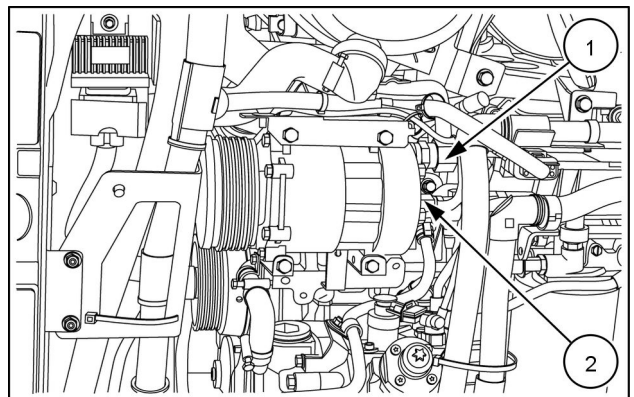

MOIL16TR02231AA 9

14. Remove the coupling (1) as described in **Air cleaner connection between filter and engine - Remove (10.202)**.

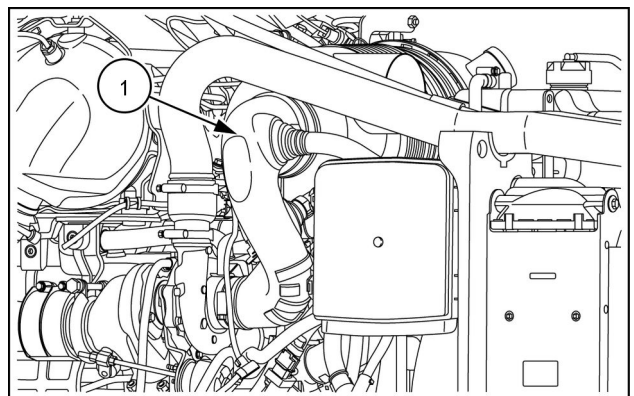

MOIL16TR03814AA 10




Suggest:

If the above button click is invalid.

**Please download this document
first, and then click the above link
to download the complete manual.**


Thank you so much for reading

15. Remove the air suction line **(1)** as described in **Air intake lines - Remove (10.202)**
16. Remove the air filter **(2)** as described in **Air cleaner - Remove (10.202)**

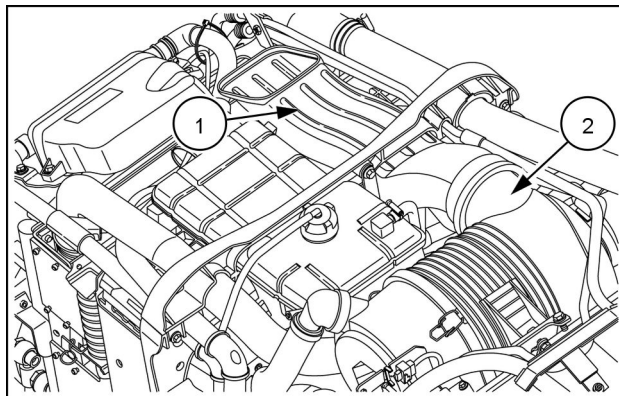


MOIL16TR03935AA 11

17. Loosen the retaining clamps **(1)** and disconnect the pipe from the turbine to the aftercooler radiator **(2)**.
18. Loosen the retaining clamps **(3)** and remove the pipe **(4)** between the aftercooler radiator and the engine.

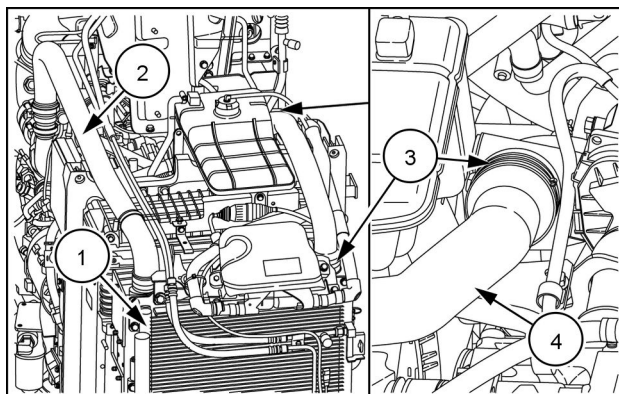


MOIL17TR00042AA 12

19. Loosen the retaining nuts **(1)** from the power distribution box **(2)**.
20. Move the distribution box and connected cables to the right-hand side of the radiator.

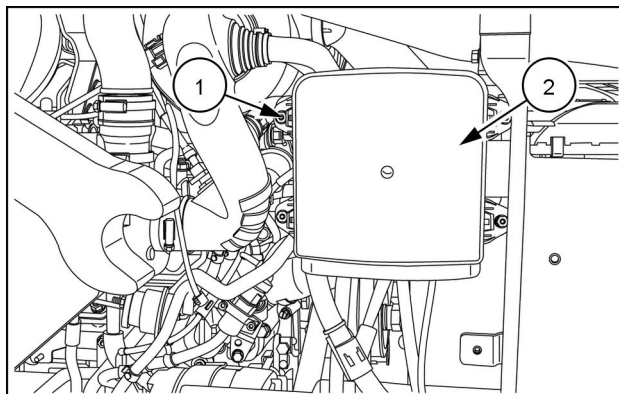

MOIL17TR00030AA 13

21. Disconnect the drain line **(3)** of the hydrostatic steering control valve.
22. Disconnect the power supply line **(1)** of the transmission control valve.
23. Remove the filter **(2)**, complete with support.

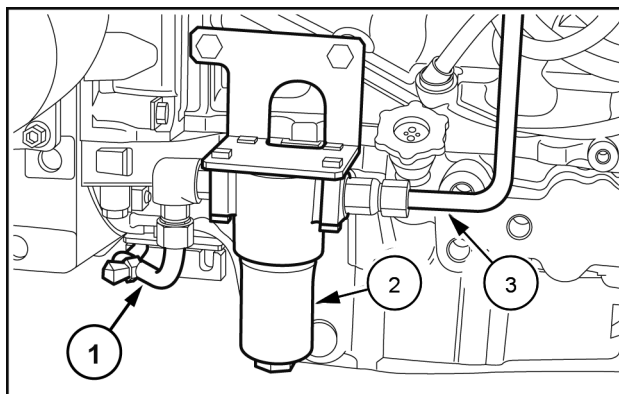

WLAPL4S10C126A 14

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>