

# SERVICE MANUAL


**T3010 / T3020 / T3030 T3040**  
Tractors

Print No. 84183229B





**NEW HOLLAND**

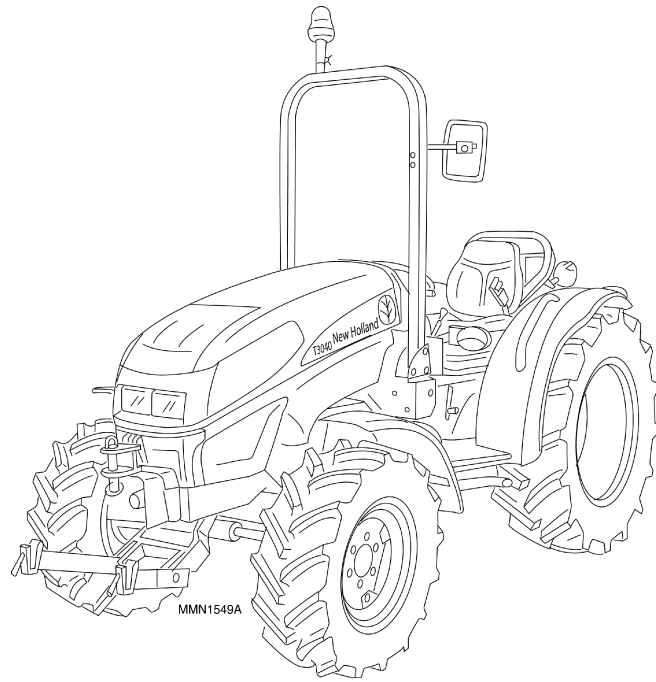

# **T3010 - T3020 - T3030 - T3040**

## **SERVICE MANUAL**

<b>SECTIONS</b>	
<b>SECTION GENERAL GUIDELINES</b> .....	<b>00</b>
<b>SECTION ENGINE</b> .....	<b>10</b>
<b>SECTION CLUTCH</b> .....	<b>18</b>
<b>SECTION TRANSMISSIONS</b> .....	<b>21</b>
<b>SECTION FRONT MECHANICAL TRANSMISSION</b> .....	<b>25</b>
<b>SECTION REAR MECHANICAL TRANSMISSION</b> .....	<b>27</b>
<b>SECTION POWER TAKE-OFF</b> .....	<b>31</b>
<b>SECTION BRAKES</b> .....	<b>33</b>
<b>SECTION HYDRAULIC SYSTEMS</b> .....	<b>35</b>
<b>SECTION STEERING</b> .....	<b>41</b>
<b>SECTION CAB AIR CONDITIONING SYSTEM</b> .....	<b>50</b>
<b>SECTION ELECTRICAL SYSTEM</b> .....	<b>55</b>
<b>SECTION CAB</b> .....	<b>90</b>

**T E C H N I C A L   S U P P O R T**

## INTRODUCTORY NOTES

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.  
For easy reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries.  
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

## IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.  
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS  
ARE THE PROPERTY OF NEW HOLLAND ITALIA S.p.A.

●  
No part of the text or illustrations  
may be reproduced

PRINTED IN ITALY

**CNH ITALIA S.p.A. - Viale delle Nazioni, 55 - 41100 MODENA - Italy**  
TECHNICAL SUPPORT - Technical Information  
Print No. **84183229A** - 01 - 2009

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

CONTENTS

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>			T3040 Engine removal-in-		
General instructions . . . . .	1-2	01-09	stallation . . . . .	35-36-37- 38-39	01-09
Safety regulations . . . . .	3-4	01-09	EGR system . . . . .	40-41-42- 43-44	01-09
Safety regulations . . . . .	5	01-09	Inspecting and cleaning		
Tractor refuelling . . . . .	6	01-09	EGR system components .	44-45-46	01-09
			For Safe Installation . . . . .	46	01-09
<b>10 - ENGINE</b>			Compression test . . . . .	47-48-49	01-09
<b>CHAPTER 1 - Engine</b>			Engine disassembly-as-		
Index . . . . .	1-2	01-09	sembly . . . . .	50-51-52- 53-54-55- 56-57-58- 59-60-61- 62-63-64- 65-66-67	01-09
General specifications . . . . .	3-4-5-6-7- -8	01-09	Valve clearance adjustment	68-69-70	01-09
Engine lubrication circuit			Belt tension check . . . . .	71	01-09
data . . . . .	9	01-09	Injectors and injection jet		
Engine cooling circuit data	9	01-09	pressure check and reading	72-73-74- 75	01-09
Torque Values . . . . .	10	01-09	Injection timing adjustment		
Tools . . . . .	11	01-09	and check . . . . .	75-76-77	01-09
Cross-sectional views of			Idle speed regulation (mini-		
engine . . . . .	12-13	01-09	imum and maximum) . . . . .	77	01-09
Cross-sectional views of in-			Cooling and radiator system		
jection pump . . . . .	14-15	01-09	check . . . . .	77	01-09
Cross-sectional views of			Sensor check . . . . .	78	01-09
regulator . . . . .	16	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder head	79-80-81- 82-83-84- 85	01-09
fuel pump . . . . .	17	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder block		
cold starting aid . . . . .	18	01-09	and liners . . . . .	86-87-88	01-09
Cross-sectional views of			Checks, measurements		
turbocharger . . . . .	19	01-09	and repairs - rocker arm .	89-90	01-09
Engine lubrication circuit			Checks, measurements		
diagram . . . . .	20	01-09	and repairs - pistons and		
Engine cooling circuit dia-			piston rings . . . . .	91-92-93- 94-95	01-09
gram . . . . .	21	01-09	Checks, measurements		
Engine fuel circuit diagram	22	01-09	and repairs - connecting rod	95-96-97- 98	01-09
Troubleshooting . . . . .	23-24-25- 26-27-28- 29-30	01-09			
Engine removal-installation	31-32-33- 34	01-09			

	Page	Date		Page	Date
Checks, measurements and repairs – camshaft . . .	99-100	01-09	Sections . . . . .	4-5	01-09
Checks, measurements and repairs – crankshaft . .	101-102-103	01-09	Description and operation .	6	01-09
Checks, measurements and repairs – gears . . . . .	104-105	01-09	Troubleshooting . . . . .	6-7-8	01-09
Checks, measurements and repairs – oil pump . . . .	106-107	01-09	Removal-Installation – rear transmission – gearbox casing . . . . .	9-10	01-09
<b>Injection Pump</b>			Disassembly-Assembly – transmission-gearbox casing . . . . .	11-12-13-14-15-16-17-18-19	01-09
Removal-Installation – injection pump . . . . .	108-109	01-09	Transmission-gearbox casing adjustment . . . . .	20-21	01-09
Disassembly-Assembly – injection pump . . . . .	110-111-112-113-114-115-116-117-118-119-120-121-122-123-124-125-126-127-128-129-130	01-09	Disassembly-Assembly – clutch casing . . . . .	22-23-24-25-26-27	01-09
Plunger . . . . .			<b>25 - FRONT AXLE MECHANICAL TRANSMISSION</b>		
adjustment . . . . .	131-132	01-09	<b>CHAPTER 1 - Front axle mechanical transmission</b>		
<b>Turbocharger</b>			Specifications . . . . .	2	01-09
Disassembly- Assembly . .	133-134-135-136-137	01-09	Tools . . . . .	2	01-09
<b>18 - CLUTCH</b>			Torque settings . . . . .	3	01-09
General specifications . . . .	1	01-09	Sections . . . . .	4-5-6	01-09
Torque settings . . . . .	1	01-09	Description and Operation	7	01-09
Tools . . . . .	2	01-09	Troubleshooting . . . . .	8	01-09
Sections . . . . .	3	01-09	Removal-Installation – front axle . . . . .	9-10	01-09
Troubleshooting . . . . .	4-5	01-09	Removal-Installation – front axle differential and bevel drive support . . . . .	11-12	01-09
Removal-Installation – clutch . . . . .	6-7-8-9-10-11-12-13-14-15-16-17-18	01-09	Overhaul – front axle bevel drive . . . . .	13-14	01-09
Clutch adjustments . . . . .	19	01-09	Adjustments – bevel drive . . . . .	14-15-16-17-18	01-09
PTO clutch lever adjustment	20	01-09	Disassembly-Assembly – front differential lock device	19-20	01-09
<b>21 - TRANSMISSIONS</b>			Disassembly-Assembly – wheel hub . . . . .	21-22	01-09
<b>CHAPTER 1 - Mechanical transmission (12 + 12) and (16 + 16)</b>			Removal-Installation – front reduction unit . . . . .	23-24	01-09
Specifications . . . . .	1-2	01-09	Disassembly-Assembly – front reduction unit . . . . .	25-26-27-28-29	01-09
Torque settings . . . . .	2-3	01-09	Removal-Installation – axle steering cylinder . . . . .	30-31-32	01-09

	Page	Date
<b>27 - REAR MECHANICAL TRANSMISSION</b>		
Specifications .....	1	01-09
Torque settings .....	2-3	01-09
Tools .....	4	01-09
Sections .....	5-6	01-09
Description and Operation	7	01-09
Troubleshooting .....	7-8	01-09
Disassembly-Assembly - transmission-gearbox casing .....	9-10	01-09
Removal-Installation - right or left-hand final drive casing assembly .....	11-12-13-14-15-16	01-09
Disassembly-Assembly - drive wheel shaft. ....	17-18-19	01-09
Bevel drive adjustments ..	20-21-22-23-24	01-09

**31 - MECHANICAL POWER TAKE-OFF**

**CHAPTER 1 - Mechanical power take-off**

Specifications .....	1	01-09
Torque settings .....	2	01-09
Sections .....	3	01-09
Description and Operation	4-5-6	01-09
Troubleshooting .....	6-7	01-09
Disassembly-Assembly - mechanical power take-off	8-9-10	01-09

**33 - BRAKES**

Specifications .....	1	01-09
Torque settings .....	2	01-09
Sections .....	3	01-09
Description and Operation	4	01-09
Troubleshooting .....	5-6	01-09
Removal-Installation - right or left-hand brake .....	7-8	01-09
Adjustments .....	9-10-11	01-09

**35 - HYDRAULIC SYSTEMS**

**CHAPTER 1 - Rear mechanical hydraulic lift**

Tools .....	1	01-09
Specifications and data ...	2	01-09

	Page	Date
Hydraulic circuit diagram .	3	01-09
Using the control levers ..	4	01-09
Description and Operation	5-6-7-8-9-10-11-12	01-09
Check internal cap measurement .....	13	01-09
Check assembly of reaction springs .....	14	01-09
Removal-Installation of the hydraulic lift control valve .	15	01-09
Removal-Installation of the hydraulic lift .....	16	01-09
Hydraulic lift working pressure check .....	17	01-09

**CHAPTER 2 - Open centre system auxiliary control valves**

Specifications .....	1	01-09
Tools .....	1	01-09
Sections .....	2	01-09
Description and Operation	3-4-5-6	01-09

**41 - STEERING**

**CHAPTER 1 - Mechanical power take-off**

Specifications .....	2	01-09
Tools .....	2	01-09
Cross-sectional and exploded views .....	3-4	01-09
Description and Operation	5-6-7-8-9-10	01-09
Working pressure check ..	11	01-09

**50 - CAB AIR-CONDITIONING SYSTEM**

**CHAPTER 1 - Cab air-conditioning system**

Safety regulations .....	2	01-09
Operating instructions ....	3	01-09
Tools .....	4	01-09
General specifications ....	4	01-09
Operating principles .....	5	01-09
Conditioning system components .....	6-7-8-9-10	01-09
Cab controls .....	11-12-13-14-15	01-09
Testing operation and cooling .....	16-17	01-09

	Page	Date		Page	Date
Air conditioning system maintenance .....	18-19	01-09	Senders, Sensors and Switches .....	5-6-7-8-9-10-11	01-09
Troubleshooting .....	20-21-22-23	01-09	Instrument error indicator diagnostics table .....	12-13-14-15	01-09
Refrigerant recovery - recycling and evacuation - charging stations .....	24	01-09	Service .....	16	01-09
Checking for and eliminating any gas leaks .....	25-26	01-09	<b>CHAPTER 2 - Components</b>		
Compressor drive belt tension adjustment .....	27	01-09	Description of components	1-2-3	01-09
Cab heating/air-conditioning system. Removal - Installation .....	28-29-30-31-32-33	01-09	Service .....	4-5-6	01-09
<b>50 - CAB AIR-CONDITIONING SYSTEM</b>			<b>CHAPTER 3 - Starting System</b>		
<b>CHAPTER 2 - Cab air-conditioning system (valid from chassis no. HSSN19539)</b>			Technical data .....	1	01-09
Safety regulations .....	2	09-11	Description and Operation	2	01-09
Operating instructions ....	3	09-11	Troubleshooting .....	3-4	01-09
Tools .....	4	09-11	System testing .....	5-6	01-09
General specifications ....	4	09-11	Removal-Installation - starter motor .....	7	01-09
Operating principles ....	5	09-11	<b>CHAPTER 4 - Charging system</b>		
Conditioning system components .....	6-7-8-9-10	09-11	Technical data .....	1	01-09
Cab controls .....	11-12-13-14-15	09-11	Description and Operation	2-3	01-09
Testing operation and cooling .....	16-17	09-11	System testing and troubleshooting .....	4-5-6-7	01-09
Air conditioning system maintenance .....	18-19	09-11	Removal-Installation - alternator .....	8	01-09
Troubleshooting .....	20-21-22-23	09-11	<b>CHAPTER 5 - Battery</b>		
Refrigerant recovery-recycling and evacuation-charging stations .....	24	09-11	Technical data .....	1	01-09
Checking for and eliminating any gas leaks .....	25-26	09-11	Description and Operation	1	01-09
Compressor drive belt tension adjustment .....	27	09-11	Removal-Installation - battery .....	2	01-09
Cab heating/air-conditioning system. Removal - Installation .....	28-29-30-31-32-33-34	09-11	Battery checking and maintenance .....	3	01-09
<b>55 - ELECTRICAL SYSTEM</b>			Battery charging .....	4-5-6	01-09
<b>CHAPTER 1 - Instruments</b>			Battery troubleshooting ...	6	01-09
Analogue instrumentation .	1-2-3-4	01-09	<b>CHAPTER 6 - Electrical circuits (models T3010-T3020-T3030)</b>		
			Index .....	1	01-09
			Electrical circuits components .....	2-3-4	01-09
			Location of main connections and fuse box. ....	5	01-09
			Location of fuses and relays	6-7-8-9-10	01-09
			Symbols and colour codes	9-10	01-09

	Page	Date		Page	Date
Main wiring and electrical circuits .....	13-14-15- 16-17-18- 19-20-21- 22-23-24- 25-26-27- 28	01-09 01-09 01-09 01-09 01-09 09-11	Location of components ..	13-14	01-09
			Symbols and codes .....	15-16	01-09
			Air-conditioner - radio - window-washer circuit ...	18-19-20- 21-22-23- 24-25	01-09
			Work lights - rotating bea- con - internal lighting - rear window wiper circuit .....	26-27-28- 29-30-31- 32	01-09
<b>CHAPTER 7 - Electrical circuits (model T3040)</b>			<b>CHAPTER 9 - Wiring Harnesses and Connectors</b>		
Index .....	1	01-09	Index .....	1	01-09
Electrical circuit compo- nents .....	2-3-4	01-09	Electrical circuit compo- nents .....	2-3-4-5	01-09
Location of main connec- tions and fuse box .....	5-	01-09	Harnesses .....	6-7-8-9	01-09
Location of fuses and relays	6-7-8	01-09	List of connectors .....	10-11-12- 13-14-15- 16-17-18- 19-20-21- 22-23-24- 25-26-27- 28-29-30- 31-32-33- 34-35-36- 37-38-39- 40-41-42	01-09
Symbols and colour codes	9-10	01-09			
Main wiring and electrical circuits .....	11-12-13- 14-15-16- 17-18-19- 20-21-22- 23-24-25- 26-27-28- 29- 30	01-09 01-09 01-09 01-09 01-09 01-09 01-09 09-11			
<b>CHAPTER 8 - Cab electrical components</b>					
Index .....	1	01-09			
Cab controls .....	2-3-4	01-09			
Fuses and relays .....	5-6	01-09			
Air-conditioner controls ..	7	01-09			
Components outside the cab .....	8-9-10	01-09			
Electrical circuits compo- nents .....	11	01-09			

	Page	Date		Page	Date
<b>CHAPTER 10 - Cab electrical components (from chassis no. HSSN19539)</b>			<b>90 - PLATFORM, CAB, BODYWORK</b>		
Contents .....	1	09-11	Hood. Removal - Installation .....	2	01-09
Cab controls .....	2-3-4	09-11	Right/left-hand side panels. Removal - Installation ....	3	01-09
Fuses and relays .....	4-5	09-11	Instrument panel lower guard. Removal - Installation .....	4-5	01-09
Air-conditioner controls ..	6	09-11	Cab assembly with platform. Removal - Installation ....	6-7-8-9- 10-11-12- 13-14	01-09
Components outside the cab .....	7-8-9	09-11	Replacing windows (up to and excluding chassis no. HSSN19539) .....	15-16-17- 18-19-20	01-09
Electrical circuits compo- nents .....	10	09-11	Replacing windows (from chassis HSSN19539 on- wards) .....	21-22-23- 24-25-26	09-11
Location of components ..	11-12	09-11			
Symbols and codes .....	13-14-15	09-11			
Work lights circuit - internal lighting - windshield wa- shers (Diagram A) .....	16-17	09-11			
Air-conditioner - radio - windshield wiper circuit ...	18-19	09-11			
Connectors .....	21-22-23- 24-25-26- 27-28-29- 30	09-11			

## GENERAL INSTRUCTIONS

### IMPORTANT NOTICE

All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary. Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.

### BATTERY

Before carrying out any kind of service operations, disconnect and isolate the battery negative lead, unless otherwise requested for specific operations (e.g.: operations that require the engine running). Once the specific operation has been completed, disconnect the lead in order to complete the operation.

### SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorder values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated for each on shim.

### ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes;
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged;
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal;
- coat the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease;
- insert the seal in its seat and press down using a flat punch; do not tap the seal with a hammer or mallet;
- whilst inserting the seal, check that it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required;
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations.

### O-RING "SEALS"

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

### SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces marked with an X: RTV SILMATE, RHO-DORSIL CAF 1 or LOCTITE PLASTIC GASKET.

Before applying the sealing compound, prepare the surfaces as follows:

- remove any incrustations using a wire brush;
- thoroughly de-grease the surfaces using one of the following cleaning agents: trichlorethylene, petrol or a water and soda solution.

### BEARINGS

When installing bearings it is advised to:

- heat the bearings to 80 ÷ 90 °C before fitting on the shafts;
- allow the bearings to cool before installing them from the outside.


### SPRING PINS

When fitting split socket elastic pins, ensure that the pin notch is positioned in the direction of the force required to stress the pin.

Spiral spring pins do not require special positioning.

## SPARE PARTS

Only use original NEW HOLLAND spare parts bearing the logo shown below.

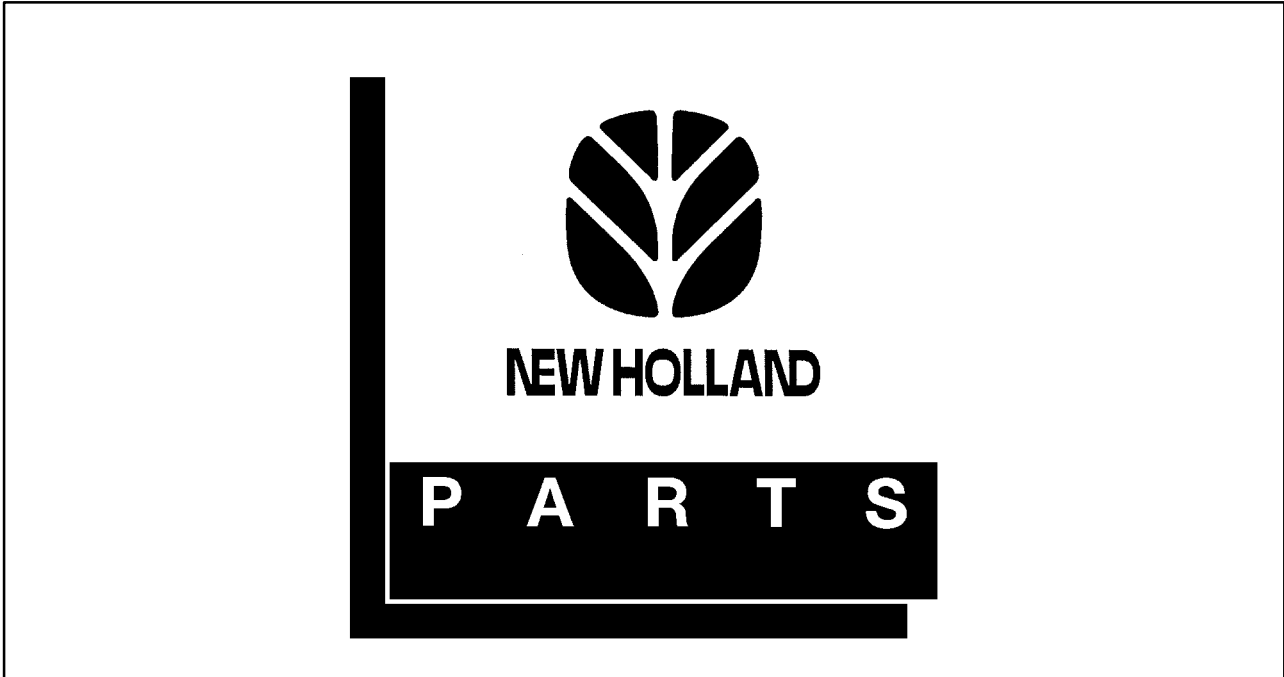

1

Only original spare parts guarantee the same quality, duration and safety as they are the same parts that are assembled during production.

Only **original NEW HOLLAND spare parts** can offer this guarantee.

When ordering spare parts, always provide the following information:

- vehicle model (commercial name) and frame number;
- engine type and number;
- part number of the ordered part, which can be found in the "Microfiches" or the "Spare Parts Catalogue", used for order processing.

## TOOLS

The tools that NEW HOLLAND propose and illustrate in this manual are:

- specifically researched and designed for use with NEW HOLLAND vehicles;
- essential for reliable repair operations;
- accurately built and rigorously tested so as to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- operating in optimal technical conditions;
- obtaining the best results;
- saving time and effort;
- working in safe conditions.

## CAUTION

Wear limit values indicated for certain parts are recommended, but not binding. The terms "front", "rear", "right-hand" and "left-hand" (when referred to different parts) are intended as seen from the driving position with the vehicle in the normal direction of movement.

## MOVING THE TRACTOR WITH THE BATTERY REMOVED

External power supply cables should only be connected to the respective positive and negative cable terminals, using efficient clamps that guarantee adequate and secure contact.

Disconnect all services (lights, work lights, etc.) before starting the vehicle.

If the vehicle electrical system requires checking, carry out operations with the power supply connected; once checking is completed, disconnect all services and switch off the power supply before disconnecting the cables.

## SAFETY REGULATIONS

### WARNING AND DANGER SYMBOL

This warning symbol points out important messages concerning your safety.

Carefully read the following safety regulations and observe advised precautions in order to avoid potential hazards and safeguard your health and safety. In this manual the symbol is accompanied by the following key-words:

**CAUTION** - Warnings concerning unsuitable repair operations that may jeopardise the safety of Service personnel.

**DANGER**- Specific warnings concerning potential hazards for operator safety or for other persons directly or indirectly involved.



2

### ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non-observance of simple and fundamental safety regulations. For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of vehicles, regardless of how well it was designed and built.

A careful and judicious service technician is the best guarantee against accidents.

Precise observance of the most basic safety rule is normally sufficient to avoid many serious accidents.

**DANGER.** Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

### SAFETY REGULATIONS

#### GENERAL GUIDELINES

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts. It is advised to wear approved safety clothing, e.g.: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.

- Do not operate the vehicle or use any of the implements from different positions, other than the driver's seat.
- Do not carry out operations on the vehicle with the engine running, unless specifically indicated.
- Stop the engine and check that the hydraulic circuits are pressure-free before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in the workshop or elsewhere should be built according to standard accident prevention regulations.
- Disconnect the batteries and label all controls to indicate that the vehicle is being serviced. Any parts that are to be raised must be locked in position.
- Do not check or fill fuel tanks, accumulator batteries, nor use starting liquid when smoking or near naked flames, as these fluids are inflammable.
- Brakes are inoperative when manually released for repair or maintenance purposes. Use blocks or similar devices to control the machine in these conditions.
- The fuel nozzle should always be in contact with the filling aperture. Maintain this position until filling operations are completed in order to avoid possible sparks caused by the accumulation of static electricity.

- Only use specified towing points for towing the tractor. Connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction. Never remain near the towing bars, cables or chains that are operating under load.
  - Transport vehicles that cannot be driven using a trailer or a low-loading platform trolley, if available.
  - When loading or unloading the vehicle from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels. Firmly secure the tractor to the truck or trailer and lock the wheels in the position used by the carrier.
  - Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
  - Always use suitable hoisting or lifting devices when raising or moving heavy parts.
  - Take extra care if bystanders are present.
  - Never pour gasoline or diesel oil into open, wide or low containers.
  - Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-inflammable, non toxic commercially available solvents.
  - Wear safety goggles with side guards when cleaning parts with compressed air.
  - Limit the air pressure to a maximum of 30.45 psi (2.1 bar), according to local regulations.
  - Do not run the engine in confined spaces without suitable ventilation.
  - Do not smoke, use naked flames, or cause sparks in the area when fuel filling or handling highly inflammable liquids.
  - Never use naked flames for lighting when working on the machine or checking for "leaks".
  - All movements must be carried out carefully when working under, on or near the vehicle. Wear protective equipment: helmets, goggles and special footwear.
  - When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
  - If operating outside the workshop, position the vehicle on a flat surface and lock in position. If working on a slope, lock the vehicle in position. Move to a flat area as soon as is safely possible.
  - Damaged or bent chains or cables are unreliable. Do not use them for lifting or towing. Always use suitable protective gloves when handling chains or cables.
  - Chains should always be safely secured. Make sure that the hitch-up point is capable of sustaining the load in question. Keep the area near the hitch-up point, chains or cables free of all bystanders.
  - Maintenance and repair operations must be carried out in a CLEAN and DRY area. Eliminate any water or oil spillage immediately.
  - Do not create piles of oil or grease-soaked rags as they represent a serious fire hazard. Always store rags in a closed metal container. Before starting the vehicle or implements, make sure that the driver's seat is locked in position. Also check that there are no persons within the tractor or implement range of action.
  - Empty pockets of all objects that may fall unobserved into the vehicle parts.
  - In the presence of protruding metal parts, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
  - When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles. NEVER LOOK DIRECTLY AT THE WELDING ARC WITHOUT SUITABLE EYE PROTECTION.
  - Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.
  - Handle all parts carefully. Do not put your hands or fingers between moving parts. Wear suitable safety clothing - safety goggles, gloves and shoes.
- START UP**
- Never run the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
  - Never place the head, body, limbs, feet, hands or fingers near fans or rotating belts.

## SECTION 10 - ENGINE

### Chapter 1 - Engine (TIER 3)

#### CONTENT

Section	Description	Page
<b>10 000</b>	General specifications .....	3
	Main data .....	9
	Torque settings .....	16
	Tools .....	17
	Sections .....	18
	Lubrication, cooling and fuel system diagrams .....	26
	Engine troubleshooting .....	29
<b>10 001 10</b>	Engine .....	37
	- Removal-Installation .....	37
<b>10 001 30</b>	- Compression test .....	41
<b>10 001 54</b>	- Disassembly-Assembly .....	44
	Valve clearance adjustment (T3010-T3020-T3030) .....	62
	Valve clearance adjustment (T3040) .....	63
	Belt tension check .....	65
	Injectors and injection jet pressure check and reading .....	66
	Injection timing adjustment and check .....	69
	Idle speed adjustment (minimum and maximum) .....	71
	Checking the cooling system and radiator for leaks .....	71
	Sensors check .....	72
	Checks, dimensions and repairs - cylinder head .....	73
	Checks, dimensions and repairs - block and cylinder linings .....	80
	Checks, dimensions and repairs - rocker arm .....	83
	Checks, dimensions and repairs - pistons and snap rings .....	85
	Checks, dimensions and repairs - connecting rod .....	89
	Checks, dimensions and repairs - camshaft .....	93

Checks, dimensions and repairs – crankshaft .....	95
Checks, dimensions and repairs – gears .....	98
Checks, dimensions and repairs – oil pump .....	100
Injection pump .....	102
- Removal – Refitting. ....	102
- Disassembly – Assembly .....	104
Plunger position adjustment .....	125
Turbocharger .....	127
- Disassembly – Assembly .....	127

GENERAL SPECIFICATIONS	T3010
<b>Engine</b>	
- Initial .....	3TNV88-KLAN
- Manufacturer .....	Yanmar
Cycle .....	Diesel, 4-stroke
Direct .....	Injection
Number of cylinders .....	3
Fuel system .....	Natural
Cylinder liners .....	In cylinder block
Bore ..... (mm)	88
Stroke ..... (mm)	90
Total displacement ..... (cm <sup>3</sup> )	1642
Firing order .....	1 - 3 - 2
Compression ratio .....	19.1:1
ISO power output ..... (Kw/CV)	26(35.5)
Maximum power speed ..... (rpm)	2800
Maximum no-load speed ..... (rpm)	3000 to 3050
Maximum torque ..... (Nm)	108.5
Maximum torque speed ..... (rpm)	1200
Slow idle speed ..... (rpm)	1000
Direction of rotation .....	Anticlockwise (as seen from flywheel)
Number of main bearings .....	4
Recommended diesel fuel .....	ISO 8217 DMA, BS 2869 A1 or A2 (cetane No.: 45 min)
Lubrication system .....	Forced lubrication with trochoid pump
Lubrication oil tank capacity ..... (l)	6.7
Recommended lubrication oil .....	AMBRA SUPER GOLD
Cooling System .....	Coolant/Radiator
Coolant tank capacity ..... (l)	2.0
Cooling fan .....	6-blade fan, Ø 335 mm
Regulator .....	Mechanical centrifuge-type (all speeds)
Ignition system .....	Electric

(continued)



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

GENERAL SPECIFICATIONS	T3020
<b>Engine</b>	
- Initial .....	4TNV84/KLAN
- Manufacturer .....	Yanmar
Cycle .....	Diesel, 4-stroke
Direct .....	Injection
Number of cylinders .....	4
Fuel system .....	Natural
Cylinder liners .....	In cylinder block
Bore ..... (mm)	84
Stroke ..... (mm)	90
Total displacement ..... (cm <sup>3</sup> )	1995
Firing order .....	1 - 3 - 4 - 2
Compression ratio .....	19.1:1
ISO power output ..... (Kw/CV)	32(44)
Maximum power speed ..... (rpm)	2800
Maximum no-load speed ..... (rpm)	3000 to 3050
Maximum torque ..... (Nm)	129
Maximum torque speed ..... (rpm)	1400
Slow idle speed ..... (rpm)	1000
Direction of rotation .....	Anticlockwise (as seen from flywheel)
Number of main bearings .....	5
Recommended diesel fuel .....	ISO 8217 DMA, BS 2869 A1 or A2 (cetane No.: 45 min)
Lubrication system .....	Forced lubrication with trochoid pump
Lubrication oil tank capacity ..... (l)	7.4
Recommended lubrication oil .....	AMBRA SUPER GOLD
Cooling System .....	Coolant/Radiator
Coolant tank capacity ..... (l)	2.7
Cooling fan .....	6-blade fan, Ø 370 mm
Regulator .....	Mechanical centrifuge-type (all speeds)
Ignition system .....	Electric

(continued)

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**