

**205 CORN
ATTACHMENT
FOR THE 40 COMBINE
(EFFECTIVE SERIAL
NO. 205-101)**



JOHN DEERE

OPERATORS MANUAL

205 CORN ATTACHMENT FOR THE 40
COMBINE (EFFECTIVE SERIAL NO.
205-101)

OMN84360 C0 English

OMN84360 C0

LITHO IN THE U.S.A.
ENGLISH



TO THE PURCHASER

This manual contains useful information on how to operate your new John Deere 205 Corn Attachment.

A corn attachment must be built to handle a wide range of conditions. Average conditions can be handled by the 205 Corn Attachment with regular equipment. Unusual conditions can be handled by installing special equipment.


Field conditions vary from year to year, from day to day, and even from hour to hour. Different varieties of corn present widely different picking problems. A careful study of adjustments on your corn attachment and what they accomplish under varying conditions will allow you to reap many benefits and economies that a corn attachment can provide.

Your new corn attachment will do quality work in direct proportion to the care you use in operating it. Operate and service the attachment according to the instructions in this manual.

If you need information not covered in this manual, see your John Deere dealer. He has the latest information on how to get the best service from your corn attachment and can give you prompt service in the field or in his shop.

When in need of parts, go to your John Deere dealer. He carries genuine John Deere parts for your 205 Corn Attachment.

Be prepared to give him the serial number of your corn attachment and the year purchased. This information should be recorded below on this page as soon as you have received your corn attachment.

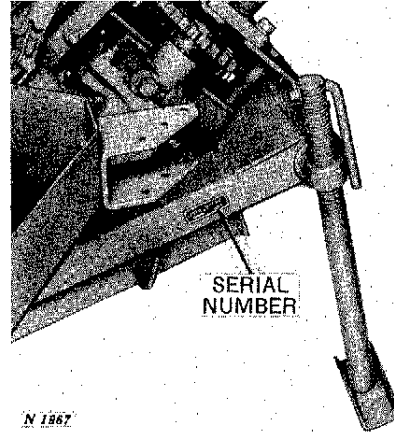

Serial Number.....

Date Purchased.....

You will find the serial number plate on the left-hand main frame as illustrated above.

CONTENTS

	Page
SPECIFICATIONS.....	4
LUBRICATION.....	5-7
OPERATION.....	8-17
General Instructions.....	8
Gatherers.....	9-11
Stalk Rolls.....	12
Trash Knives.....	12
Snapping Bar.....	13
Conveyor Augers and Trash Mover.....	14
Roller Chains.....	15
Slip Clutch.....	15
Safety Stand.....	16
Safety Suggestions.....	16
Suggested Combine Settings for Combining Corn.....	16
Combine Cylinder Speeds and Main Drive Sprockets.....	17
PICKING DIFFICULTIES.....	18-20
REMOVING CORN ATTACHMENT.....	21-22
INSTALLING CORN ATTACHMENT.....	23-26
SERVICE.....	27-28
ASSEMBLY.....	29-31

<https://www.ebooklibonline.com>


Hello dear friend!

Thank you very much for reading.


Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

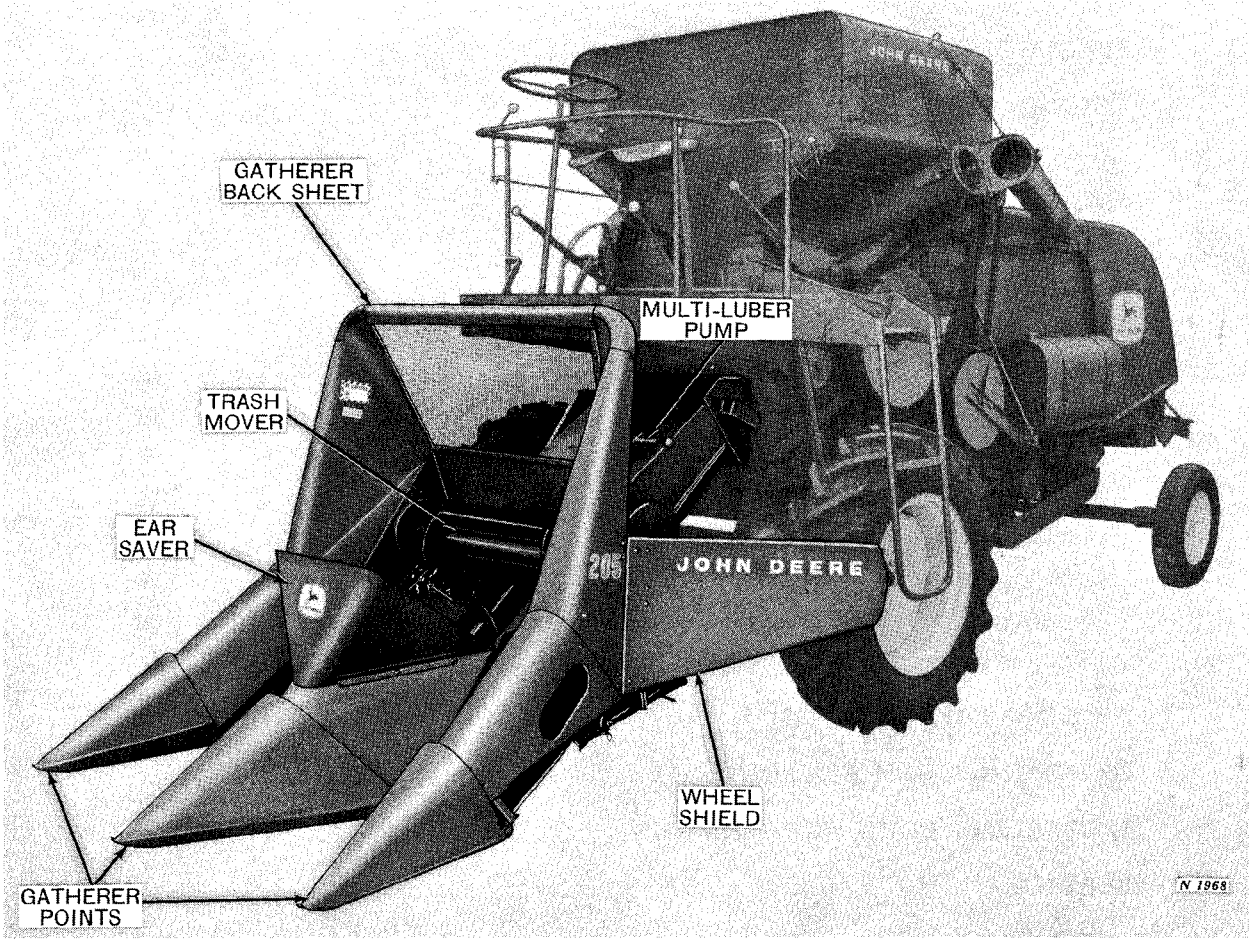

John Deere 205 Corn Attachment on 40 Self-Propelled Combine

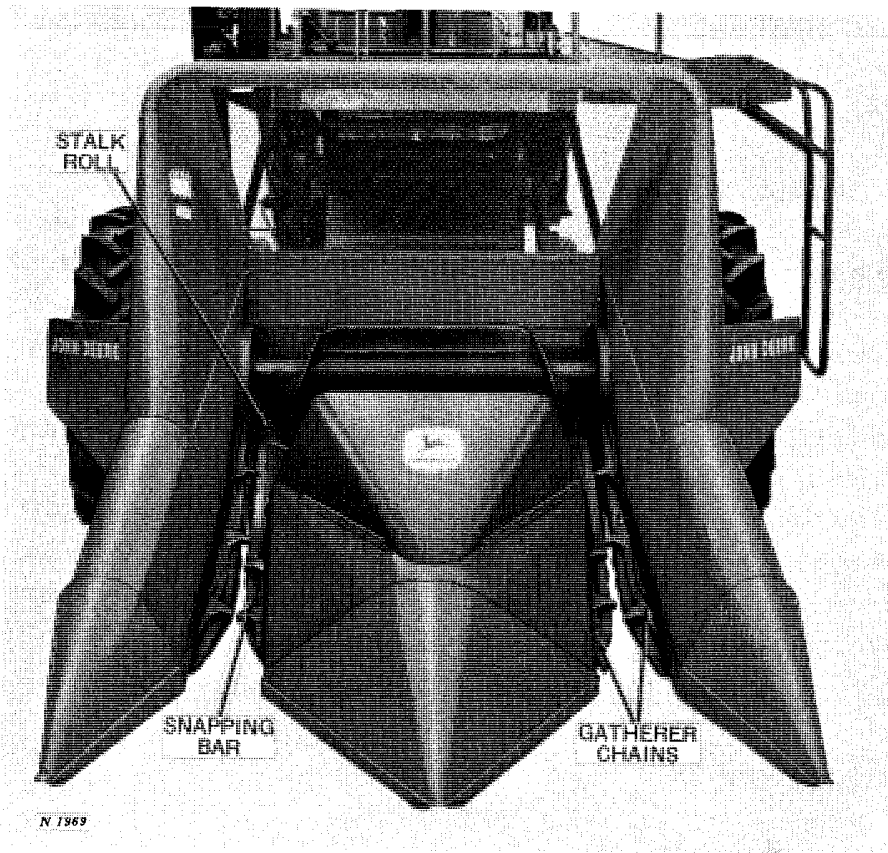

John Deere 205 Corn Attachment on 40 Self-Propelled Combine

SPECIFICATIONS

Number of Rows.....	2
Center-to-center distance between snapping units.....	40 inches
Row widths handled.....	38 to 42 inches
Gatherer points.....	Hinged above gatherer chains
Number of gatherer chains per snapping unit.....	2
Type of gatherer chains.....	Steel roller chain
Minimum clearance between gatherer chains and ground.....	0 inches and up
Distance gatherer chains ahead of fluted stalk rolls.....	8 inches
Length of fluted stalk rolls.....	27-1/2 inches
Fluted stalk roll adjustment.....	Adjusting nut
Snapping bar adjustment.....	Adjusting slots
Conveyor from gatherers to combine cylinder.....	Augers
Over-all width (storage).....	5 feet 4-1/2 inches
Over-all width with wheel shields.....	8 feet 6 inches
Over-all length (storage).....	9 feet 2 inches
Over-all length including combine.....	22 feet 10 inches

(Specifications and design subject to change without notice.)

LUBRICATION

The economical and efficient operation of any machine depends on regular and proper lubrication of all moving parts with a quality lubricant.

This is especially true of farm equipment which must operate in adverse conditions much of the time. Neglected lubrication quickly leads to reduced efficiency, heavy draft, wear, breakdown, and costly replacement of parts.

Regular and systematic lubrication is the best assurance against breakdown and delays. It will provide better service from your corn attachment and save on your repair bills.

OIL CAN POINTS

Lubricate all clevises, linkages, and other pivot and sliding parts once each day or every 10 hours of operation with SAE 30 engine oil.

CHAINS

Lubricate roller drive chains and gatherer chains daily with SAE 30 engine oil. Do not oil gathering chains when operating in extremely dusty or sandy conditions. Dust and sand will stick to the oiled chain and act as an abrasive.

CAUTION: Do not attempt to lubricate chains while corn attachment is running.

MACHINES WITH MULTI-LUBER QUIK-LUBE SYSTEM

The Multi-Luber Quik-Lube System on the 205 Corn Attachment provides a fast, convenient system for lubricating the machine.

The system consists of a reservoir, pump, feed lines, and connections. The reservoir is filled, and the system is primed and ready for operation when your new corn attachment is delivered.

Each outlet port on the pump is connected to a grease point by a separate shielded nylon feed line tube. The lubricant is metered at the pump so each bearing receives the same amount of lubricant under the same pressure.

RESERVOIR


The reservoir holds a supply of lubricant for approximately one week of normal operation. Check the reservoir periodically to be sure the lubricant is always available to the system. A dip stick in the top of the reservoir is provided for checking. Never let the system run dry.

Refill the reservoir with John Deere Quik-Lube lubricant. This lubricant can be purchased from your John Deere dealer in 32-ounce cans as part AN11100N.

PUMP

Depress the plunger handle manually to operate the Quik-Lube system. Move the plunger forward through all the ports so all points on the machine will be lubricated. The measuring plunger is filled from the reservoir as the spring-loaded plunger returns to its normal position. If the plunger stops going by all ports it is an indication of trouble. See page 27 for servicing the Multi-Luber Quik-Lube system.





OPERATION

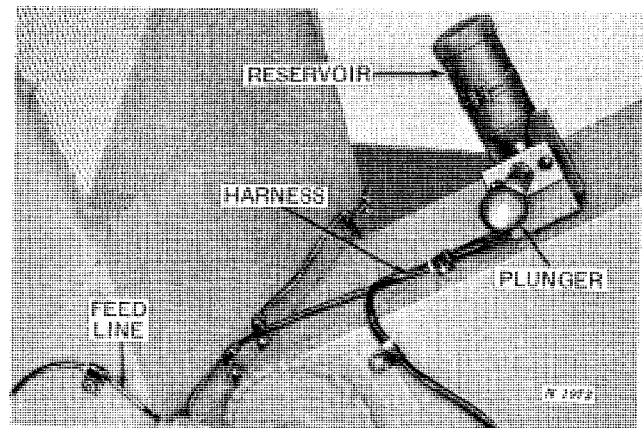

Lubricate the corn attachment by operating the plunger at least five times every two hours of operation. Be sure to press the plunger through all ports so all points on the machine will be lubricated.

MACHINES WITH MULTI-LUBER QUIK-LUBE SYSTEM—Continued

The grease fittings illustrated on this page require manual lubrication on corn attachments equipped with Multi-Lube Quik-Lube system.

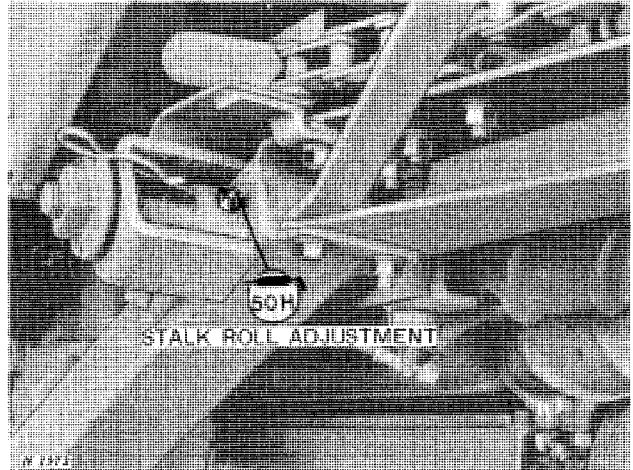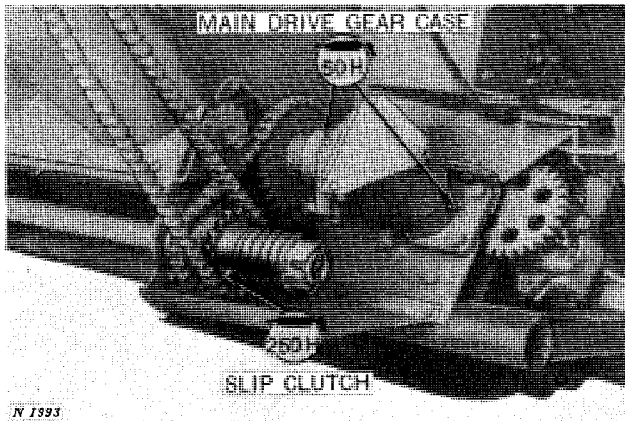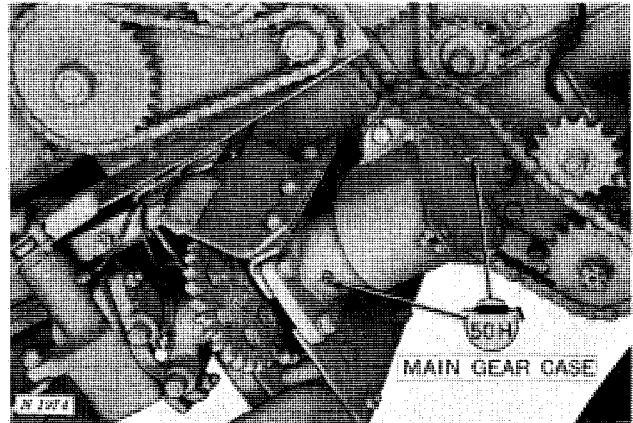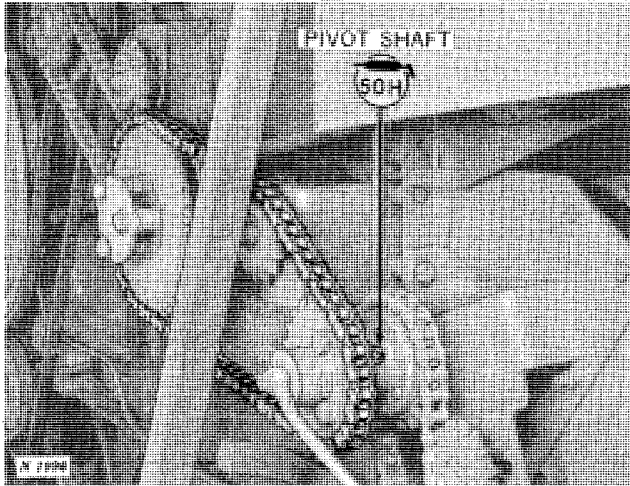

SYMBOLS









Lubricate with SAE multipurpose-type grease every 50 hours of operation.






Lubricate with SAE multipurpose-type grease every 250 hours of operation.

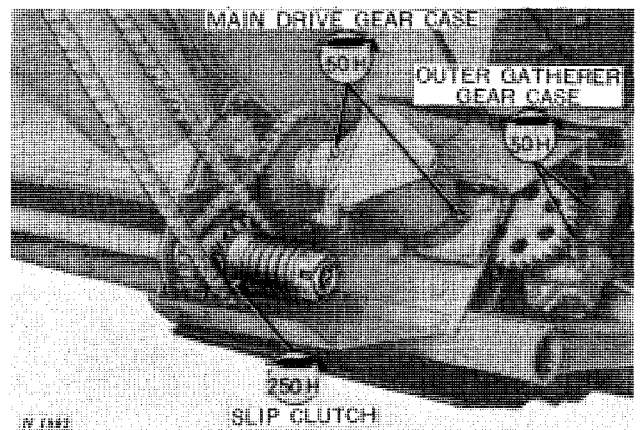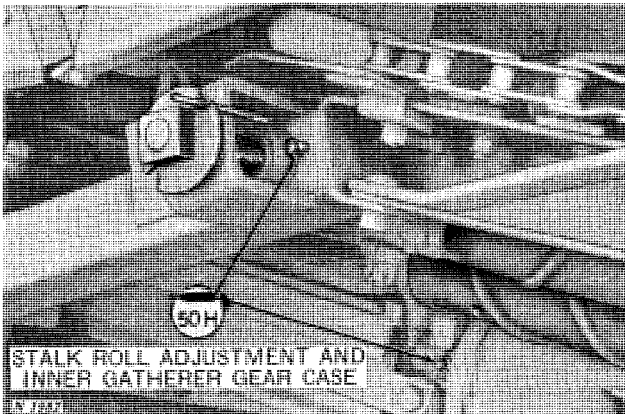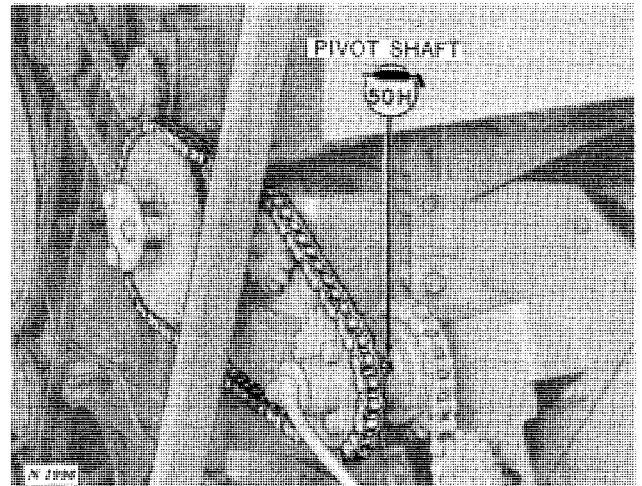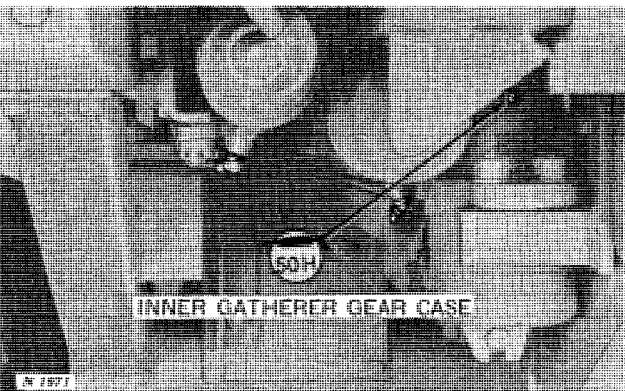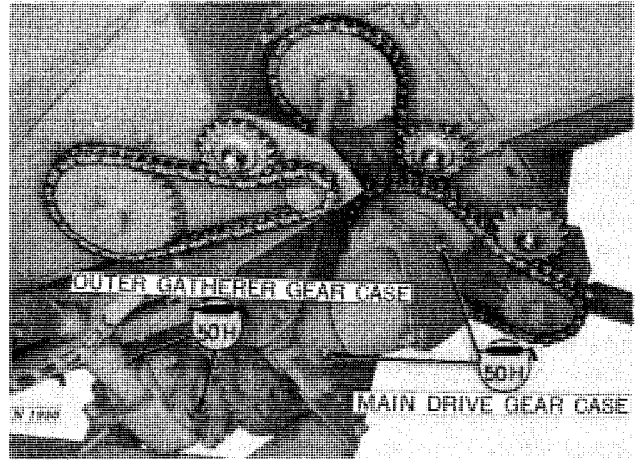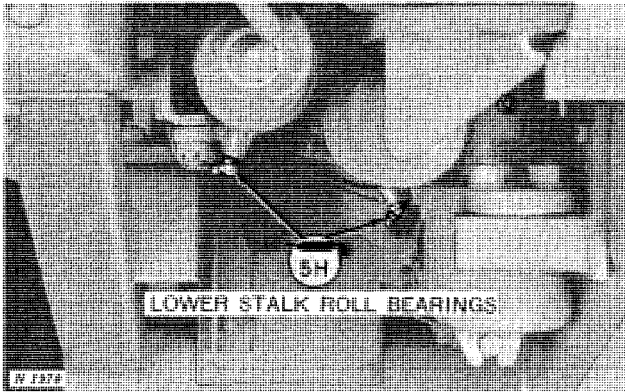MACHINES WITH GREASE FITTINGS



SYMBOLS

Lubricate with SAE multipurpose-type grease.

-  Every 5 hours of operation.
-  Every 50 hours of operation.
-  Every 250 hours of operation.

OPERATION

GENERAL INSTRUCTIONS

PROPER INSTALLATION

Improper installation of the corn attachment on the combine can cause inferior work and damage to the corn attachment.

Be sure the attachment is properly installed. After the corn attachment is completely installed on the combine, go back over the entire machine, to be sure shields, sprockets, chains, and other parts are properly attached and adjustments made as illustrated and directed.

Be sure all nuts, pins, and keys are tight, and cotter pins are spread.

IN THE FIELD

Successful operation, quality of work, and length of life of the John Deere 205 Corn Attachment depend largely on proper lubrication and wise use of adjustments built into the machine.

Harvest early to avoid troubles that accompany frozen ground, extremely cold weather, and dried-out, frozen, and rotten corn stalks.

Early harvest of corn at 25 to 30 per cent moisture content will minimize field losses from down stalks, ear drop, and shelling at the stalk rolls.

In average conditions, the corn attachment will do the best work when traveling at a medium rate of speed. Avoid excessive ground speed and combine cylinder speed.

Generally, a fast cylinder speed is recommended for wet corn, and a slower cylinder speed for dry corn.

Listen for slipping clutches and watch for deep furrows, rocks or other obstructions that the gatherer points might strike.

The combine should travel in the same direction that the field was last cultivated. Drive the combine carefully so the gatherer points will follow the

row. When crossing the end of the field, raise the gatherer points by tilting the corn attachment with the combine hydraulic system.



Do not use a cornstalk or stick to clean the stalk rolls of an ear or trash while corn attachment is in motion. If, for any reason, the corn attachment should become clogged, stop the combine engine and then remove obstacle from the machine. Keep hands completely away from the stalk rolls when the machine is running.



Never clean, lubricate or adjust the corn attachment or combine while either is running. Be sure to stop the combine engine. Too much care cannot be taken to keep hands and clothing away from all moving parts.

If trouble is experienced, determine where it exists before making adjustments. Make no slip clutch adjustments until all paint is worn off the slip clutch jaws and working parts are smooth.


Before putting corn attachment into the field for the first time, lubricate it thoroughly and operate slowly for ten minutes, making sure all parts are working freely. If there is no binding or heating of bearings, run at fast idle speed for about 10 minutes.

Go over the entire machine to be sure that all bolts are tight and lubricant is reaching all bearings. Be sure to check the tension of all chains.

Keep all nuts, pins, and keys tight. Keep cotter pins spread. Carry a wrench when lubricating machine so loose nuts and bolts may be tightened as they are discovered.

Take pride in doing the best work possible under all conditions. Follow the rows carefully; set gatherer points and tilt machine to pick up the down and leaning stalks; set stalk rolls so corn stalks are pulled down and corn snapped effectively at the stalk rolls. Handy adjustments are provided to meet various conditions. They are explained in this manual.

GATHERERS

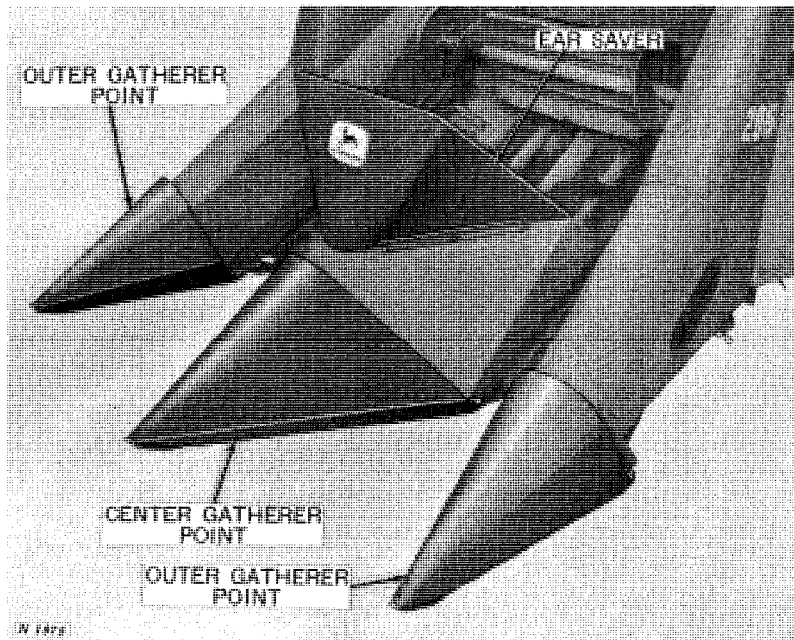

GATHERER POINTS


The gatherer points are hinged to follow the contour of the ground.

They can be raised and locked in any one of a number of positions with bolt "A." To obtain a fine adjustment reposition bolt "B" in one of the two holes in the front of the strap.

When picking corn, have the gatherer points just touching the ground. In muddy conditions or in snow, raise and lock the gatherer points high enough to prevent them from scooping material into the throat opening.

EAR SAVER

The ear saver is designed for picking in corn that is standing well. It can be removed for picking in down corn by taking out twelve machine bolts.

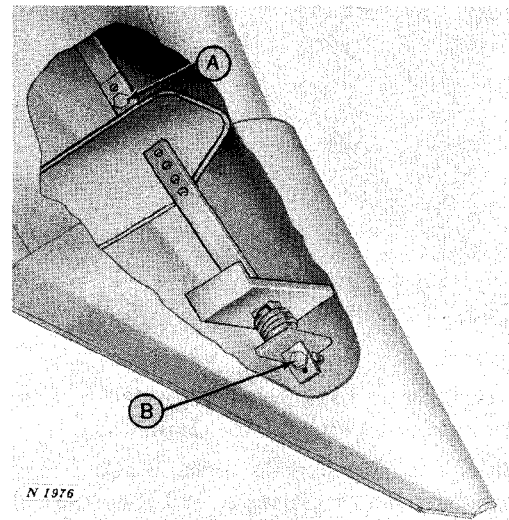

BE SAFE


It pays to be careful,

It costs to be careless!

GATHERER CHAINS

The gatherer chains run well beyond the points of the stalk rolls to pull corn stalks into the unit. The chains can be run touching the ground if necessary to bring low hanging ears and down stalks into the stalk rolls.

The gatherer chains should be lubricated at frequent intervals (except in dusty conditions) with SAE 30 motor oil.

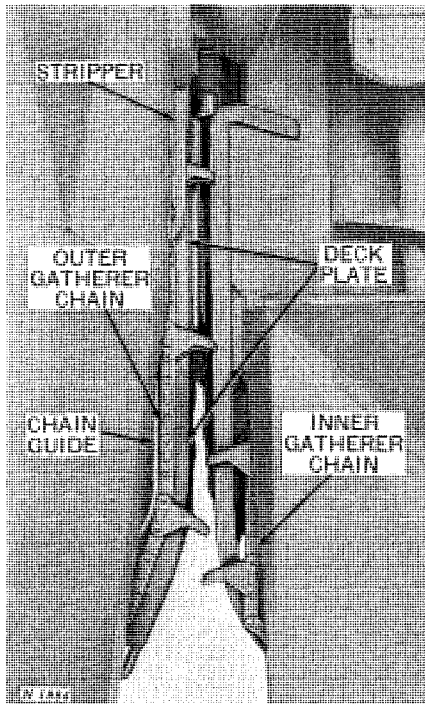


ADJUSTING STRIPPER AND UPPER GATHERER CHAIN GUIDE

Stripper

The stripper is used to strip material from the gatherer chain and to hold the chain down.

It should be adjusted so there is about 1/8-inch clearance between the stripper and the chain. Make the adjustment by loosening nuts "A" and moving stripper in the slots.

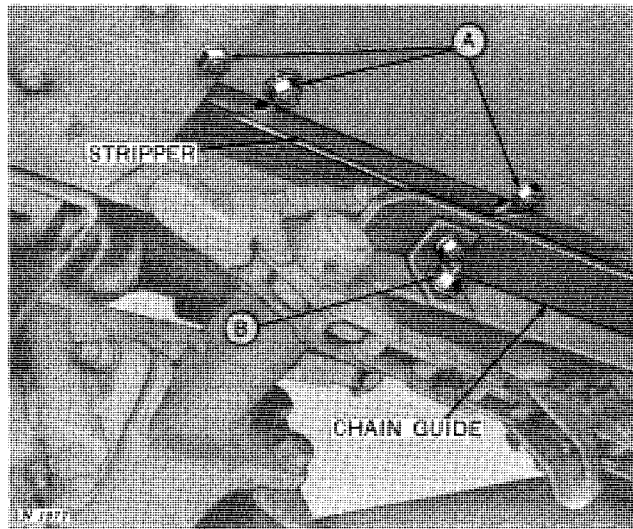

Chain Guide


In extremely wet or weedy conditions the stalk rolls will perform more efficiently if the upper chain guide is moved back away from the stalk rolls.

In exceptionally trashy conditions better picking will result if the upper chain guide is adjusted closer to the stalk rolls so the gatherer chain flights will carry the trash back to the snapping section of the stalk rolls.

Adjust chain guide by loosening nut "B" and moving chain guide.




ADJUSTING OUTER GATHERER CHAIN, LOWER CHAIN GUIDE, AND DECK PLATE

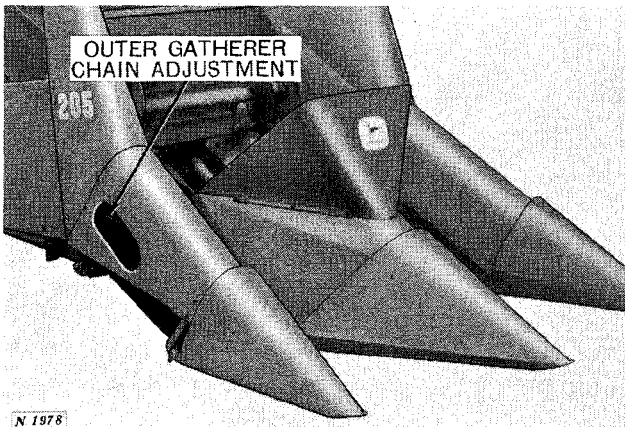

N 1978

A hole is provided in the outer gatherer sheet for access to the outer gatherer chain tightener, chain guide and deck plate.

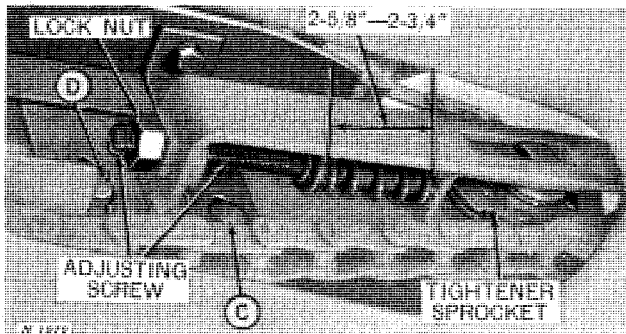

N 1978

Chain Tightener

To adjust outer gatherer chain, loosen lock nut and turn adjusting screw until spring length is 2-5/8 to 2-3/4 inches. Tighten lock nut to maintain the setting.

Chain Guide

In extreme conditions if the gatherer throat is clogging, the lower gatherer chain guide can be moved closer to the stalk roll points to drag the material past the throat.


Adjust the chain guide by loosening the nut on bolt "C" and sliding the chain guide in or out.

Deck Plate

The deck plate should be adjusted so the spirals and part of the barrel on the stalk roll point are exposed. If too much of the point is exposed the spirals will strike the deck plate.

To adjust deck plate, loosen nut on bolt "D" and slide plate until adjustment is obtained. Tighten nuts after all adjustments are made.

ADJUSTING INNER GATHERER CHAIN

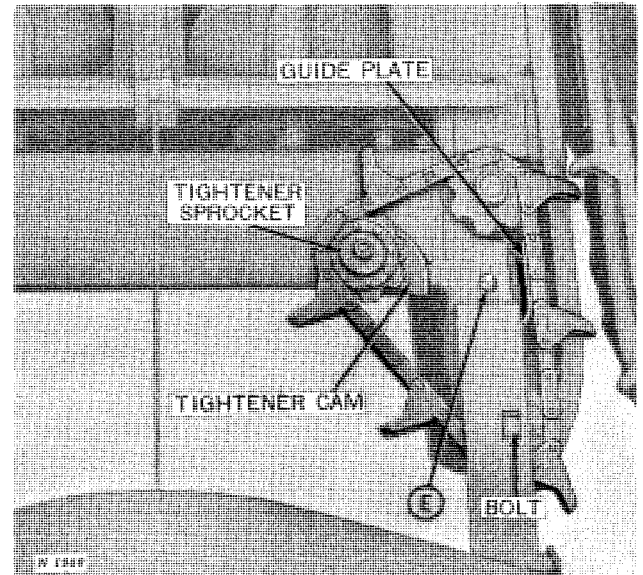

W 1888

Chain Tightener


To adjust the inner gatherer chain loosen the nut on the tightener sprocket and move tightener cam until the bolt is approximately in the center of the square slot. This allows the spring to keep a constant tightening pressure on the chain idler sprocket. (Center shield removed for purposes of illustration.)

Chain Guide

The guide can be moved out to obtain more aggressive action of the gatherer chain. To adjust chain guide, loosen nut on bolt "E" and slide guide until desired adjustment is obtained. Tighten nut after adjusting.

Keeping your equipment in proper adjustment will help to keep it operating efficiently and economically.

STALK ROLLS

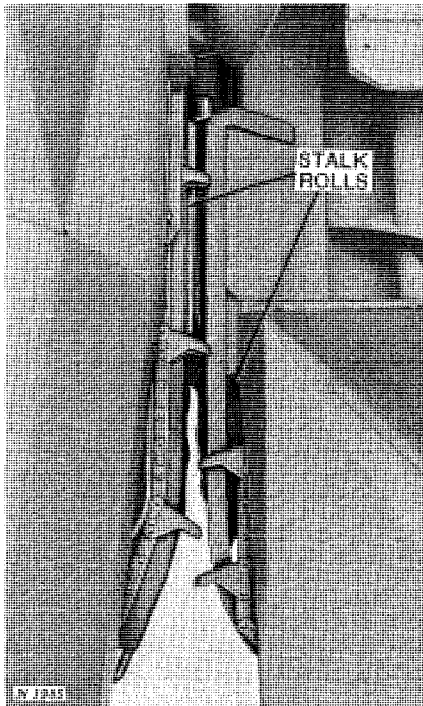

The fluted stalk rolls pull the corn stalks down so ears will be snapped at the snapping bar.


They have aggressive lugs and a pair of cams at the upper end to force tangled and delayed stalks through the upper end of the rolls.

The points of both rolls are carried close to the ground and are spiral ribbed. They assist in augering the corn safely into the rolls.

ROLL SPACING ADJUSTMENT


When corn is damp or wet and hard to snap, the rolls should be run close together, but not touching. When corn is dry or frozen, run the rolls farther apart.

The spacing of the stalk rolls is changed by an adjusting nut that moves the outer roll in or out.

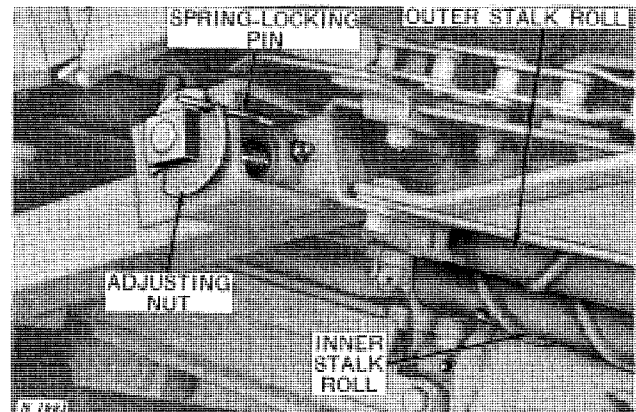

To adjust the roll spacing, remove the spring-locking pin and turn the adjusting nut clockwise to open the rolls or counter-clockwise to close the rolls.

TRASH KNIVES

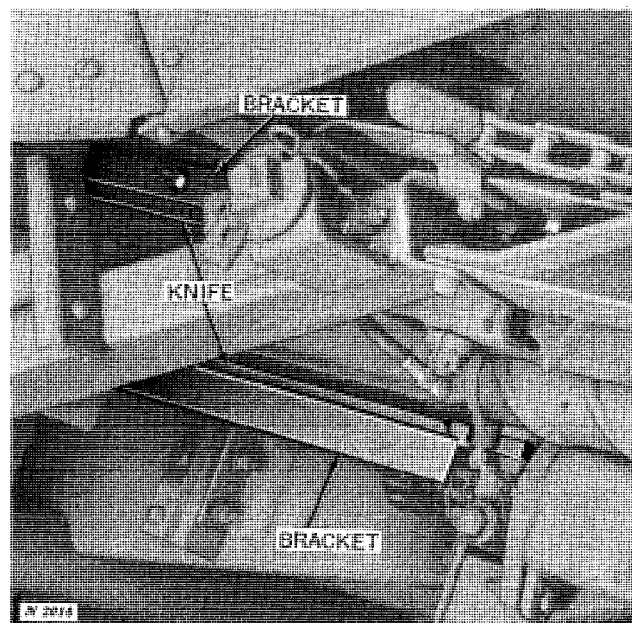

Trash knives can be installed as special equipment (See page 31), to prevent weeds and trash from wrapping around the stalk rolls.

The knives should be set as close to the stalk rolls as possible without striking the flutes.

The trash knives can be adjusted closer or farther from the rolls by using shims between the knife and the bracket.



Suggest:

If the above button click is invalid.


Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

SNAPPING BAR

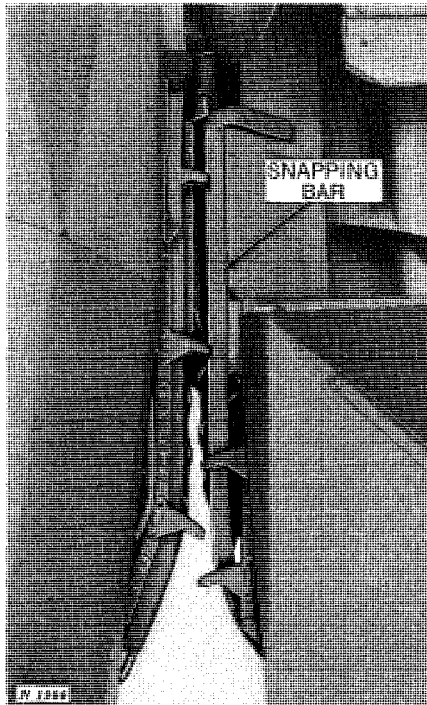

The snapping bar snaps ears from the corn stalks as the stalks are pulled down by the stalk rolls. The snapping bar spacing is adjustable to meet varying crop conditions.

The snapping bar opening should be just wide enough to snap the small ears. However, if there is excessive stalk breakage, open the bar farther to permit stalk rolls to carry away more material.

Do not adjust snapping bar wide enough to permit small ears to be carried into the stalk rolls.

A good starting setting is 1-1/4-inch. When stalks are heavy or you are picking in extremely weedy or trashy conditions, open the bars farther.

The snapping bar should be set as close to the stalk roll as possible without striking the roll.

IMPORTANT: The snapping bar should always be parallel with the outer gatherer chain deck plate.


ADJUSTING SNAPPING BAR

To adjust the rear of the snapping bar for spacing from the deck plate, loosen bolts "A" and slide snapping bar in or out.

To adjust the snapping bar for distance from the stalk roll, loosen bolts "A" and move snapping bar up or down.

To adjust the front of the snapping bar for spacing from the deck plate, loosen bolt "B" and slide snapping bar in or out.

Tighten all nuts after proper adjustment is obtained.

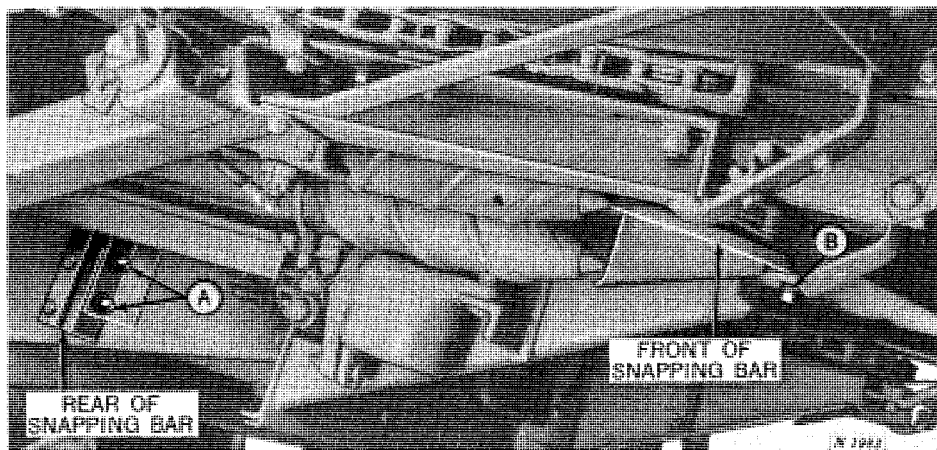

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>