

# 821C Loader Service Manual

## Table of Contents

Description	Section No.	Form No.
<b>General</b> <span style="float: right;"><b>Tab 1</b></span>		
Section Index - General		7-13060
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-13071
Loctite Product Chart		8-98902
<b>Engines</b> <span style="float: right;"><b>Tab 2</b></span>		
Section Index - Engines		7-13080
Engine and Radiator Removal and Installation	2000	7-13090
Stall Test	2002	7-13100
For Engine Repair, See the Engine Service Manual		
<b>Fuel System</b> <span style="float: right;"><b>Tab 3</b></span>		
Section Index - Fuel System		7-13110
For Fuel System Repair, See the Engine Service Manual		
<b>Electrical</b> <span style="float: right;"><b>Tab 4</b></span>		
Section Index - Electrical		7-13121
Removal and Installation of Starter and Alternator	4001	7-13140
Electrical Specifications, Troubleshooting, and Schematics	4002	7-12221
Batteries	4003	7-49440
Starter and Starter Solenoid	4004	7-14440
Information and Diagnostic Center	4005	7-12251
Alternator	4007	7-12260
<b>Steering</b> <span style="float: right;"><b>Tab 5</b></span>		
Section Index - Steering		7-13160
Removal and Installation of Steering Components	5001	7-13180
Steering Specifications, Pressure Checks, and Troubleshooting	5002	7-13190
Steering Control Valve	5003	7-12310
Steering Priority Valve	5004	7-12320
Steering Cylinders	5005	7-13210
Center Pivot	5006	7-13220

**Reprinted**

# 821C Loader Service Manual

## Table of Contents

Description	Section No.	Form No.
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		7-13232
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	7-12391
Transmission	6003	7-13271
821C Front Axle	6004	6-41420
721C Front Axle - 821C Rear Axle	6004	6-41410
Drive Shaft, Center Bearing, and Universal Joints	6005	7-13290
Wheels and Tires	6006	7-13301
Transmission Control Valve	6007	7-12450
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		7-13310
Removal and Installation of Brake Components	7001	7-13320
Hydraulic Brake Troubleshooting	7002	7-12490
Brake Accumulators	7004	7-12510
Brake Actuator Valve	7005	7-12520
Brake Accumulator Valve	7007	7-12530
Parking Brake	7008	7-12540
<b>NOTE:</b> For parking brake and brake pedal adjustments, see Section 9001.		
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		7-13340
Removal and Installation of Hydraulic Components	8001	7-13360
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-13371
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-13381
Loader Control Valve	8005	7-13391
Cylinders	8006	7-13400
Coupler Lock Valve	8007	7-12630
Remote Control Valves	8010	7-12640
Combination Valve	8011	7-12650
Unloading Valve	8012	7-59641
Accumulator for Ride Control	8013	7-13471
Solenoid Valve and Accumulator Valve for Ride Control	8014	7-13480

# 821C Loader Service Manual

## Table of Contents

Description	Section No.	Form No.
<b>Mounted Equipment</b>		<b>Tab 9</b>
Section Index - Mounted Equipment		7-13410
Pedals and Levers	9001	7-13420
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	7-14150
Air Conditioner System Service	9003	7-14160
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	7-14170
Air Conditioning Compressor and Clutch For Systems with HFC-134a Refrigerant	9005	7-14180
Loader	9006	7-13430
ROPS Cab and ROPS Canopy	9007	7-13440
Cab Glass Installation	9010	7-14290
<b>Hydraulic Schematic Foldout and Electrical Schematic Foldout</b>		<b>In Rear Pocket</b>
		<b>7-13451</b>

**NOTE:** Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# SECTION INDEX - GENERAL

## Section Title

## Section Number

Standard Torque Specifications..... 1001

Fluids and Lubricants ..... 1002

Loctite Product Chart

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
3350 SOUTH SERVICE ROAD  
BURLINGTON, ON L7N 3M6 CANADA

# Section 1001

## STANDARD TORQUE SPECIFICATIONS

CASE CORPORATION  
700 State Street  
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION  
3350 South Service Road  
Burlington, ON L7N 3M6 CANADA

Rac 8-71601

© 1994 Case Corporation  
Printed in U.S.A.  
Issued November, 1991

## TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE ..... 2


TORQUE SPECIFICATIONS - METRIC HARDWARE ..... 3


TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS ..... 4

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS ..... 5

### TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

<b>Grade 5 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983


<b>Grade 8 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827


**NOTE:** Use thick nuts with Grade 8 bolts.

## TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

<b>Grade 8.8 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

<b>Grade 10.9 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

### Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
<b>37 Degree Flare Fitting</b>			
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
<b>Straight Threads with O-ring</b>			
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

<b>Split Flange Mounting Bolts</b>		
Size	Pound- Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound- Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	Thread Size	Pound-Inches	Newton metres
<b>O-ring Face Seal End</b>					<b>O-ring Boss End Fitting or Lock Nut</b>		
-4	1/4 inch 6.4 mm	9/16-18	120 to 144	14 to 16	7/16-20	204 to 240	23 to 27
-6	3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound-Inches	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	1-1/16-12	85 to 90	115 to 122
					1-3/16-12	95 to 100	129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

**NOTE:** Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

# Section 1002

1002

## FLUIDS AND LUBRICANTS

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
3350 SOUTH SERVICE ROAD  
BURLINGTON, ON L7N 3M6 CANADA

Bur 7-13071

© 2000 Case Corporation  
Printed in U.S.A.  
April, 2000

## TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS .....	2
ENGINE OIL RECOMMENDATIONS.....	3
DIESEL FUEL.....	4
MAINTENANCE SCHEDULE .....	5

### CAPACITIES AND LUBRICANTS

Engine oil	
Capacity with filter change.....	20.8 litres (22 U.S. quarts)
Type of oil.....	Case No. 1 Engine Oil - see engine oil recommendations on page 3
Engine cooling system	
Capacity.....	32.1 litres (34 U.S. quarts)
Type of coolant .....	Ethylene glycol and water mixed for lowest ambient temperature (at least 50/50 mix)
Fuel tank	
Capacity .....	268 litres (70.8 U.S. gallons)
Type of fuel.....	See diesel fuel specifications on page 4
Hydraulic system	
Hydraulic reservoir refill capacity .....	90 litres (95.2 U.S. quarts)
Total system .....	174 litres (184 U.S. quarts)
Type of oil.....	MS-1209 Hy-Tran Ultra®
Transmission	
Refill capacity with filter change .....	12.3 litres (13 U.S. quarts)
Total system capacity .....	26.5 litres (28 U.S. quarts)
Type of oil.....	Case No. 1 Engine Oil (15W-40)
Axles	
Capacity of center bowl	
Front .....	18.9 litres (20 quarts) 135H EP Plus 1.9 litres (4 pints) B91246
Rear.....	13.7 litres (14.5 quarts) 135H EP Plus 1.4 litres (3 pints) B91246
Capacity of planetary (each)	
Front .....	6.0 litres (6.5 quarts) 135H EP
Rear.....	5.5 litres (6 quarts) 135H EP
Type of lubricant .....	Case (MS1316) 135H EP (SAE 85W-140)
Limited slip additive .....	Case B91246
Brake system	
Type of fluid (same as hydraulic system) .....	MS-1209 Hy-Tran Ultra®

**NOTE:** *DO NOT use an alternate oil in the axles. The brake components in the axles could be damaged as a result of using an alternate oil.*

### Conversion Formulas

Imperial quart = litres x 0.879877

Imperial gallons = litres x 0.219969

# ENGINE OIL RECOMMENDATIONS


## Engine Oil Selection

Case No. 1 Engine Oil is recommended for use in your Case engine. Case engine oil will lubricate your engine correctly under all operating conditions.

If Case No. 1 Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CE.



292L91

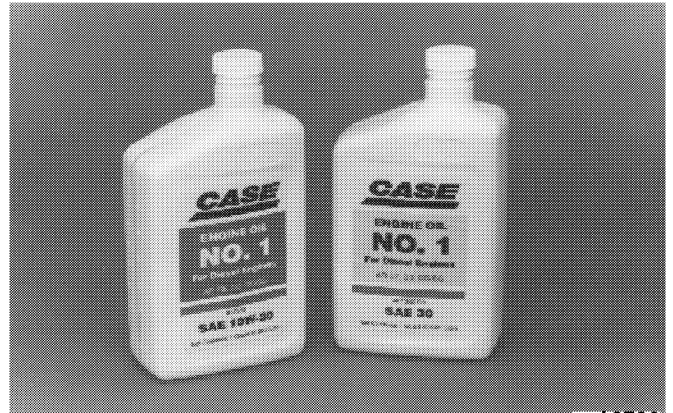


A2723

See the chart below for recommended viscosity at ambient air temperature ranges.

**NOTE:** Do not put performance additives or other oil additive products in the engine crankcase. The oil change intervals given in this manual are according to tests with Case lubricants.

### Oil Viscosity / Temperature Ranges

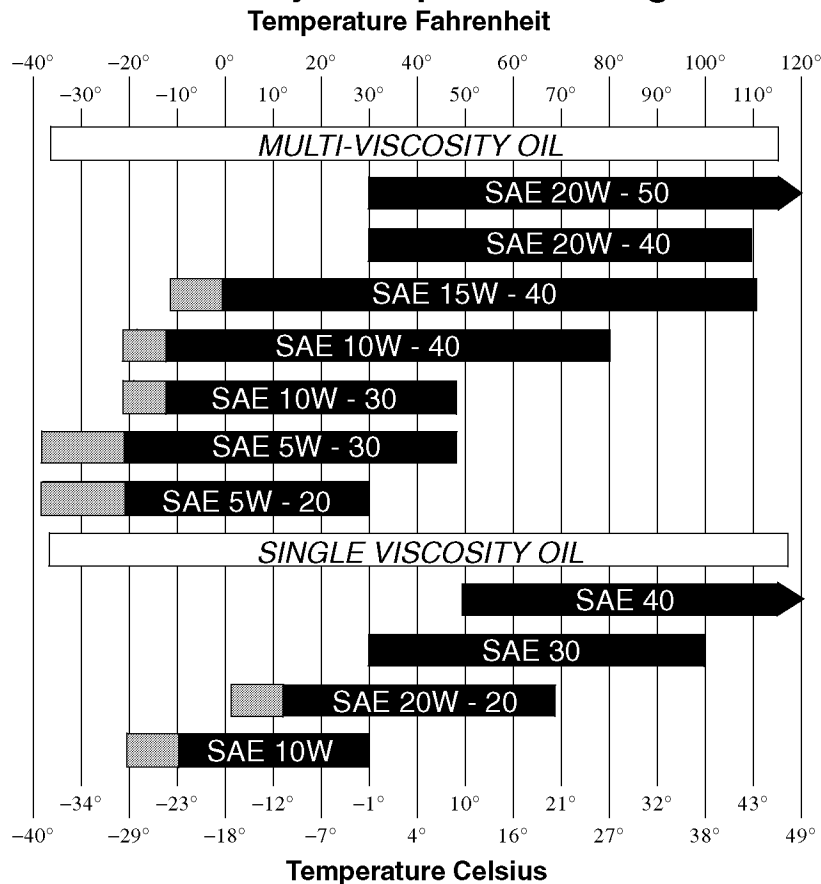

**NOTE:** Use of an engine oil pan heater or an engine coolant heater is required when operating temperatures are in the shaded area.

## DIESEL FUEL SYSTEM

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

**NOTE:** *See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will restrict the fuel filter and cause the engine to lose power or not start.*

The diesel fuel used in this machine must meet the specifications shown below in, "Specifications for Acceptable No. 2 Diesel Fuel", or Specification D975-81 of the American Society for Testing and Materials.

### Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.

### Specifications for Acceptable No. 2 Diesel Fuel

API gravity, minimum .....	34
Flash point, minimum .....	140°F (60°C)
Cloud point (wax appearance point), maximum .....	-5°F (-20°C) See Note above
Pour point, maximum .....	-15°F (-26°C) See Note above
Distillation temperature, 90% point .....	540 to 640°F (282 to 338°C)
Viscosity, at 100°F (38°C)	
Centistokes .....	2.0 to 4.3
Saybolt seconds universal .....	32 to 40
Cetane number, minimum .....	43 (45 to 55 for winter or high altitudes)
Water and sediment, by volume, maximum .....	0.05 of 1%
Sulphur, by weight, maximum .....	0.5 of 1%
Copper strip corrosion, maximum .....	No. 2
Ash, by weight, maximum .....	0.01 of 1%

# MAINTENANCE SCHEDULE

## Model 821C

### Instructions

#### AS REQUIRED

---

22 SERVICE THE AIR CLEANER IF THE AIR CLEANER WARNING LAMP ILLUMINATES.....	SEE OPERATORS MANUAL
37 SERVICE AIR CLEANER PRECLEANER.....	SEE OPERATORS MANUAL
30 REPLACE THE TRANSMISSION FILTER	
IF THE TRANSMISSION FILTER RESTRICTION WARNING LAMP ILLUMINATES .....	USE CASE FILTER
19 CHECK THE RADIATOR COOLANT LEVEL IF THE WARNING LAMP ILLUMINATES .....	SEE OPERATORS MANUAL
6 REPLACE THE HYDRAULIC FILTERS IF THE HYDRAULIC FILTER WARNING LAMP ILLUMINATES.....	USE CASE FILTERS
20 CHECK THE FAN BELT CONDITION.....	REPLACE AS REQUIRED
CHECK THE AIR CONDITIONING DRIVE TENSION (IF EQUIPPED) NOT SHOWN.....	ADJUST AS REQUIRED

---

#### EVERY 10 HOURS OF OPERATION OR EACH DAY- WHICHEVER OCCURS FIRST

---

16 CHECK THE ENGINE OIL LEVEL.....	SEE OPERATORS MANUAL
------------------------------------	----------------------

---

#### EVERY 50 HOURS OF OPERATION

---

1 CHECK THE COOLANT RESERVOIR FLUID LEVEL.....	ETHYLENE GLYCOL AND WATER
29 CHECK THE TRANSMISSION OIL LEVEL (ENGINE RUNNING AND OIL WARM) .....	SEE OPERATORS MANUAL
5 CHECK THE HYDRAULIC RESERVOIR FLUID LEVEL .....	SEE OPERATORS MANUAL
15 LUBRICATE THE REAR AXLE TRUNNION PIVOTS (2 FITTINGS) .....	CASE MOLYDISULFIDE GREASE
27 LUBRICATE THE CENTER DRIVE SHAFT SLIP JOINT (1 FITTING).....	CASE MOLYDISULFIDE GREASE

---

#### EVERY 100 HOURS OF OPERATION

---

10 LUBRICATE THE BUCKET PIVOT POINTS (3 FITTINGS) .....	CASE MOLYDISULFIDE GREASE
7 LUBRICATE THE STEERING CYLINDER PIVOTS - ROD AND CLOSED END (4 FITTINGS).....	CASE MOLYDISULFIDE GREASE
9 LUBRICATE THE LOADER PIVOT POINTS (10 FITTINGS).....	CASE MOLYDISULFIDE GREASE
26 LUBRICATE THE FRONT DRIVE SHAFT SUPPOTT BEARING (1 FITTING) .....	CASE MOLYDISULFIDE GREASE
32 LUBRICATE THE REAR DRIVE SHAFT SLIP JOINT (1 FITTING) .....	CASE MOLYDISULFIDE GREASE
35 LUBRICATE THE REAR DRIVE SHAFT SLIP JOINT (1 FITTING) .....	CASE MOLYDISULFIDE GREASE

---

#### EVERY 250 HOURS OF OPERATION

---

19 CHECK THE RADIATOR COOLANT LEVEL .....	ETHYLENE GLYCOL AND WATER
2 CHANGE THE ENGINE OIL AND REPLACE THE ENGINE OIL FILTER.....	SEE OPERATORS MANUAL
34 CHECK THE BATTERY FLUID LEVEL .....	SEE OPERATORS MANUAL
36 CHECK THE TIRE CONDITION AND AIR PRESSURE .....	SEE OPERATORS MANUAL
12 CLEAN THE CAB AIR FILTERS (IF EQUIPPED).....	SEE OPERATORS MANUAL
25 REPLACE ENGINE COOLING SYSTEM FILTER .....	USE CASE FILTER

---

#### EVERY 500 HOURS OF OPERATION

---

3 REPLACE THE FUEL FILTERS .....	USE CASE FILTERS
33 DRAIN WATER AND SEDIMENT FROM THE FUEL TANK.....	SEE OPERATORS MANUAL
14 REPLACE THE IN-LINE FUEL FILTER .....	USE CASE FILTERS

---

#### EVERY 1000 HOURS OF OPERATION

---

21 CHECK THE ENGINE VALVE CLEARANCES .....	SEE SERVICE MANUAL
6 REPLACE THE HYDRAULIC FILTERS .....	USE CASE FILTERS
30 REPLACE THE TRANSMISSION OIL FILTER.....	USE CASE FILTERS
28 CHANGE THE TRANSMISSION OIL.....	SEE OPERATORS MANUAL
23 CLEAN THE TRANSMISSION BREATHER.....	CLEAN WITH SOLVENT
24 LUBRICATE THE UPPER AND LOWER CHASSIS PIVOTS (2 FITTINGS).....	CASE MOLYDISULFIDE GREASE
31 CHANGE THE FRONT/REAR AXLE DIFFERENTIAL AND PLANETARY OIL.....	SEE OPERATORS MANUAL

---


#### EVERY 2000 HOURS OF OPERATION OR EACH YEAR - WHICHEVER OCCURS FIRST

---

4 CHANGE THE HYDRAULIC OIL AND CLEAN THE SCREEN .....	SEE OPERATORS MANUAL
18 DRAIN, FLUSH AND REFILL THE ENGINE COOLING SYSTEM.....	ETHYLENE GLYCOL AND WATER
22 REPLACE THE AIR CLEANER ELEMENTS.....	USE CASE FILTERS

**NOTE:** *When you drain, flush and refill the engine cooling system, add one container (0.5L) of Case cooling system treatment, and replace the cooling filter.*

# MAINTENANCE SCHEDULE Model 821C

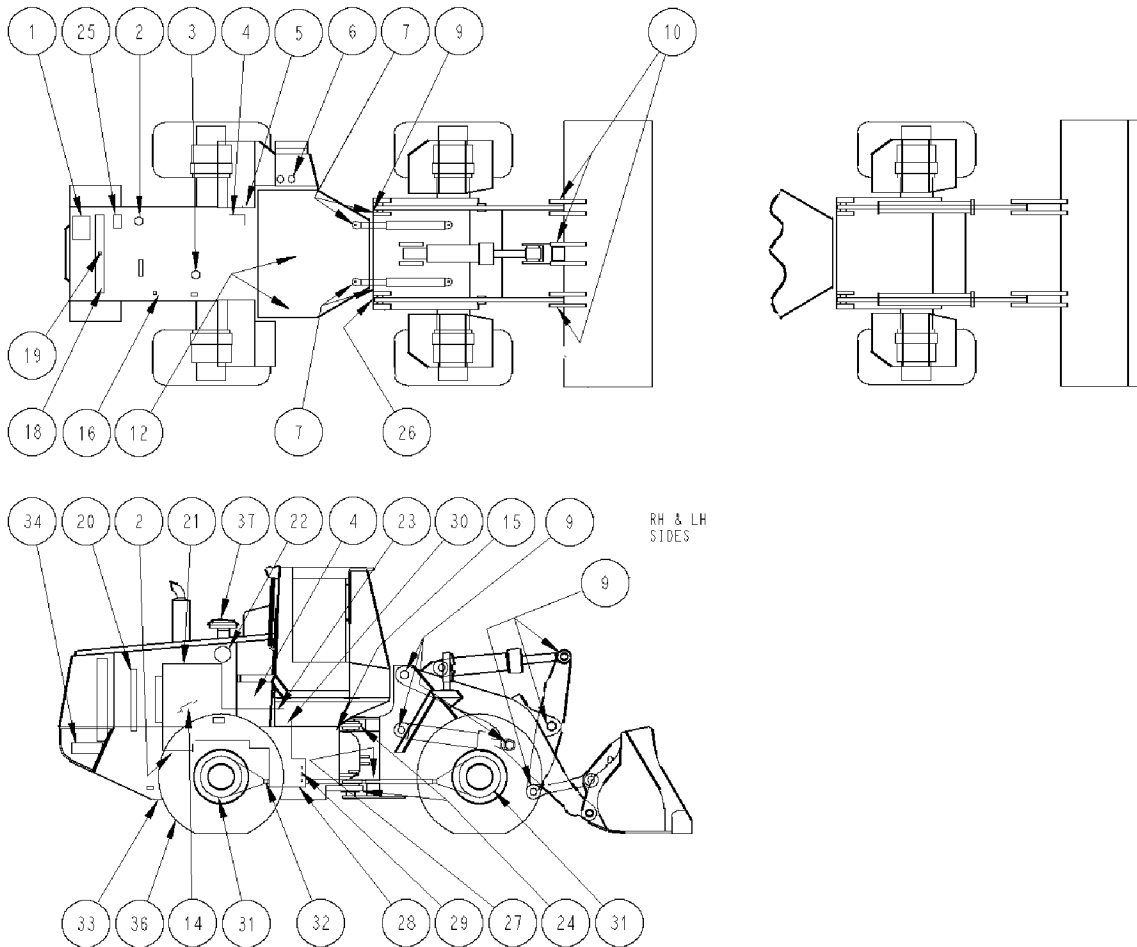

GS98J100

If you operate the machine in severe conditions, lubricate and service the machine more frequently. It is recommended that you see your Case dealer for information on the System Guard Lubrication Analysis System.

See your Operators manual for maintenance of safety related items and for detailed information of the service items on this chart. Operators and service manuals are available for this machine from your Case dealer.

**NOTE:** *The Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.*

# SECTION INDEX - ENGINE

## Section Title

## Section Number

Engine and Radiator Removal and Installation.....	2000
Stall Test.....	2002
For Engine Repair, See the Engine Service Manual.	

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
3350 SOUTH SERVICE ROAD  
BURLINGTON, ON L7N 3M6 CANADA

Bur 7-13080

© 1999 Case Corporation  
Printed in U.S.A.  
April, 1999

# Section 2000

## ENGINE AND RADIATOR REMOVAL AND INSTALLATION

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
3350 SOUTH SERVICE ROAD  
BURLINGTON, ON L7N 3M6 CANADA

Bur 7-13090

© 1999 Case Corporation  
Printed in U.S.A.  
January, 1999

## TABLE OF CONTENTS

SPECIFICATIONS ..... 2

SPECIAL TOOLS ..... 2

ENGINE ..... 3

    Removal ..... 3

    Installation ..... 6

RADIATOR ..... 12

    Removal ..... 12

    Installation ..... 12

## SPECIFICATIONS

### Special Torque


- Bolt that fastens the engine support bracket to rear frame..... 366 to 439 Nm (270 to 324 pound-feet)
- Allen head screws that fasten the flex plates to the flywheel ..... 41 to 46 Nm (360 to 408 pound-inches)
- Cap screws that fasten the transmission to the flywheel housing..... 54 to 60 Nm (480 to 528 pound-inches)
- Cap screws that fasten the fan to the engine..... 54 to 60 Nm (480 to 528 pound-inches)
- Inside nuts on the studs for more than one counterweight..... 237 to 305 Nm (175 to 225 pound-feet)
- Outside nuts on the studs for more than one counterweight ..... 745 to 881 Nm (550 to 650 pound-feet)
- Nuts on the bolts that fasten a single counterweight..... 813 Nm (600 pound-feet)

### Belt tension for the air conditioner compressor

- New belt tension ..... 45 kg (100 pounds)
- Used belt tension ..... 41 kg (90 pounds)

Cooling system capacity ..... 32.2 litres (34 U.S. quarts) of coolant

## SPECIAL TOOLS

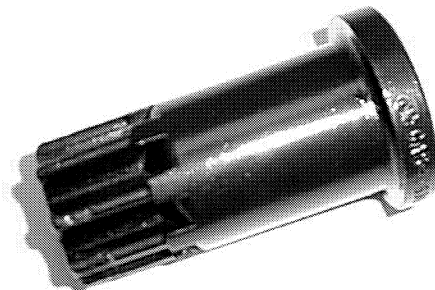

BD98J200

**CAS-1690 Tool used to rotate the flywheel**

## ENGINE

### Removal

1. Park the machine on a level surface and lower the loader bucket to the floor. Stop the engine and apply the parking brake.
  2. Let the engine cool. Loosen the cap screw that fastens the cover for the radiator cap and move the cover. Remove the radiator cap. Drain the cooling system. The drain valve is located at the right front side of the radiator. The cooling system holds 32.2 litres (34 U.S. quarts) of coolant.
  3. Loosen the filler cap in the reservoir to release any air in the reservoir.
  4. Open the access door on each side of the engine compartment.
  5. Turn the master disconnect switch to the OFF position.
  6. Open the grille.
  7. Remove the precleaner. If the air cleaner is equipped with a cap, loosen the clamp and remove the cap.
  8. Disconnect the hoses from the tubes for the oil cooler. Install a cap on each hose and plug in each tube fitting.
  9. Remove the plugs and loosen and remove the cap screws, lock washers, and flat washers that fasten the hood.
  10. Connect suitable lifting equipment to the hood and remove the hood.
  11. Disconnect the ground cables and the positive cables from the batteries.
  12. Loosen the self-locking nuts on the bolts for the battery hold down brackets. Remove the battery hold down brackets.
  13. Have another person help you with this step. Remove both batteries.
  14. If your machine is equipped with additional counterweights, connect suitable lifting equipment to one of the additional counterweights. The weight of an additional counterweight is 227 kg (500 pounds) or 453 kg (1000 pounds).
  15. Loosen and remove the outside nuts and hardened washers from the studs that fasten the additional counterweight.
  16. Remove the additional counterweight.
  17. Connect suitable lifting equipment to the large counterweight. The weight of the large counterweight is 545 kg (1200 pounds).
  18. Loosen and remove the inside nuts and hardened washers from the studs for the large counterweight.
- NOTE:** *If your machine is equipped with large counterweights only, loosen and remove the nuts and hardened washers from the bolts that fasten the large counterweights to the machine.*
19. Remove the large counterweight from the machine.
  20. Repeat steps 14 through 19 for the other counterweight(s).
  21. If the machine is equipped with ether injection, disconnect the tube from the valve.
  22. If the machine is equipped with ether injection, disconnect the wire harness from the connector.
  23. If the machine is equipped with ether injection, cut the tie strap that fastens the wire harness to the bracket.
  24. If the machine is equipped with a backup alarm, disconnect the wires from the backup alarm and pull the wires through the grommet.
  25. Cut the tie strap that fastens the connectors to the wire harness for the lamps at the right side of the radiator shroud. Disconnect both connectors.
  26. Loosen and remove the nut, lock washer, and bolt that fasten the clamp for the wire harness to the right side of the top of the radiator shroud.

27. Loosen and remove the nut, lock washer, and bolt that fasten the clamp for the wire harness to the left side of the top of the radiator shroud.
  28. Cut the tie strap that fastens the connectors to the wire harness for the lamps at the left side of the radiator shroud. Disconnect both connectors.
  29. Loosen and remove the self-locking nuts that fasten the clamps for the wire harness to the upper left side of the radiator shroud.
  30. Disconnect the connector for the wire harness. Loosen and remove the self-locking nuts and flat washers that fasten the clamps for the battery cables and the wire harness to the left side of the radiator shroud. Move the wire harness out of the way.
  31. Loosen and remove the self-locking nuts and flat washers that fasten the bracket for the master disconnect switch to the radiator shroud.
  32. Disconnect the cables and wires from the master disconnect switch. Fasten an identification tag to one of the cables and one of the wires. Pull the cables and wires through the radiator shroud. Put the cables and wires out of the way.
  33. Loosen and remove the self-locking nuts, hardened washers, and bolts that fasten the front of each side of the radiator shroud to the frame.
  34. Loosen and remove the self-locking nuts, hardened washers, and bolts that fasten the rear of each side of the radiator shroud to the frame.
  35. Disconnect the top radiator hose.
  36. Disconnect the small hose.
  37. Loosen and remove the cap screws, lock washers, and flat washers, that fasten the guard to the fan shroud.
- NOTE:** *There may be spacers between the guard and the fan shroud.*
38. Remove the guard.
  39. Loosen and remove the cap screws, lock washers, and flat washers that fasten the fan shroud to the radiator. Remove the fan shroud.
  40. Disconnect the bottom radiator hose from the radiator.
  41. Connect suitable lifting equipment to the radiator shroud.
  42. Raise the radiator shroud until the radiator shroud is free of the frame and remove the radiator shroud from the machine.
  43. Lower the radiator shroud and put blocks under each side.
  44. Loosen the nuts on the U-bolt for the muffler clamp.
  45. Loosen and remove the nuts, lock washers, flat washers, and bolts that fasten the bracket for the muffler to the bracket on the engine.
  46. Remove the muffler.
  47. Disconnect the wires from the switch for the air cleaner indicator.
  48. Disconnect the hose from the turbocharger.
  49. Loosen and remove the nuts and bolts that fasten the straps for the air cleaner.
  50. Remove the air cleaner from the bracket. Use tape to cover the inlets to the engine and air cleaner.
  51. If the machine is equipped with a heater, disconnect the hose from the shutoff valve. Install a plug in the hose.
  52. Disconnect the bottom radiator hose from the connector at the engine.
  53. Remove the boot and loosen and remove the nut and lock washer that fasten the wire to the battery terminal on the alternator. Remove the wire.
  54. Remove the boot and loosen and remove the nut and lock washer that fasten the small wire to the alternator. Remove the small wire.
  55. Loosen and remove the cap screw that fastens the clamp for the wire harness to the engine.

56. Loosen and remove the brass nut and brass washers that fasten both ground cables to the stud on the engine. The ground cable connected to the starter can stay. Remove the other ground cable and install the brass washers and brass nut on the stud.
  57. Disconnect the hose for the transmission oil cooler from the fitting at the engine. Install a plug in the hose.
  58. If the machine is equipped with a heater, disconnect the hose from the top fitting. Install a plug in the hose.
  59. Disconnect the cables from the battery terminal of the starter solenoid.
  60. Fasten identification tags to the cables for the starter solenoid.
- NOTE:** *Disconnect the cables from the switch terminal of the starter solenoid.*
61. Disconnect the wire from the temperature sender.
  62. If the machine is equipped with a heater, loosen and remove the cap screw and lock washer that fasten the clamp for the hoses to the left side of the flywheel housing.
  63. Loosen and remove the brass nut and brass flat washers that fasten the wires to the stud in the left side of the flywheel housing. Remove the wires.
- NOTE:** *If the machine is equipped with an air conditioner, do Steps 64 through 73. If the machine is not equipped with an air conditioner, go to Step 74.*
64. Disconnect the connectors for the compressor.
  65. Cut the tie straps that fasten the wire harness to the compressor hose.
  66. If the machine is equipped with ether injection, disconnect the connector for the temperature switch.
  67. If the machine is equipped with ether injection, disconnect the tube fitting from the intake manifold.
  68. Loosen and remove the nuts, lock washers, and bolts that fasten the clamps for the compressor hoses and the wire harness to the bracket on the engine.
  69. Loosen and remove the cap screw, lock washer, and flat washer that fasten the adjusting strap for the compressor.
  70. Push the compressor toward the engine and remove the belt from the pulley of the compressor.
  71. Loosen and remove the nut, lock washer, and flat washer from the bolt at the base of the compressor.
  72. Remove the bolt and flat washers that fasten the compressor to the bracket.
  73. Use a piece of wire to tie the compressor so that the compressor is out of the way.
  74. Loosen and remove the self-locking nuts and flat washers on the U-bolt that fasten the fuel filler neck to the frame. Remove the U-bolt.
  75. Loosen the top hose clamp at the bottom of the fuel filler neck and remove the fuel filler neck. Cover or plug the opening in the fuel tank.
  76. Disconnect the fuel return hose from the fuel injection pump. Install a plug in the hose. Follow the hose down and remove the cap screw that fastens the hose clamp to the timing gear cover.
  77. Disconnect the throttle cable (1) from the lever on the fuel injection pump, refer to Figure 1.
  78. Loosen and remove the nuts, lock washers, and bolts that fasten the clamp for the throttle cable to the bracket on the engine. Move the throttle cable out of the way.
  79. Disconnect the wiring harness from the bracket.
  80. Remove the cap from the hydraulic reservoir. Connect a vacuum pump to the reservoir. Start the vacuum pump.
  81. Actuate both brake pedals several times to discharge the brake accumulators.

82. Disconnect the brake pump inlet and outlet lines. Cap or plug the open fittings and hose connections.
83. Stop the vacuum pump.
84. Disconnect the connector for the fuel shutoff solenoid. Disconnect the connector for the oil pressure switch.
85. If the machine is equipped with optional gauges, disconnect the wire at the sender for the oil pressure gauge.
86. Disconnect the fuel supply hose from the hand primer pump. Install a plug in the hose.
87. Remove the bolt that fastens the harness to the top right side of flywheel housing (5), refer to Figure 1.
88. Remove the hose from the bracket at the cover. Loosen the bottom cap screw and loosen and remove the top cap screw that fastens the bracket and cover to the flywheel housing (5).
89. Remove the plastic plug from the flywheel housing (5).
90. There are four 10 mm Allen head screws that fasten the flex plates to the flywheel. Only one Allen head screw at a time can be removed. The flywheel must be rotated to align each Allen head screw with the hole. Do the following procedure to remove the four Allen head screws.
91. Install the CAS-1690 tool and rotate the flywheel to align an Allen head screw with the hole below.
92. Loosen and remove the Allen head screw. Rotate the flywheel and continue this procedure to remove the remaining Allen head screws.
93. Loosen and remove the cap screws that fasten the panels under each side of the cab.
94. Remove the panels.
95. Connect suitable lifting equipment to the engine.

96. Loosen and remove the cap screws and lock washers that fasten the clamps for the wire harness, and the bracket for the heater hoses, if equipped, to the flywheel housing. Loosen and remove the remaining cap screws and lock washers that fasten the transmission to the flywheel housing.
97. Remove the bolt (6), washer (7), and nut (8) that fastens the front engine mount (2) to the engine weldment mount (3).

**NOTE:** *Put a container below the torque converter housing for the oil that will drain from the torque converter.*


98. Move the engine (4) straight rearward approximately 50 mm (2 inches).

**NOTE:** *Check to make sure that the torque converter is free of the engine and pushed all the way onto the transmission shafts.*

99. Raise the engine and remove the engine from the machine.

## Installation

1. Make sure the torque converter is installed on the transmission. Three splined shafts must be engaged for the torque converter to be installed correctly.
2. Install a stud 70 mm (2-3/4 inches) long with 10 mm threads in one of the holes in the flex plates so the stud is to the left side of the machine. Make sure the flex plates are not bent or damaged.
3. Carry the engine (4) over the frame.
4. Move the engine (4) forward and lower the engine.
5. Push the engine (4) toward the front. Have another person align the stud with the hole in the flywheel.
6. Install the cap screws and lock washers that fasten the clamps for the wire harness, and the bracket for the heater hose to the flywheel housing (5). Install the remaining cap screws and lock washers that fasten the transmission to the flywheel housing (5). Tighten the cap screws to 54 to 60 Nm (480 to 528 pound-inches).

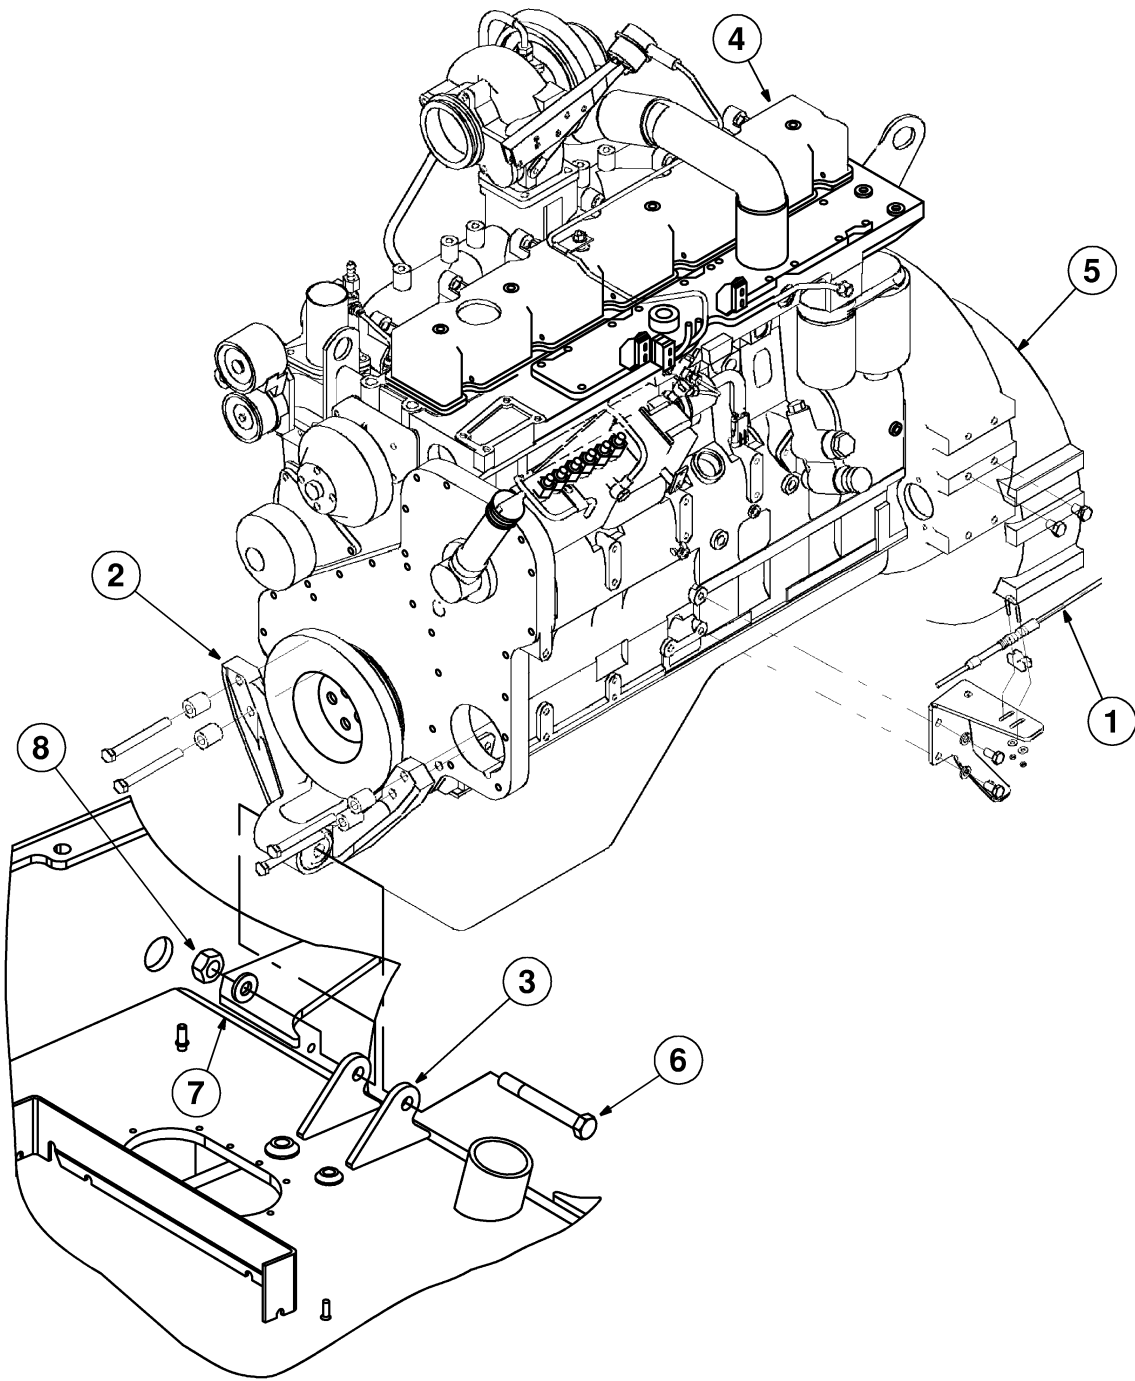

GS98K002

- |                          |                     |
|--------------------------|---------------------|
| 1. THROTTLE CABLE        | 5. FLYWHEEL HOUSING |
| 2. FRONT ENGINE MOUNT    | 6. BOLT             |
| 3. ENGINE WELDMENT MOUNT | 7. WASHER           |
| 4. ENGINE                | 8. NUT              |

Figure 1. ENGINE

7. Align the engine support bracket with the rear frame and install the bolt, washer, and nut. Tighten the bolt to 366 to 439 Nm (270 to 324 pound-feet).
  8. Disconnect and remove the lifting equipment from the engine (4), refer to Figure 1.
  9. Install the panels under each side of the cab.
  10. Install and tighten the cap screws.
  11. Install the CAS-1690 tool to turn the flywheel. Remove the stud from the flex plates and install an Allen head screw.
  12. Rotate the flywheel and install the remaining Allen head screws.
  13. Tighten all of the Allen head screws to 43 to 49 Nm (360 to 408 pound-inches).
  14. Remove the CAS-1690 tool and install the plastic plug in the flywheel housing (5).
  15. Install the cover and the bracket for the hose. Install the cap screw and tighten both cap screws. Install the hose in the bracket.
  16. Install the cap screw and lock washer that fasten the clamp for the wire harness to the top right side of the flywheel housing (5). Tighten the cap screw.
  17. Remove the plug from the fuel supply hose and connect the fuel supply hose to the hand primer pump.
  18. If the machine is equipped with optional gauges, connect the wire to the sender for the oil pressure switch.
  19. Connect the connector for the oil pressure switch. Connect the connector for the fuel shutoff solenoid.
  20. Fasten the wiring harness to the bracket.
  21. Install the clamp and throttle cable on the bracket and install the bolts, lock washers and nuts.
  22. Connect the throttle cable to the lever on the fuel injection pump.
  23. Remove the plug from the fuel return hose and connect the fuel return hose to the fuel injection pump.
  24. Follow down the hose and install the cap screw that fastens the clamp for the fuel return hose to the timing gear cover.
  25. Remove the cover or plug from the opening in the fuel tank. Install the fuel filler neck and tighten the top hose clamp.
  26. Install the U-bolt, flat washers, and self-locking nuts that fasten the fuel filler neck to the frame. Tighten the self-locking nuts.
- NOTE:** *If the machine is equipped with an air conditioner, do Steps 27 through 37. If the machine is not equipped with an air conditioner, go to Step 38.*
27. Remove the wire that was used to tie the compressor out of the way and install the compressor on the bracket. Align the compressor with the bracket and install the bolt and flat washers.
  28. Install the flat washer, lock washer, and nut on the bolt and tighten the nut.
  29. Install the belt on the pulley for the compressor.
  30. Install the cap screw, lock washer, and flat washer that fasten the adjusting strap for the compressor. Do not tighten the cap screw all the way at this time.
  31. Use a prybar to move the compressor away from the engine. Tighten the cap screw.
  32. Check the tension on the belt with a tension gauge. The tension for a new belt is 45 kg (100 pounds). The tension for a used belt is 41 kg (90 pounds).
  33. Install the bolts, lock washers, and nuts that fasten the clamps for the compressor hoses and the wire harness to the bracket on the engine. Tighten the nuts.
  34. If the machine is equipped with ether injection, connect the tube fitting to the intake manifold.
  35. If the machine is equipped with ether injection, connect the connector for the temperature switch.

36. Install new tie straps to fasten the wire harness to the compressor hose.
  37. Connect the connectors for the compressor.
  38. Install the wires and brass flat washers on the stud. Install the brass nut on the stud and tighten the brass nut.
  39. If the machine is equipped with a heater, install the cap screw and lock washer that fasten the clamp for the hoses to the left side of the flywheel housing. Tighten the cap screw.
  40. Connect the wire to the temperature sender.
  41. Connect the cables to the switch terminal of the starter solenoid.
  42. Connect the cables to the battery terminal of the starter solenoid.
  43. If the machine is equipped with a heater, remove the plug from the hose and connect the hose to the top fitting.
  44. Remove the plug from the hose for the transmission oil cooler and connect the hose to the fitting.
  45. Remove the brass nut and brass washers from the stud. Install the ground cable that was removed and the brass washers. Install and tighten the brass nut.
  46. Install the cap screw that fastens the clamp for the wire harness to the engine. Tighten the cap screw.
  47. Install the small wire on the alternator. Install the lock washer and nut and tighten the nut. Install the boot.
  48. Install the wire on the battery terminal of the alternator. Install the lock washer and nut and tighten the nut. Install the boot.
  49. Connect the bottom radiator hose to the connector at the engine.
  50. If the machine is equipped with a heater, remove the plug from the hose and connect the hose to the shutoff valve.
  51. Install the air cleaner in the bracket.
  52. Install the bolts and nuts that fasten the straps for the air cleaner. Tighten the bolts.
  53. Connect the hose to the turbocharger.
  54. Connect the wires to the switch for the air cleaner indicator.
  55. Install the muffler.
  56. Install the bolts, flat washers, lock washers, and nuts that fasten the bracket for the muffler to the bracket on the engine. Tighten the nuts.
  57. Install the muffler clamp in position and tighten the nuts on the U-bolt.
  58. Install the radiator shroud over the frame.
  59. Lower the radiator shroud into alignment with the frame. Disconnect the lifting equipment from the radiator shroud.
  60. Install the fan shroud. Install the cap screws, lock washers, and flat washers that fasten the fan shroud to the radiator. Tighten the cap screws.
- NOTE:** *Install any spacers that may have been used between the guard and the fan shroud.*
61. Install the guard.
  62. Install the cap screws, lock washers, and flat washers that fasten the guard to the fan shroud. Tighten the cap screws.
  63. Connect the bottom radiator hose to the radiator.
  64. Connect the small hose.
  65. Connect the top radiator hose.
  66. Install the bolts, hardened washers, and self-locking nuts that fasten the rear of each side of the radiator shroud to the frame. Tighten the bolts.
  67. Install the bolts, hardened washers, and self-locking nuts that fasten the front of each side of the radiator shroud to the frame. Tighten the bolts.
  68. Install the cables and wires through the radiator shroud and connect the cables and wires to the master disconnect switch.

69. Install the bracket for the master disconnect switch to the radiator shroud. Install the flat washers and self-locking nuts. Tighten the self-locking nuts.
70. Install the flat washers and self-locking nuts that fasten the clamps for the battery cables and the wire harness to the left side of the radiator shroud. Tighten the self-locking nuts. Connect the connector for the wire harness.
71. Install the self-locking nuts that fasten the clamps for the wire harness to the upper left side of the radiator shroud. Tighten the self-locking nuts.
72. Connect both connectors for the lamps at the left side of the radiator shroud. Install a new tie strap to fasten the connectors to the wire harness.
73. Install the bolt, lock washer, and nut that fasten the clamp for the wire harness to the left side of the top of the radiator shroud. Tighten the nut.
74. If the machine is equipped with a backup alarm, install the wires for the backup alarm through the grommet.
75. Install the bolt, lock washer, and nut that fasten the clamp for the wire harness to the right side of the top of the radiator shroud. Tighten the nut.
76. Connect both connectors for the lamps at the right side of the radiator shroud. Install a new tie strap to fasten the connectors to the wire harness.
77. If the machine is equipped with a backup alarm, connect the wires to the backup alarm.
78. If the machine is equipped with ether injection, install a new tie strap to fasten the wire harness to the bracket.
79. If the machine is equipped with ether injection, connect the wire harness to the connector.
80. If the machine is equipped with ether injection, connect the tube to the valve.
81. Connect suitable lifting equipment to one of the large counterweights and align the large counterweight with the frame. The weight of the large counterweight shown is 545 kg (1200 pounds).
82. Align the holes in the large counterweight with the holes in the frame and install the studs that fasten the large counterweight. Install the inside nuts and hardened washers on the studs and tighten the inside nuts but not all the way.  
**NOTE:** *If your machine is equipped with large counterweights only, install the bolts, hardened washers, and nuts that fasten the large counterweights to the machine. The nuts and hardened washers must be installed on the inside.*
83. Repeat Steps 81 and 82 for the other large counterweight.
84. Tighten the inside nuts for both large counterweights to 237 to 305 Nm (175 to 225 pound-feet).  
**NOTE:** *If your machine is equipped with large counterweights only, tighten the nuts on the bolts to 813 Nm (600 pound-feet).*
85. If your machine is equipped with additional counterweights, connect suitable lifting equipment to one of the additional counterweights. The weight of an additional counterweight is 227 kg (500 pounds) or 453 kg (1000 pounds). Align the additional counterweight with the studs and install the additional counterweight.
86. Install the hardened washers and nuts and tighten the nuts but not all the way.
87. Remove the lifting equipment and tighten the outside nuts to 745 to 881 Nm (550 to 650 pound-feet).
88. Have another person help you with this step. Install both batteries.
89. Install the battery hold down brackets and bolts and tighten the self-locking nuts.
90. Connect the positive cables and the ground cables to the batteries.
91. Install the hood. Disconnect the lifting equipment from the hood.
92. Install the cap screws, lock washers, and flat washers that fasten the hood. Tighten the cap screws. Install the plugs in the hood.

93. Remove the caps from the hoses and the plugs from the tube fittings. Connect the hoses to the tubes for the oil cooler.
94. Install the precleaner. If the air cleaner is equipped with a cap, install the cap and tighten the clamp.
95. Tighten the filler cap in the reservoir.
96. Make sure that the drain valve at the right front side of the radiator is closed. A new coolant filter must be installed with the new coolant. Fill the cooling system with coolant. If the new coolant is being installed, the coolant must be at least half permanent antifreeze with the additive specified in Section 1002. The cooling system holds 32.2 litres (34 U.S. quarts) of coolant.
97. Install the radiator cap. Move the cover over the radiator cap and tighten the cap screw that fastens the cover.
98. Turn the master disconnect switch to the ON position. Start the engine and run the engine at low idle. Check to see that the gauges show the correct indication. Check for coolant and oil leaks. See Section 7002 for instructions to bleed the brakes. Stop the engine.
99. Close the grille.
100. Close the access door on each side of the engine compartment.

## RADIATOR

### Removal

1. Park the machine on a level surface and lower the loader bucket to the floor. Stop the engine and apply the parking brake.
2. Let the engine cool. Loosen the cap screw that fastens the cover for the radiator cap and move the cover. Remove the radiator cap. Drain the cooling system. The drain valve is located at the right front side of the radiator. The cooling system holds 32.2 litres (34 U.S. quarts) of coolant.
3. Loosen the filler cap in the reservoir to release any air in the reservoir.
4. Open the access door on each side of the engine compartment.
5. Turn the master disconnect switch to the OFF position.
6. Open the grille (1), refer to Figure 2.
7. Remove the precleaner. If the air cleaner is equipped with a cap, loosen the clamp and remove the cap.
8. Disconnect the hoses from the tubes for the oil cooler. Install a cap on each hose and plug in each tube fitting.
9. Remove the plugs and loosen and remove the cap screws, lock washers, and flat washers that fasten the hood.
10. Connect suitable lifting equipment to the hood and remove the hood.
11. Disconnect the hose from the filler neck of the radiator (3) and install a plug in the hose.
12. Disconnect the upper radiator hose (4).
13. Disconnect the small hose from the radiator.
14. Loosen and remove the cap screws, lock washers, and flat washers that fasten the guard (6) to the fan shroud (5).

**NOTE:** *There may be spacers between the guard and the fan shroud.*

15. Remove the guard (6).
16. Loosen and remove the cap screws, lock washers, and flat washers that fasten the fan shroud (5) to the radiator (3). Remove the fan shroud (5).
17. Disconnect the bottom radiator hose (7) from the radiator (3).
18. Connect suitable lifting equipment to the radiator (3).
19. Loosen and remove the cap screws, lock washers, and flat washers that fasten each side of the radiator (3) to the radiator support (2).
20. Move the bottom of the radiator (3) toward the engine.
21. Carefully lift the radiator (3) from between the engine and the radiator shroud and remove the radiator (3).

### Installation

1. Lower the radiator (3) between the engine and the radiator shroud.
2. Lower and push the radiator (3) into the radiator shroud, and against the radiator support (2).
3. Install the cap screws, lock washers, and flat washers that fasten each side of the radiator (3) to the radiator support (2). Tighten the cap screws.
4. Disconnect the lifting equipment from the radiator (3).
5. Connect the bottom radiator hose (7) to the radiator (3).
6. Install the cap screws, flat washers, fan, and spacer on the engine. Tighten the cap screws to 54 to 60 Nm (480 to 528 pound-inches).
7. Install the fan shroud (5). Install the cap screws, lock washers, and flat washers that fasten the fan shroud (5) to the radiator (3). Tighten the cap screws.

**NOTE:** *Install any spacers that may have been used between the guard and the fan shroud.*

8. Install the guard (6).
9. Install the cap screws, lock washers, and flat washers that fasten the guard (6) to the fan shroud (5). Tighten the cap screws.
10. Connect the small hose.
11. Connect the upper radiator hose (4).
12. Remove the plug from the hose and connect the hose to the filler neck.
13. Install the hood. Disconnect the lifting equipment from the hood.
14. Install the cap screws, lock washers, and flat washers that fasten the hood. Tighten the cap screws. Install the plugs in the hood.
15. Remove the caps from the hoses and the plugs from the tube fittings. Connect the hoses to the tubes for the oil cooler.
16. Install the precleaner. If the air cleaner is equipped with a cap, install the cap and tighten the clamp.
17. Tighten the filler cap in the reservoir.
18. Make sure that the drain valve at the right front side of the radiator is closed. A new coolant filter must be installed with the new coolant. Fill the cooling system with coolant. If new coolant is being installed, the coolant must be at least half permanent antifreeze with the additive specified in Section 1002. The cooling system holds 32.2 litres (34 U.S. quarts) of coolant.
19. Install the radiator cap. Move the cover over the radiator cap and tighten the cap screw that fastens the cover.
20. Turn the master disconnect switch to the ON position.
21. Start the engine and run the engine at low idle. Check to see that the gauges show the correct indication. Check for coolant and oil leaks. Stop the engine.
22. Close the grille (1).



**Suggest:**


**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

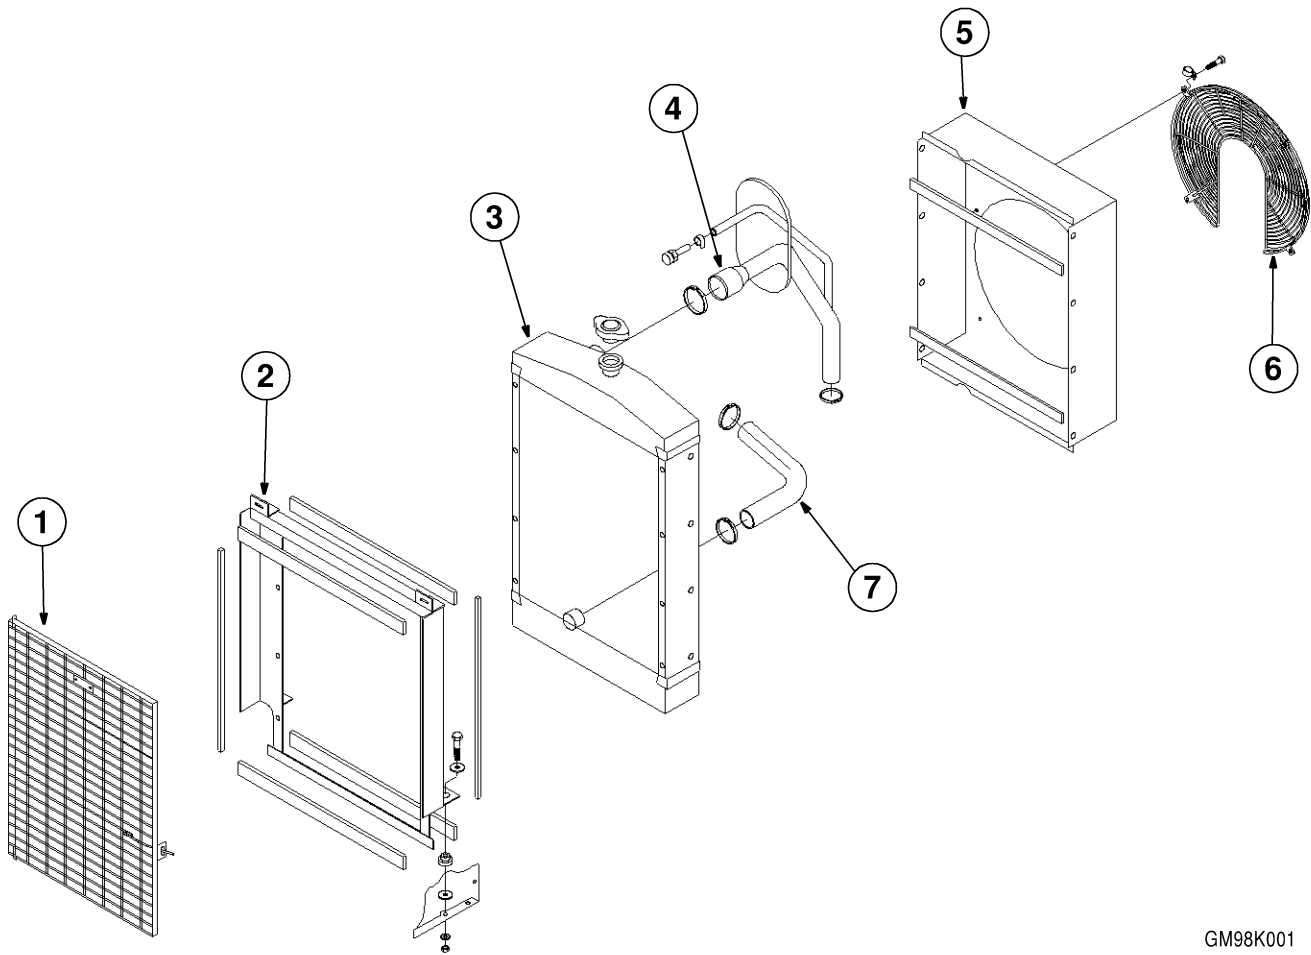

GM98K001

- 1. GRILLE
- 2. RADIATOR SUPPORT
- 3. RADIATOR

- 4. UPPER RADIATOR HOSE
- 5. FAN SHROUD
- 6. GUARD

- 7. BOTTOM RADIATOR HOSE

Figure 2. RADIATOR

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**