

1080/1080B EXCAVATOR TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-42680
Maintenance and Lubrication	1002	8-42680
General Engine Specifications (Case Engine) - 1080	1010	8-25780
General Engine Specifications (Case Engine) - 1080B	1010	8-27550
Detailed Engine Specifications (Case Engine) - 1080B	1020	8-22760
Detailed Engine Specifications (Case Engine) - 1080	1320	8-20040
2 ENGINE		
Engine and Radiator Removal and Installation	2000	8-42680
Engine Accessories (Air Cleaner, Ether Injection System, Turbocharger, Pump Drive Plate, Exhaust System)	2001	8-42680
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	8-22560
Cylinder Block, Sleeves, Pistons and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	9-76187
Lubrication System (1080B)	2045	9-78046
Lubrication System (1080)	2046	8-22780
Cooling System	2055	9-76337
Engine Troubleshooting	2201	8-20111
Reconditioning Large Bore Case Engine Blocks	2290	8-21170
Turbocharger Failure Analysis	2565	9-78235
Detroit Diesel Engine Manual - In Line 71		6-SE-250
3 FUEL SYSTEM		
Fuel Lines, Fuel Tank, and Engine Controls	3001	8-42680
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pump	3012	9-74937
17 mm Fuel Injectors	3213	8-20240
4 ELECTRICAL		
Electrical System Specifications and Troubleshooting	4002	8-42681
Wiring Schematics	4003	8-42681
Batteries	4005	8-42680
Starter	4006	8-41430
Alternator	4007	8-42680
5 TRACK AND SUSPENSION		
Troubleshooting the Track System	5502	8-42680
Track Chain and Shoes	5503	8-42681
Track Rollers, Carriers Rollers, Idlers, Track Adjuster Cylinders, and Sprockets	5506	8-42681
6 POWER TRAIN		
Troubleshooting	6302	8-38240
Drive Motor Circuit and Lines	6311	8-42680
Drive Motor	6312	8-42680
Final Drive Transmission (1080)	6317	8-42681
Final Drive Transmission (1080B)	6318	8-42680

DIVISION/SECTION	SECTION NO.	FORM NO.
7 BRAKES		
House Brakes	7011	8-38240
Drive Brakes	7012	8-42680
8 HYDRAULICS		
Maintenance and Service	8201	8-42680
Hydraulic System Specifications, Schematics, Troubleshooting, Pressure Checks, and Flowmeter Tests	8202	8-42681
Hydraulic Pump	8205	8-42680
Control Valves	8207	8-42680
Swing Hydraulic Circuit, Swing Motor, and Swing Relief Valve	8210	8-42681
Boom Hydraulic Circuit	8211	8-42681
Dipper Hydraulic Circuit	8212	8-42681
Bucket Hydraulic Circuit	8213	8-42681
Leveler Hydraulic Circuit	8215	8-42681
Hydraulic Swivel	8218	8-42681
Pilot Control System	8220	8-42681
Power Sensing Valve	8221	8-38240
Cylinders	8290	8-42681
9 MOUNTED EQUIPMENT		
Troubleshooting (Swing Mechanism)	9202	8-38240
Swing Gearbox	9210	8-42681
Boom	9211	8-42681
Attachments (Wrist-O-Twist, Buckets)	9213	8-42681
Turntable Leveler	9215	8-38230
Turntable Bearing and Related Parts	9216	8-42681
Decals and Painting	9221	8-42681
REAR POCKET		
Electrical Schematic (1080)		830882A
Electrical Schematic (1080B)		860505
Hydraulic Schematic (Pilot Controls Two Speed Drive Motor) - 1080 and 1080B		840970
Hydraulic Schematic (Pilot Controls Single Speed Drive Motor) - 1080		840971
Hydraulic Schematic (Hydraulic Circuits) - 1080 and 1080B		840972

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

1001

SAFETY RULES, SERVICE MANUAL INTRODUCTION, AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules	1001-2
Service Manual Introduction	1001-4
Torque Specifications - U.S. Hardware	1001-5
Torque Specifications - Metric Hardware	1001-6
Torque Specifications - Steel Hydraulic Fittings	1001-7

Written In *Clear
And
Simple
English*


SAFETY RULES

 This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. 1-1-C


NOTE: To prevent injury on job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.

The procedures recommended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.


Put the warning tag shown below on the key for the key switch when you are servicing or repairing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.

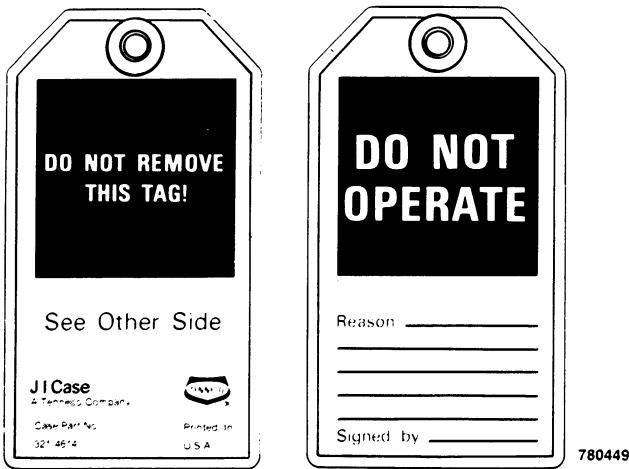



 **WARNING:** This is a one man machine, no riders allowed. 35-8


 **WARNING:** Before starting engine, study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.


It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and service manuals may be obtained from your J I Case dealer. 45-2

 **WARNING:** If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing. 45-3-A

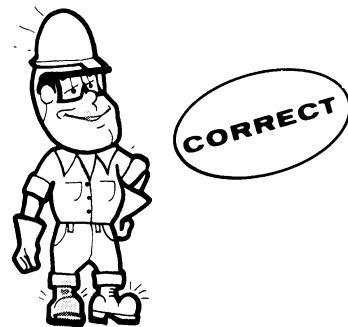

 **WARNING:** Read operator's manual to familiarize yourself with control lever functions. 46-27

 **WARNING:** Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury. 48-55

 **WARNING:** When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution. 35-4



WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. **DO NOT** change the procedure. 47-44



WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way. 47-45



WARNING: Use insulated gloves or mittens when working with hot parts. 47-41A



CAUTION: Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service. 49-11



CAUTION: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks; use a piece of cardboard or wood. 40-6-A



CAUTION: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer. 46-17



CAUTION: When using a hammer to remove and install pivot pins or separate parts, using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors). 46-13



CAUTION: When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times. 40-8



CAUTION: Use suitable floor (service) jacks or chain hoists to raise wheels or track off the floor. Always block machine in place with suitable safety stands. 40-7-A



CAUTION: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this service manual. 40-10




DANGER: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. If you do not have an exhaust pipe extension, open the doors and get outside air into the area. 48-56

SERVICE MANUAL INTRODUCTION

This service manual has been prepared with the latest service information available. Troubleshooting, removal, disassembly, inspection and installation procedures, and complete specifications and tightening references can be found in most sections. Some sections have drawings but no written procedure because the job is so easily done. This service manual is one of the most important tools available to the service technician.

Right, Left, Front, and Rear

The terms right-hand and left-hand and front and rear as used in this manual indicate the right and left sides, and front and rear of the machine as seen from the operator's seat for correct operation of the machine or attachment.

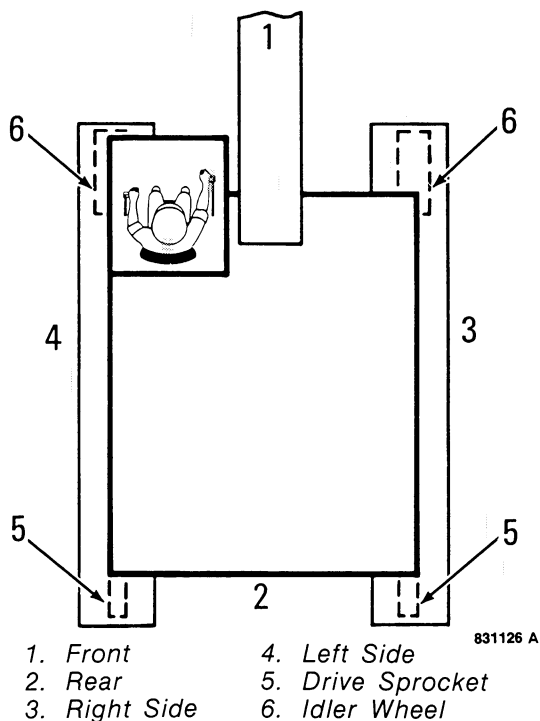

Page Numbers

All page numbers are made of two numbers separated by a dash, such as 4002-9. The number before the dash is the section number. The number following the dash is the page number in that section. Page numbers will be found at the upper right or left of each page.

Illustrations

Illustrations are put as near as possible to the text and are to be used as part of the text.

Clear and Simple English

This manual is written in C.A.S.E. (Clear and Simple English). C.A.S.E. is easier to read than "regular" English because C.A.S.E. uses a small number of common words and has special rules for writing.

All sections written in C.A.S.E. are indicated by the symbol below.

Written In *Clear
And
Simple
English*

Special Tools

Special tools are needed to remove and install, disassemble and assemble, check and adjust some component parts of this machine. Some special tools can be easily made locally and the necessary information to make the tool is in this service manual. Other special tools are more difficult to make locally and are available from Service Tools in the U.S. and from Jobborn Manufacturing in Canada. Use these tools according to the instructions in this service manual for your personal safety and to do the job correctly.

Order special tools from either of the following companies.

Service Tools
P.O. Box 314
Owatonna, Minnesota 55060


Jobborn Manufacturing Co.
97 Frid Street
Hamilton, Ontario L8P 4M3
Canada


Table of Contents

A Table of Contents is in the front of this manual. The Table of Contents shows the main divisions and the sections that are in each division. The individual sections, where necessary, also have a Table of Contents.

TORQUE SPECIFICATIONS - U.S. HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, moly-disulfide greases, or other extreme pressure lubricants are used.


Grade 5 Bolts, Nuts, and Studs			
			
Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	9-11	12-15	1.2-1.5
5/16 in 7.9 mm	17-21	23-28	2.4-2.9
3/8 in 9.5 mm	35-42	48-57	4.8-5.8
7/16 in 11.1 mm	54-64	73-87	7.5-8.8
1/2 in 12.7 mm	80-96	109-130	11.1-13.3
9/16 in 14.3 mm	110-132	149-179	15.2-18.2
5/8 in 15.9 mm	150-180	203-244	20.8-24.9
3/4 in 19.0 mm	270-324	366-439	37.3-44.8
7/8 in 22.2 mm	400-480	542-651	55.3-66.4
1.0 in 25.4 mm	580-696	787-944	80.2-96.2
1-1/8 in 28.6 mm	800-880	1085-1193	111-122
1-1/4 in 31.8 mm	1120-1240	1519-1681	155-171
1-3/8 in 34.9 mm	1460-1680	1980-2278	202-232
1-1/2 in 38.1 mm	1940-2200	2631-2983	268-304

Grade 8 Bolts, Nuts, and Studs			
			
Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	12-15	16-20	1.7-2.1
5/16 in 7.9 mm	24-29	33-39	3.3-4.0
3/8 in 9.5 mm	45-54	61-73	6.2-7.5
7/16 in 11.1 mm	70-84	95-114	9.7-11.6
1/2 in 12.7 mm	110-132	149-179	15.2-18.2
9/16 in 14.3 mm	160-192	217-260	22.1-26.5
5/8 in 15.9 mm	220-264	298-358	30.4-36.5
3/4 in 19.0 mm	380-456	515-618	52.5-63.0
7/8 in 22.2 mm	600-720	814-976	83.0-99.5
1.0 in 25.4 mm	900-1080	1220-1465	124-149
1-1/8 in 28.6 mm	1280-1440	1736-1953	177-199
1-1/4 in 31.8 mm	1820-2000	2468-2712	252-277
1-3/8 in 34.9 mm	2380-2720	3227-3688	329-376
1-1/2 in 38.1 mm	3160-3560	4285-4827	437-492


TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when special torques are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or moly-disulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs 			
Size	Pound-Feet	Newton metres	Kilogram metres
M4 0.15 in	2-3	3-4	0.3-0.4
M5 0.19 in	5-6	6.5-8	0.7-0.8
M6 0.23 in	8-9	10.5-12	1.1-1.2
M8 0.31 in	19-23	26-31	2.6-3.2
M10 0.39 in	38-45	52-61	5.3-6.2
M12 0.46 in	66-79	90-107	9.1-10.9
M14 0.55 in	106-127	144-172	14.7-17.6
M16 0.62 in	160-200	217-271	22.1-27.7
M20 0.78 in	320-380	434-515	44.2-52.5
M24 0.94 in	500-600	675-815	69.1-83.0
M30 1.17 in	920-1100	1250-1500	127-152
M36 1.40 in	1600-1950	2175-2600	221-270

Grade 10.9 Bolts, Nuts, and Studs

			
Size	Pound-Feet	Newton metres	Kilogram metres
M4 0.15 in	3-4	4-5	0.4-0.5
M5 0.19 in	7-8	9.5-11	1.0-1.1
M6 0.23 in	11-13	15-17.5	1.5-1.8
M8 0.31 in	27-32	37-43	3.7-4.4
M10 0.39 in	54-64	73-87	7.5-8.8
M12 0.46 in	93-112	125-150	12.9-15.5
M14 0.55 in	149-179	200-245	20.6-24.7
M16 0.62 in	230-280	310-380	31.8-38.7
M20 0.78 in	450-540	610-730	62.2-74.7
M24 0.94 in	780-940	1050-1275	108-130
M30 1.17 in	1470-1770	2000-2400	203-245
M36 1.40 in	2580-3090	3500-4200	357-427

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	Kilogram metres
37 Degree Flare Fittings				
1/4 in 6.4 mm	7/16-20	6-12	8-16	0.8-1.7
5/16 in 7.9 mm	1/2-20	8-16	11-21	1.1-2.2
3/8 in 9.5 mm	9/16-18	10-25	14-33	1.4-3.5
1/2 in 12.7 mm	3/4-16	15-42	20-56	2.1-5.8
5/8 in 15.9 mm	7/8-14	25-58	34-78	3.5-8.0
3/4 in 19.0 mm	1-1/16-12	40-80	54-108	5.5-11.1
7/8 in 22.2 mm	1-3/16-12	60-100	81-135	8.3-13.9
1.0 in 25.4 mm	1-5/16-12	75-117	102-158	10.4-16.2
1-1/4 in 31.8 mm	1-5/8-12	125-165	169-223	17.3-22.8
1-1/2 in 38.1 mm	1-7/8-12	210-250	285-338	29.0-34.6

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	Kilogram metres
Straight Threads with O-ring				
1/4 in 6.4 mm	7/16-20	12-19	16-25	1.7-2.6
5/16 in 7.9 mm	1/2-20	16-25	22-33	2.2-3.5
3/8 in 9.5 mm	9/16-18	25-40	34-54	3.5-5.5
1/2 in 12.7 mm	3/4-16	42-67	57-90	5.8-9.3
5/8 in 15.9 mm	7/8-14	58-92	79-124	8.0-12.7
3/4 in 19.0 mm	1-1/16-12	80-128	108-174	11.1-17.8
7/8 in 22.2 mm	1-3/16-12	100-160	136-216	13.8-22.1
1.0 in 25.4 mm	1-5/16-12	117-187	159-253	16.2-25.9
1-1/4 in 31.8 mm	1-5/8-12	165-264	224-357	22.8-36.5
1-1/2 in 38.1 mm	1-7/8-12	250-400	339-542	34.6-55.3

Split Flange Mounting Bolts			
Size	Pound- Feet	Newton metres	Kilogram metres
5/16-18	15-20	20-27	2.1-2.8
3/8-16	20-25	26-33	2.8-3.5
7/16-14	35-45	47-61	4.7-6.2
1/2-13	55-65	74-88	7.6-9.0
5/8-11	140-150	190-203	19.4-20.7

2000

ENGINE AND RADIATOR REMOVAL AND INSTALLATION

TABLE OF CONTENTS


Engine	2000-2	Radiator	2000-4
Removal	2000-2	Removal	2000-5
Installation	2000-3	Installation	2000-5

Written In *Clear
And
Simple
English*

ENGINE

Removal

1. Park the machine on a level surface.
2. Lower the boom until the bucket is flat on the floor.
3. Stop the engine.
4. Move the drive brake switch to the ON position.
5. Move the battery disconnect switch to the OFF position or disconnect the battery cable from the negative terminal of the battery.
6. Remove the muffler.
7. Remove the engine top covers.
8. Remove the radiator cap.
9. Find the drain valve at the bottom of the radiator. Drain the coolant from the radiator.
10. Find the drain valve for the engine block at the front of the engine. Find the drain valve for the engine block at the engine oil cooler. Drain the coolant from the engine block.
11. Disconnect the air cleaner hose from the inlet of the turbocharger. Loosen the clamps on the hose as necessary to move the hose out of the way. Use tape to cover the inlet of the turbocharger to keep dirt out of the turbocharger.
12. Remove all clamps and tie straps as necessary for engine removal.
13. Disconnect the fuel lines from the fuel injection pump.
14. Disconnect the radiator hoses from the engine.
15. Disconnect the throttle cable from the fuel injection pump. Move the throttle cable out of the way.
16. Disconnect the fuel shutoff cable from the fuel injection pump. Move the fuel shutoff cable out of the way.
17. Disconnect the thermostat for the ether injection system from the engine.
18. Disconnect the tube from the ether injection cylinder at the valve fitting. Use a tie strap to fasten the tube to the front of the engine.
19. Disconnect the heater hoses from the tubes at the engine. Move the heater hoses out of the way.
20. Disconnect the engine wiring harness from the cab wiring harness.
21. Remove the side cover from the left side of the machine.

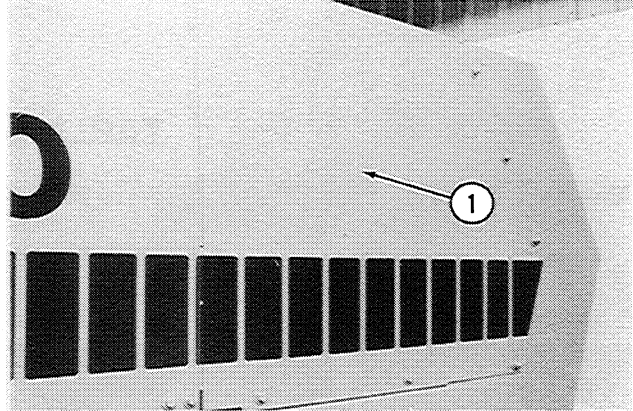

1. Left Side Cover

418926


22. Connect lifting equipment to the hydraulic pump. The weight of the hydraulic pump is approximately 102 pounds (46 kg).
23. Loosen and remove the cap screws and lock-washers that fasten the hydraulic pump to the engine.
24. Pull the hydraulic pump away from the engine. Use a piece of wire to fasten the hydraulic pump to the outside frame of the turntable.
25. Disconnect the ground strap from the engine.
26. Disconnect the battery ground cable from the ground terminal on the starter.
27. Disconnect the other battery cable from the terminal on the starter solenoid.
28. Disconnect the hoses from the pump for the pilot control circuit. Install plugs in the hoses and caps on the fittings. Move the hoses out of the way.
29. Loosen and remove the machine screws that fasten the fan shroud to the radiator.
30. Fasten the fan shroud to the engine fan.
31. Fasten lifting equipment to the engine.
32. Loosen and remove the self-locking nuts, flat washers, and bolts that fasten the engine to the turntable.

33. Make sure that all the wires and hoses are disconnected and out of the way. Raise the engine.
34. Remove the engine from the machine.

Installation

1. Connect lifting equipment to the engine.
2. Raise the engine into alignment with the machine. Lower the engine into the machine.
3. Align the engine mounts with the turntable. Install the bolts, flat washers, and self-locking nuts. Tighten to 220 pound-feet (298 N m, 30 kg/m).
4. Disconnect the lifting equipment from the engine.
5. Install the fan shroud on the radiator. Make sure that the clearance between the fan and the fan shroud is equal all the way around the fan shroud.
6. Connect the hoses to the pump for the pilot control circuit.
7. Connect the battery cable clamps to the engine.
8. Connect the positive battery cable to the starter solenoid.
9. Connect the negative battery cable to the ground terminal on the starter.
10. Connect the ground strap to the engine.
11. Connect lifting equipment to the hydraulic pump. Move the hydraulic pump into position. Rotate the drive shaft of the hydraulic pump to align the splines of the drive shaft with the drive plate on the engine.
12. Push the hydraulic pump against the engine. Install the cap screws and lock washers.
13. Tighten the cap screws to 150 to 180 pound-feet (203 to 244 N m, 21 to 25 kg/m).
14. Connect the engine wiring harness to the cab wiring harness.
15. Connect the heater hoses to the tubes at the engine.
16. Connect the tube for the ether injection cylinder to the valve fitting.
17. Connect the thermostat for the ether injection system to the engine.
18. Connect the fuel shutoff cable to the fuel injection pump. Install the clamps to fasten the fuel shutoff cable in place.
19. Connect the throttle cable to the fuel injection pump. Fasten the throttle cable to the mounting bracket.
20. Connect the radiator hoses to the engine.
21. Connect the fuel lines to the fuel injection pump.
22. Connect the air cleaner hose to the inlet of the turbocharger. Tighten the clamps on the hose.
23. See Section 1002 for the correct amount and type of coolant. Fill the radiator with coolant.
24. Move the battery disconnect switch to the ON position or connect the negative battery cable to the negative terminal of the battery.
25. Start and run the engine at idle.
26. Check for coolant and oil leakage.
27. Operate the engine until the coolant is at operating temperature. Add coolant as required. Install the radiator cap.
28. Stop the engine.
29. Install the tie straps to fasten the heater hoses to the wiring harness.
30. Install tie straps to fasten the throttle cable in position.
31. Install tie straps to fasten the fuel shutoff cable in position.
32. Install the tie straps to fasten the hoses for the pilot control pump to the engine.
33. Install the engine top covers.
34. Install the muffler.
35. Install the side cover on the left side of the machine.

RADIATOR

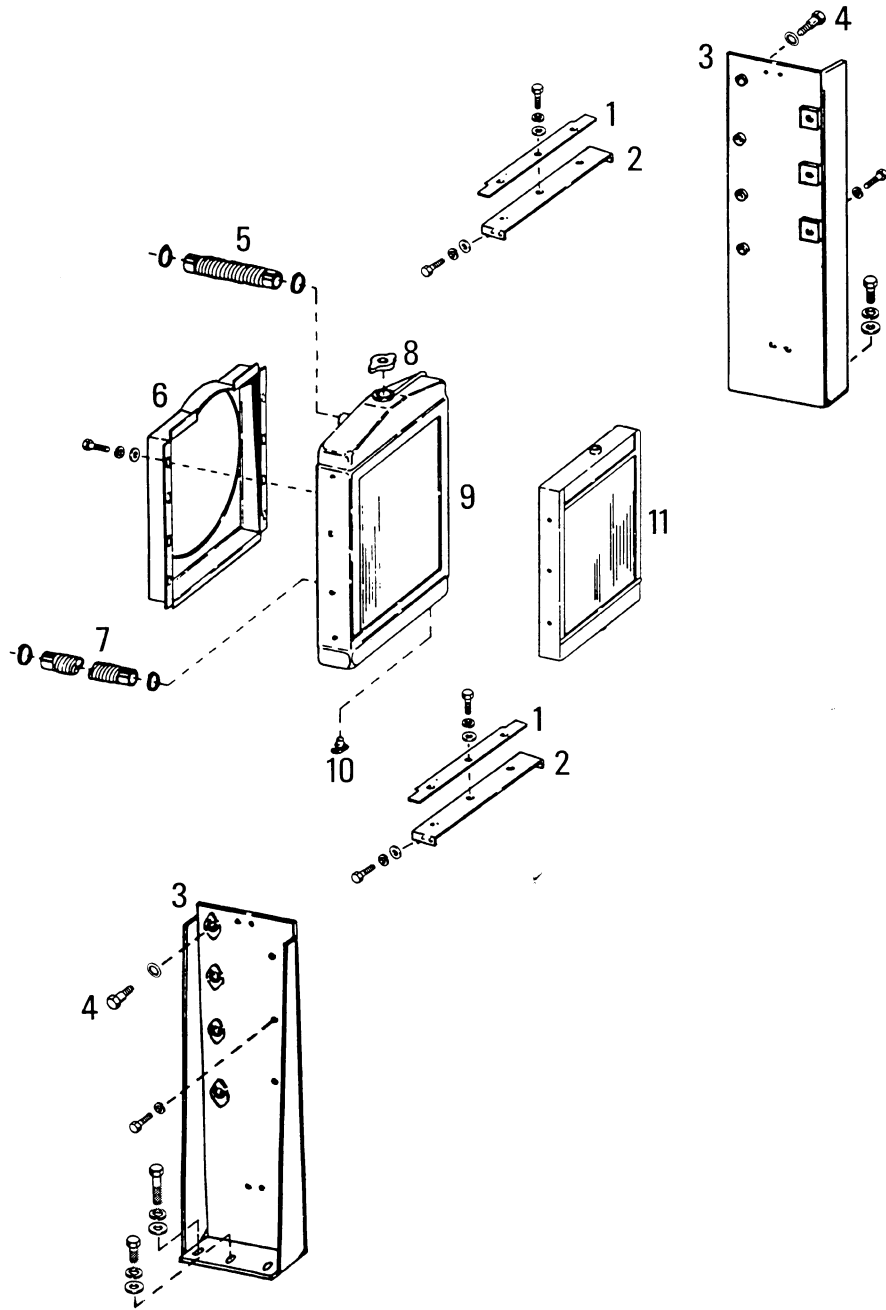

- 1. Cover Strip
- 2. Bracket
- 3. Mounting Bracket
- 4. Allen Head Screw

- 5. Upper Radiator Hose
- 6. Fan Shroud
- 7. Lower Radiator Hose
- 8. Radiator Cap

- 9. Radiator
- 10. Drain Valve
- 11. Oil Cooler

831132

Radiator Installation

Removal

1. Park the machine on a level surface.
2. Lower the boom until the bucket is flat on the floor.
3. Stop the engine.
4. Open the cover above the radiator.
5. Use a piece of wire to fasten the cover open.
6. Remove the radiator cap.
7. Find the drain valve for the radiator. Drain the coolant from the radiator.
8. Find the drain valve for the engine block at the front of the engine. Find the drain valve for the engine block at the engine oil cooler, Drain the coolant from the engine block.
9. Disconnect the radiator hoses from the engine and the radiator. Remove the radiator hoses.
10. Loosen and remove the cap screws that fasten the cover strip to the bracket at the top of the radiator. Remove the the cover strip.
11. Loosen and remove the cap screws, lock washers, and flat washers that fasten the bracket at the top of the radiator. Remove the bracket.
12. Loosen and remove the machine screws that fasten the fan shroud to the radiator.
13. Use a piece of wire to fasten the fan shroud to the fan.
14. Connect lifting equipment to the radiator.
15. Loosen and remove the Allen head screws that fasten the radiator to the mounting brackets.

16. Lift the radiator out of the top of the machine.


Installation

1. Connect the lifting equipment to the radiator. Carefully lower the radiator between the fan of the engine and the oil cooler.
2. Align the holes in the radiator with the holes in the mounting brackets. Install the Allen head screws to fasten the radiator in place.
3. Remove the lifting equipment.
4. Install the fan shroud on the radiator. Make sure that the clearance between the fan and the fan shroud is equal all the way around the fan shroud.
5. Install the bracket and cover strip at the top of the radiator.
6. Install the upper and lower radiator hoses. Tighten the clamps.
7. Close the drain valves on the radiator, engine block, and engine oil cooler.
8. See Section 1002 and fill the radiator with coolant.
9. Start and run the engine at idle.
10. Check for coolant leakage.
11. Operate the engine until the coolant is at operating temperature. Fill the radiator with coolant. Install the radiator cap.
12. Stop the engine.
13. Close the cover above the radiator.

AIR CLEANER

Restriction Indicator

Check the restriction indicator every 10 hours of operation or each day, whichever occurs first.

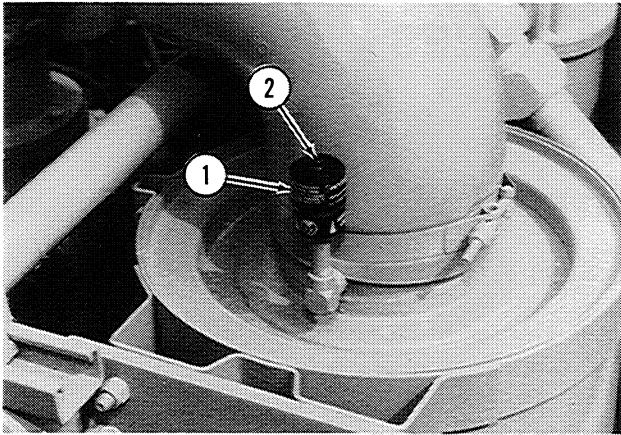


1. Restriction Indicator
2. Button

A845539

If the red band in the restriction indicator is in full view, clean or replace the air cleaner elements. Do not run the engine when the red band is in full view. Push the button to set the restriction indicator with the green band in view.

Dust Valve

Remove and clean the dust valve after every 50 hours of operation.

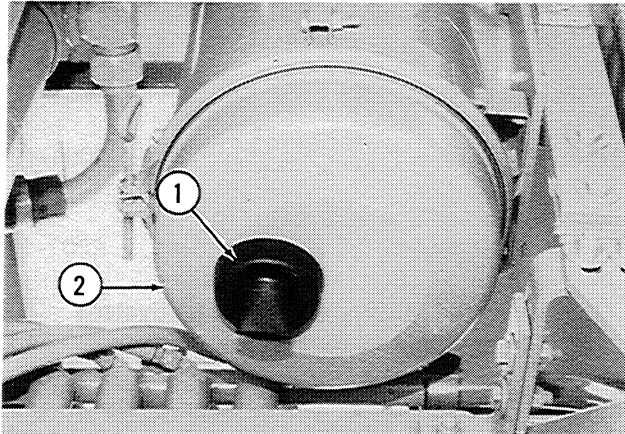

1. Dust Valve
2. Cover


835281

Replacing Elements

1. Remove the air cleaner cover.

2. Remove and clean the primary element. See Cleaning Primary Element on page 2001-3. Replace the primary element after cleaning six times.


NOTE: The date of manufacture is on the end cap of the primary element. Do not install a primary element that is more than two years old.

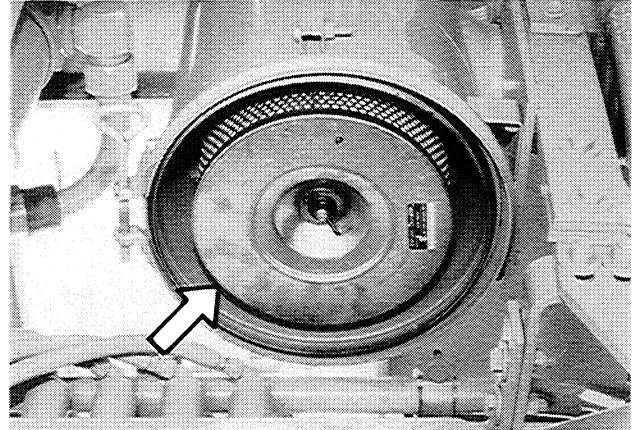

Primary Element

835282

3. Replace the secondary element if you are servicing the primary element for the third time, if the date of manufacture on the end cap shows the secondary element is two years old, or if the secondary element is damaged.

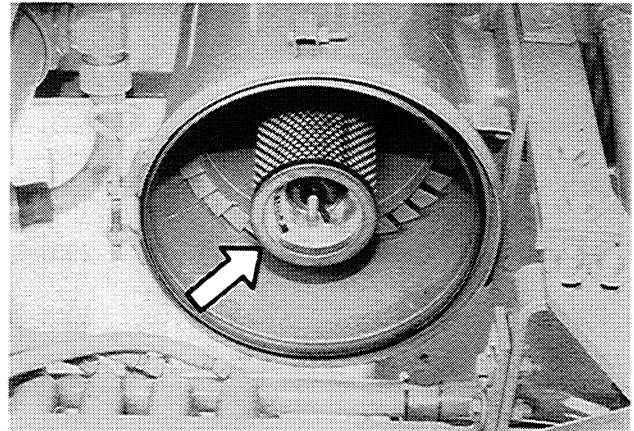


Secondary Element

835283

4. After the primary element is clean and dry, use a lamp to inspect the primary element for damage. Look for holes, wear, bent end covers, etc. Discard the primary element if damaged.

5. Install the primary element.
6. Install the air cleaner cover.

7. Push the button on the top of the restriction indicator to remove the red band from view.

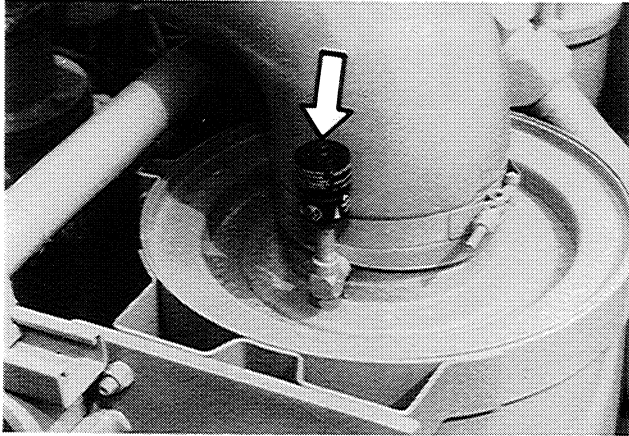

1. Button

A845539


8. Start the engine. If the red band shows in the restriction indicator, replace the secondary element.

NOTE: Do not clean the secondary element.

Cleaning Primary Element

WASHING: Washing is the best method for cleaning the primary element. Wash the primary element with D-1400 detergent (Case part number A40910). The primary element must be dry before installation in the air cleaner. Do not use compressed air to dry the primary element.


COMPRESSED AIR: Use compressed air that is not more than 30 psi (206 kPa, 2.1 kg/cm³) at the nozzle. Use the compressed air inside the primary element and 1 inch (25 mm) or more in distance from the primary element. Cleaning the primary element with compressed air will not remove carbon or soot.

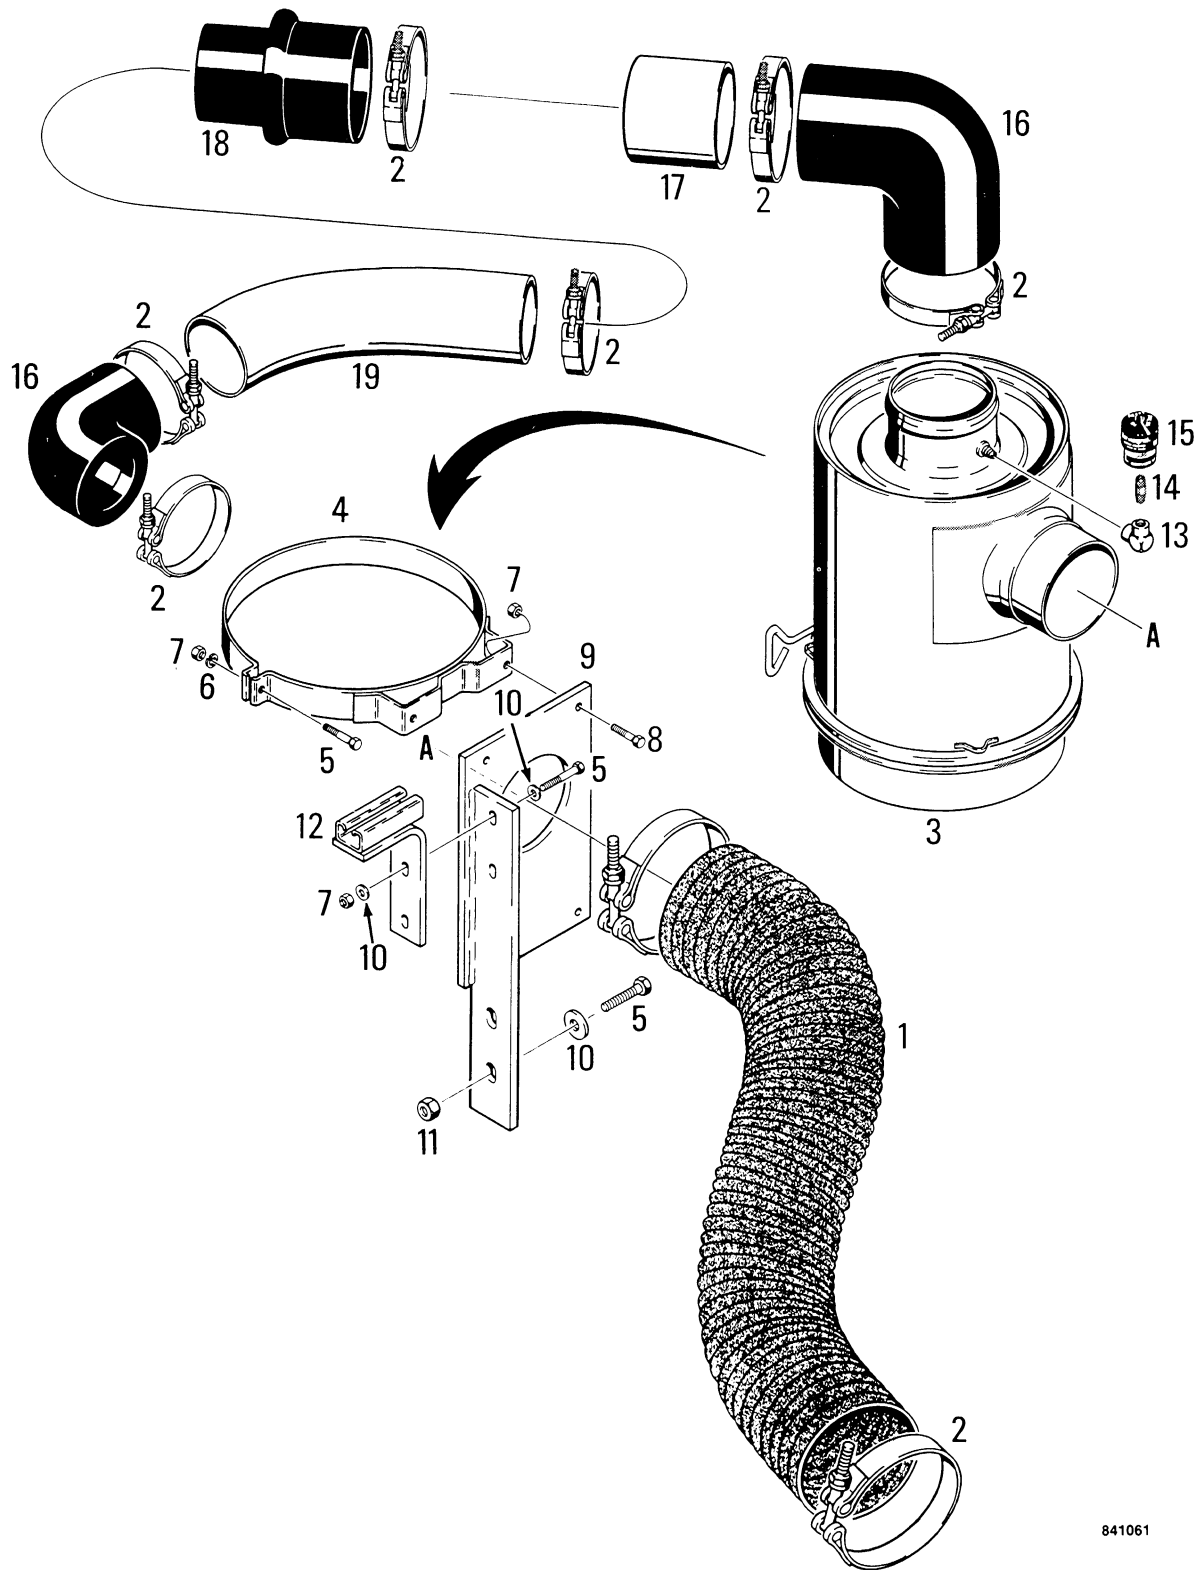

841061


- | | | | |
|----------------|---------------------|---------------------------|------------------|
| 1. Hose | 6. Lock Washer | 11. Self-Locking Nut | 16. Rubber Elbow |
| 2. Clamp | 7. Nut | 12. Bracket | 17. Tube |
| 3. Air Cleaner | 8. Bolt | 13. Elbow | 18. Reducer |
| 4. Band | 9. Mounting Bracket | 14. Nipple | 19. Bent Tube |
| 5. Bolt | 10. Washer | 15. Restriction Indicator | |

Air Cleaner Installation on Case Engines

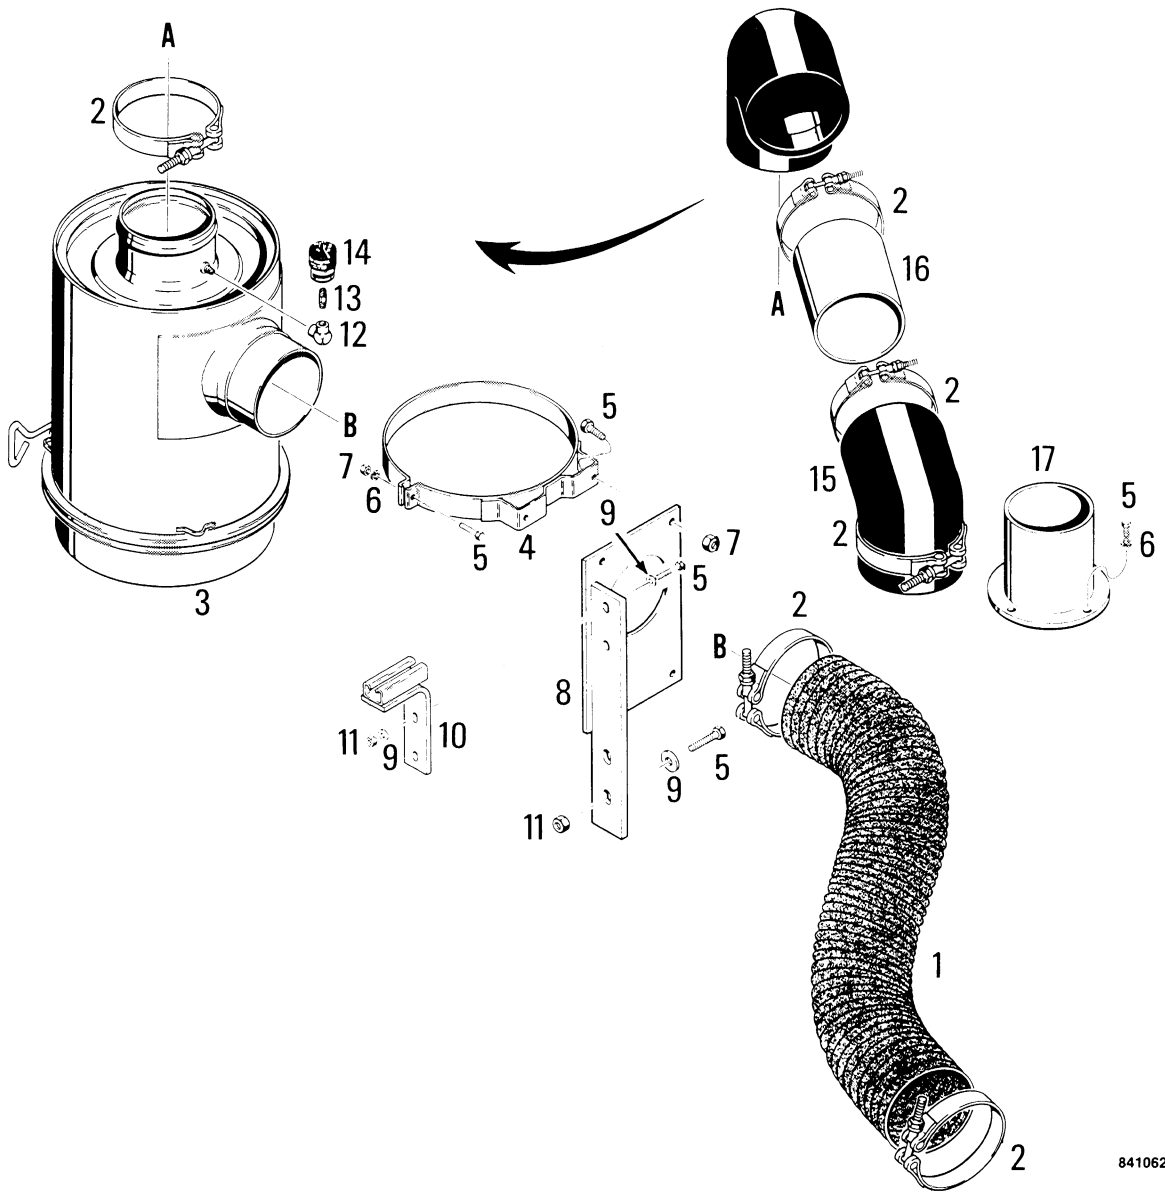

- | | | | |
|----------------|---------------------|---------------------|---------------------------|
| 1. Hose | 6. Lock Washer | 10. Support Bracket | 14. Restriction Indicator |
| 2. Clamp | 7. Nut | 11. Nut | 15. Rubber Elbow |
| 3. Air Cleaner | 8. Mounting Bracket | 12. Elbow | 16. Tube |
| 4. Band | 9. Washer | 13. Nipple | 17. Flange |
| 5. Bolt | | | |

Air Cleaner Installation on GMC Engines

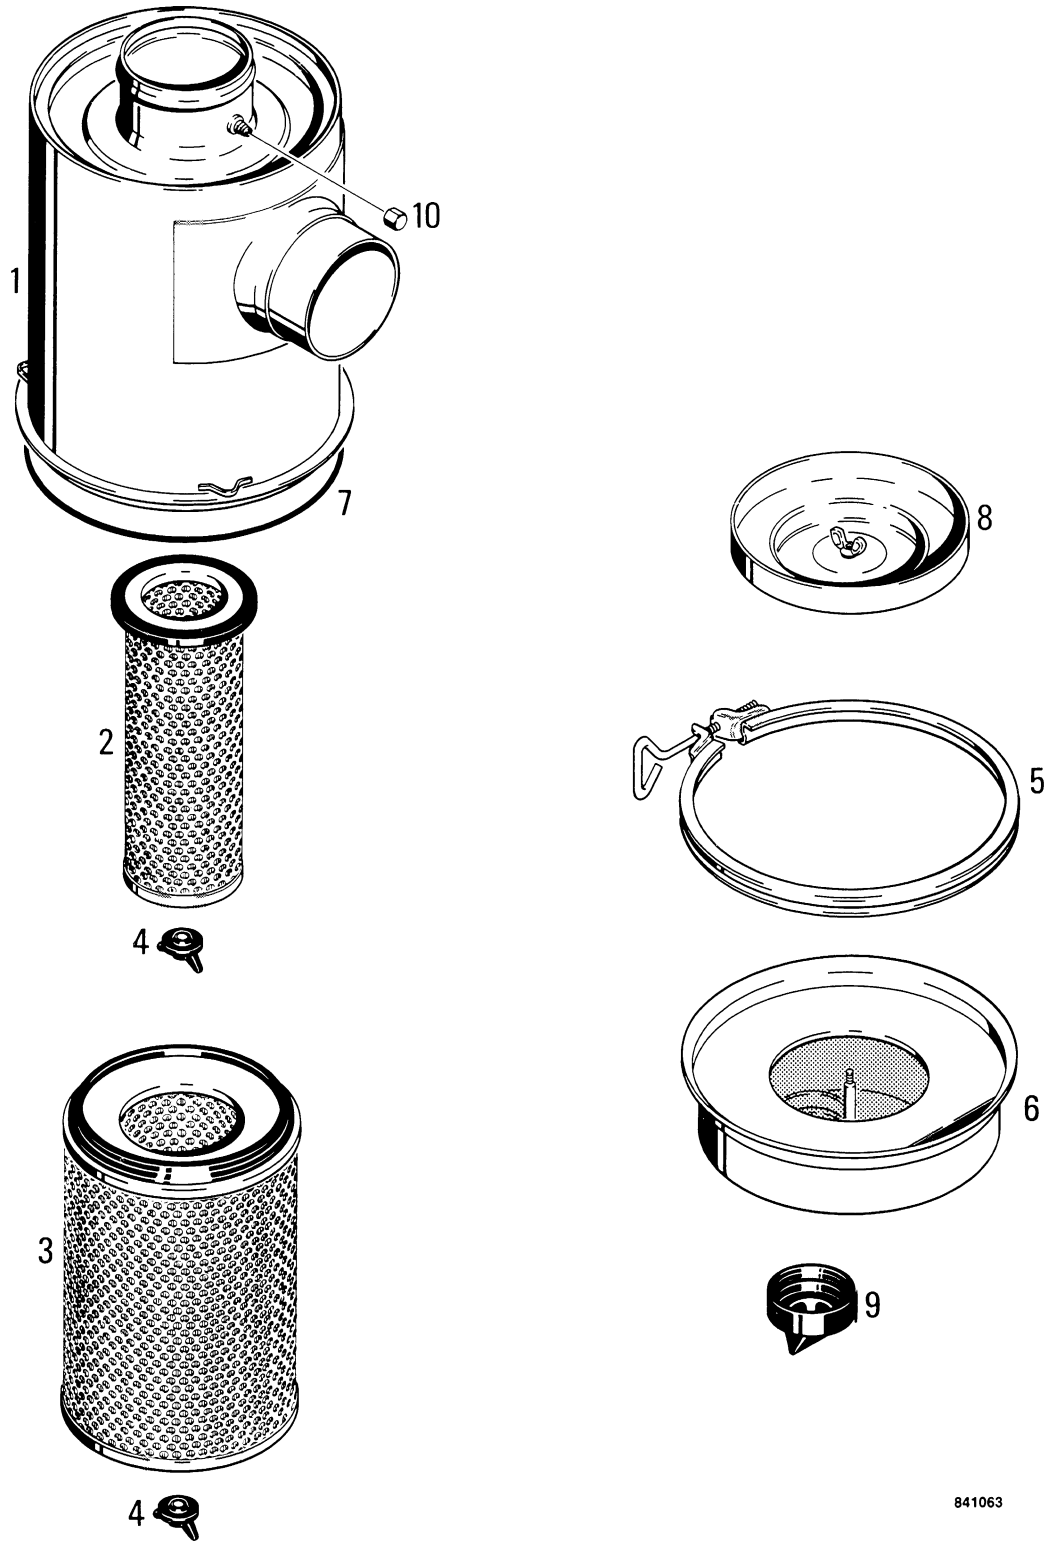

841063

- 1. Body
- 2. Inner Element
- 3. Outer Element
- 4. Wing Nut

- 5. Clamp
- 6. Dust Cup
- 7. O-ring

- 8. Baffle
- 9. Dust Valve
- 10. Cap

Air Cleaner


ETHER INJECTION SYSTEM

WARNING: An explosion can occur if sparks or flame make contact with the starting fluid in the starting fluid container or if you keep the starting fluid container in an area with a temperature above 120° F (49° C). Read the following information.

1. Know the correct method for operating the ether injection system.
2. Always remove the starting fluid container from the machine before you weld, grind, or use a cutting torch on the machine. Use compressed air to remove any starting fluid fumes from the area.
3. Do not breathe the starting fluid fumes or let the starting fluid make contact with your skin.
4. Keep the starting fluid container out of the reach of children.
5. Never make a hole in the starting fluid container.
6. Do not put the starting fluid container in a fire.



Failure to follow the above instructions can cause a severe injury. 48-20

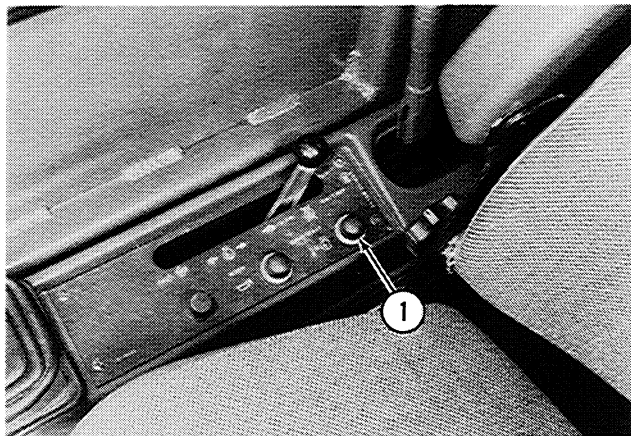

1. Cold Start Button


AB45584

The optional cold start system is an aid to help start the engine in cold weather. The cold start system operates only when the engine is cold. The cold start system injects a measured amount of ether into the intake manifold each time you push the cold start button.

1. See Starting the Engine in the operators manual to learn the correct steps in starting the engine.
2. Turn the key to the START position and push the cold start button two times. Release the key as soon as the engine starts to run.

NOTE: If the engine runs for a short time and then stops, repeat step 2. If the engine will not start, see Starting Fluid Can on this page and check to make sure the starting fluid can is not empty.

Starting Fluid Can

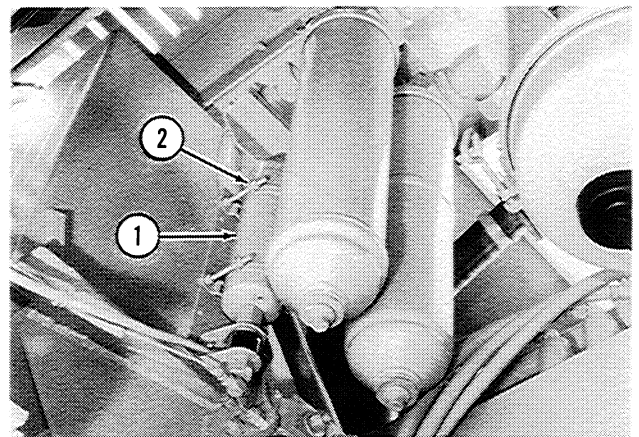


1. Starting Fluid Can
2. Mounting Clamp

835284

IMPORTANT: Read the information and warnings on the starting fluid can.

1. Loosen the bottom mounting clamp.
2. Remove the top mounting clamp.
3. Turn the starting fluid can counterclockwise and remove the starting fluid can from the solenoid valve.
4. Install a new starting fluid can. Tighten the starting fluid can hand tight.
5. Tighten the lower mounting clamp.
6. Install the upper mounting clamp.

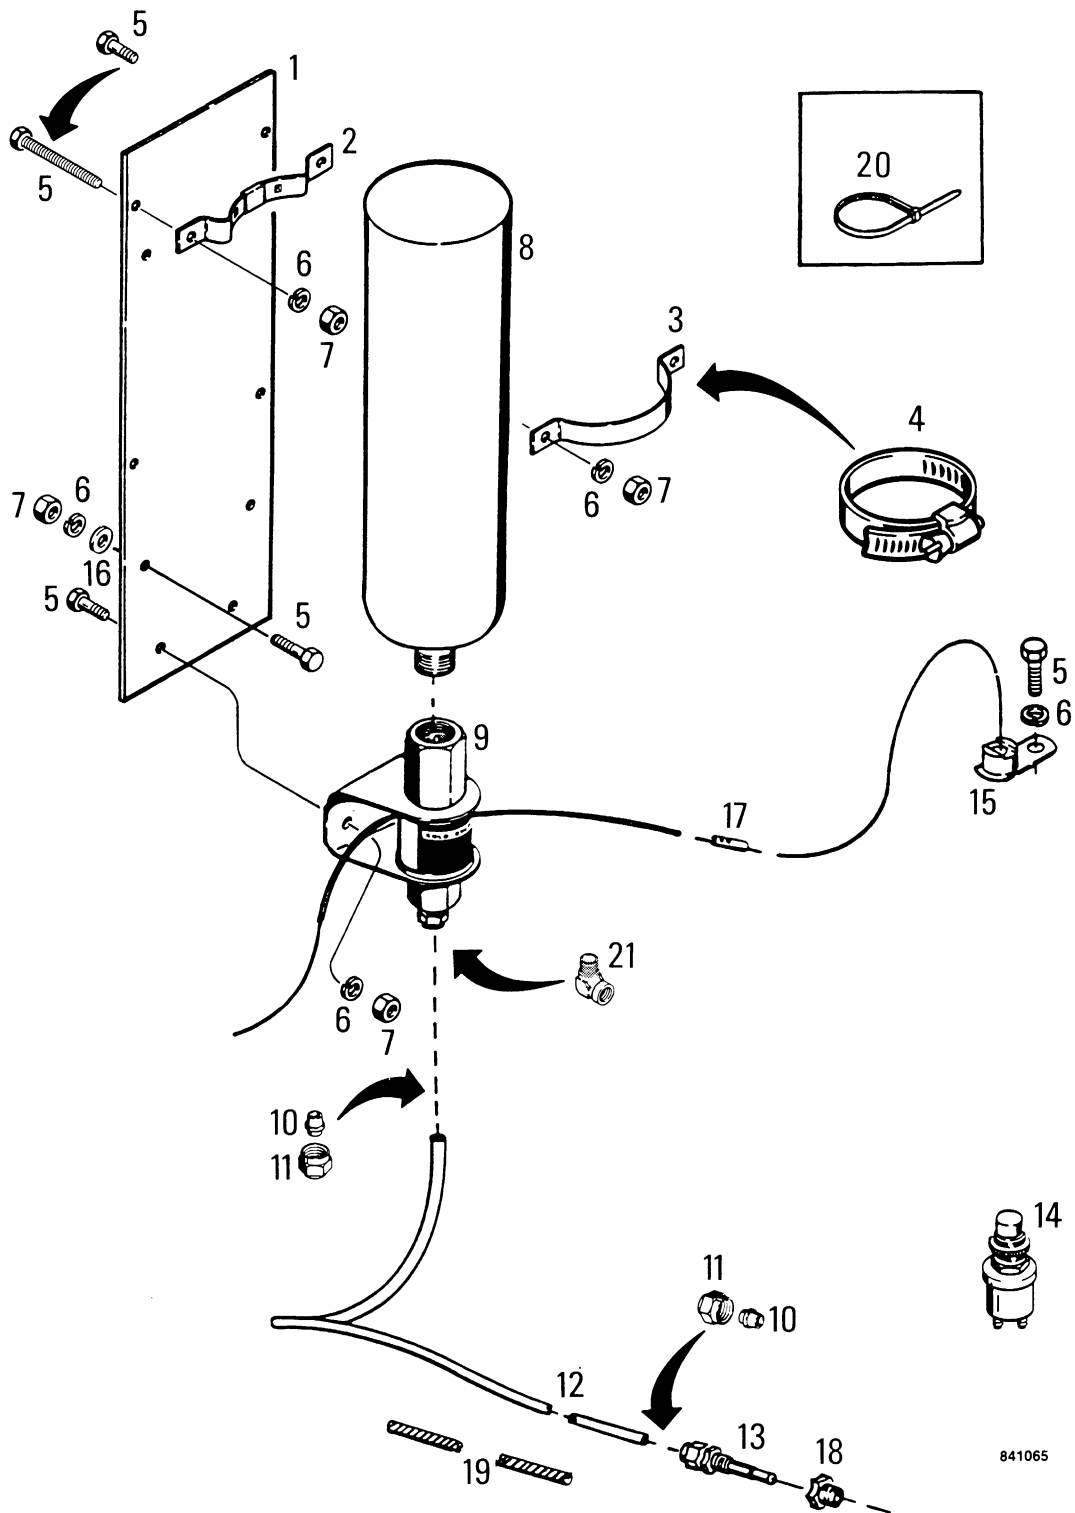

- | | | | |
|----------------|-------------|-----------------|------------------|
| 1. Plate | 7. Nut | 12. Tube | 17. Connector |
| 2. Bracket | 8. Cylinder | 13. Nozzle | 18. Reducer |
| 3. Clamp | 9. Valve | 14. Switch | 19. Loom |
| 4. Hose Clamp | 10. Sleeve | 15. Thermostat | 20. Tie Strap |
| 5. Bolt | 11. Nut | 16. Flat Washer | 21. Street Elbow |
| 6. Lock Washer | | | |

Ether Injection System

841065

TURBOCHARGER - CASE ENGINE

Removal

1. Park the machine on a level surface.
2. Lower the boom until the bucket is on the floor.
3. Decrease the engine speed to idle. Stop the engine.
4. Remove the muffler.
5. Remove the hood top.
6. Disconnect the air cleaner hose from the inlet of the turbocharger.
7. Disconnect the hose on the intake elbow from the turbocharger.
8. Loosen and remove the cap screws, lock washers, and flat washers that fasten the brace to the exhaust elbow.
9. Loosen and remove the cap screws and lock washers that fasten the exhaust elbow to the engine. Remove the exhaust elbow and connector.
10. Disconnect the oil supply tube from the fitting at the top of the turbocharger.
11. Loosen and remove the cap screws and lock washers that fasten the oil drain tube to the bottom of the turbocharger.
12. Loosen and remove the nuts and lock washers that fasten the turbocharger to the engine.
13. Remove the turbocharger.
14. Use tape to close the end of the intake elbow and the holes in the exhaust manifold.
15. Check the condition of the rubber sleeve on the oil supply tube. Use a new rubber sleeve as necessary.
16. Remove the gasket from the oil drain tube and the exhaust manifold.
17. Check the condition of the hoses for the intake elbow and the air cleaner tube. Use new hoses as necessary.

Installation

1. Install a new gasket on the exhaust manifold.
2. Install a new gasket on the oil drain tube. Use gasket sealer to hold the gasket in place.
3. Install the turbocharger.
4. Install the lock washers and nuts to fasten the turbocharger to the exhaust manifold.
5. Install the cap screws and lock washers to fasten the oil drain tube to the turbocharger.
6. Install the connector and exhaust elbow. Install the cap screws and lock washers to fasten the exhaust elbow to the engine.
7. Install the cap screws, lock washers, and flat washers to fasten the brace to the exhaust elbow.
8. Connect the oil supply tube to the fitting at the top of the turbocharger.
9. Connect the hose on the intake elbow to the turbocharger. Tighten the clamps.
10. Connect the hose to the inlet of the turbocharger. Tighten the clamps.
11. Prime the turbocharger according to the instructions on this page.
12. Stop the engine and check for oil leakage.
13. Install the hood top.
14. Install the muffler.

Priming the Turbocharger

If the weather is very cold, if the engine oil filters have been changed, if the turbocharger has been removed, or if the engine has not been run for more than two weeks, the turbocharger must be filled with oil before the engine is started.


1. Pull out the fuel shutoff control.
2. Hold the key switch in the START position for 30 seconds. During this time, the oil pump in the engine will fill the turbocharger with oil.

3. Push in the fuel shutoff control and start the engine. Run the engine at idle for two minutes.

IMPORTANT: *If the engine stops running while running at a fast speed, start the engine immediately. If the engine is not started immediately, the turbocharger can be damaged.*

Stopping the Engine

1. Park the machine on a level surface.
2. Run the engine at idle for two minutes.
3. Pull out the fuel shutoff control until the engine stops.
4. Turn the key switch to the OFF position.

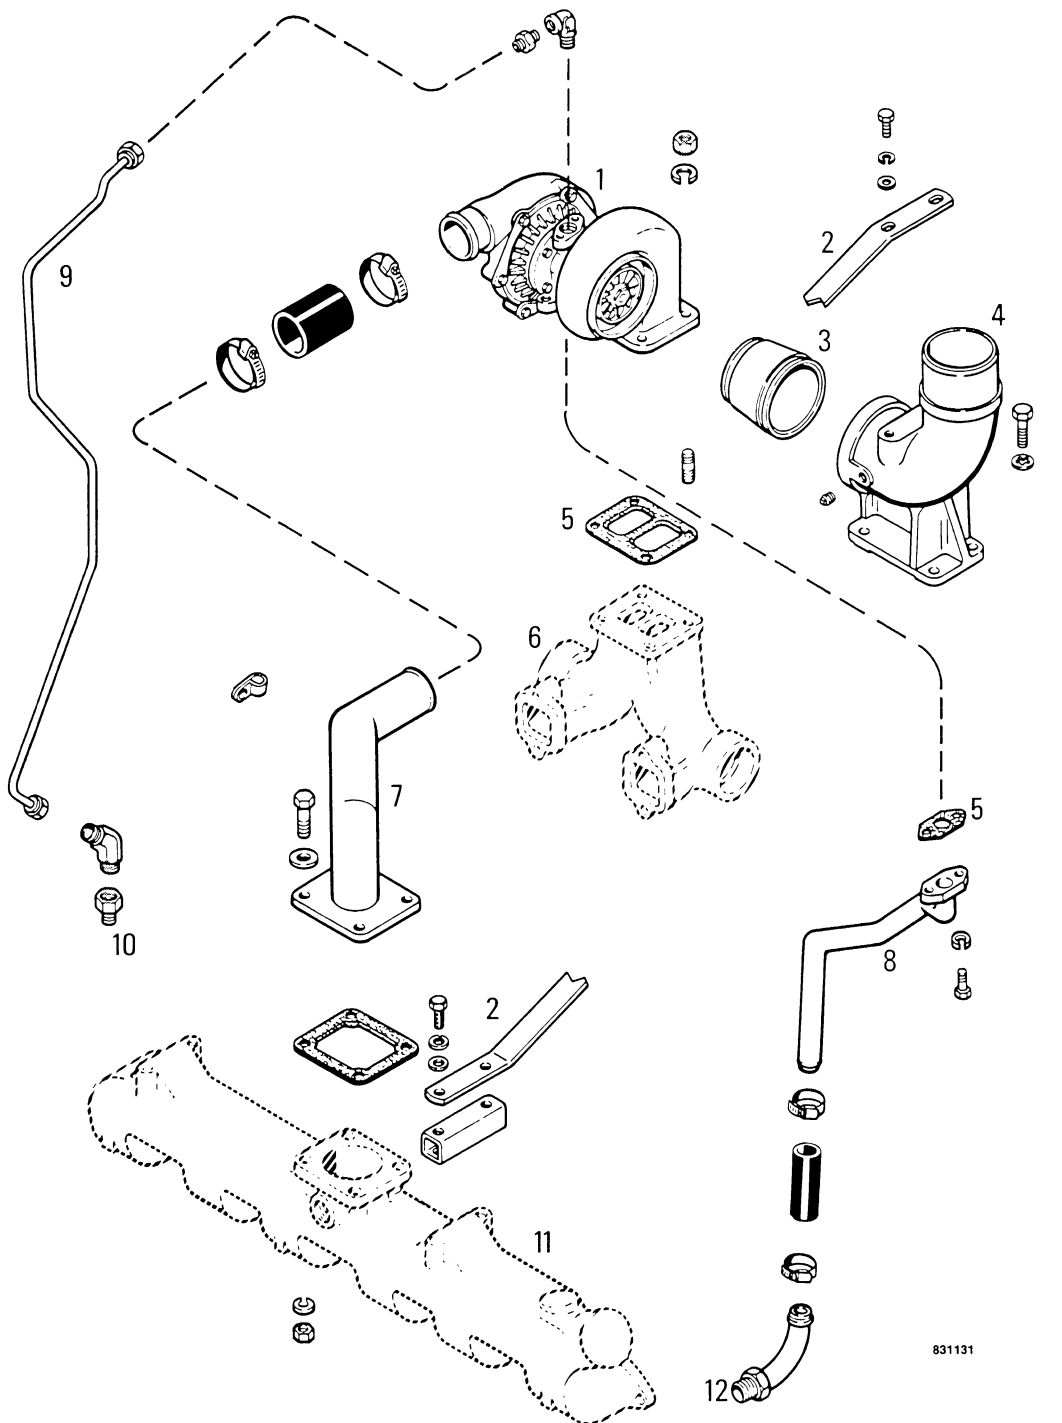

- 1. Turbocharger
- 2. Brace
- 3. Connector
- 4. Exhaust Elbow

- 5. Gasket
- 6. Exhaust Manifold
- 7. Intake Elbow
- 8. Oil Drain Tube

- 9. Oil Supply Tube
- 10. Connects to Filter Head
- 11. Intake Manifold
- 12. Connects to Engine Block

831131

PUMP DRIVE PLATE

Machines With Case Engine

Removal

1. See Section 8205. Remove the hydraulic pump.
2. Loosen the cap screws that fasten the mounting plate to the flywheel housing.
3. Hold the mounting plate in position and remove the cap screws and lock washers.
4. Remove the mounting plate.
5. Remove the coupling from the drive plate.
6. Loosen the self-locking cap screws that fasten the drive plate to the flywheel.
7. Hold the drive plate in place and remove the self-locking cap screws.
8. Remove the drive plate.


Inspection

1. Inspect the splines of the coupling, drive plate, and the hydraulic pump shaft. If the splines are worn or damaged, use new parts.
2. Check the drive plate for distortion. Use a new drive plate as necessary.

Installation

1. Hold the drive plate against the flywheel. See the illustration in the next column and make sure that the pilot side of the drive plate is toward the engine.
2. Install the self-locking cap screws. Tighten the self-locking cap screws to 35 to 42 pound-feet (48 to 57 N m, 5 to 6 kg/m).
3. Install the coupling in the drive plate.
4. Hold the mounting plate against the flywheel housing.
5. Install the cap screws and lock washers. Tighten the cap screws to 35 to 42 pound-feet (48 to 57 N m, 5 to 6 kg/m).

6. See Section 8205 and install the hydraulic pump.

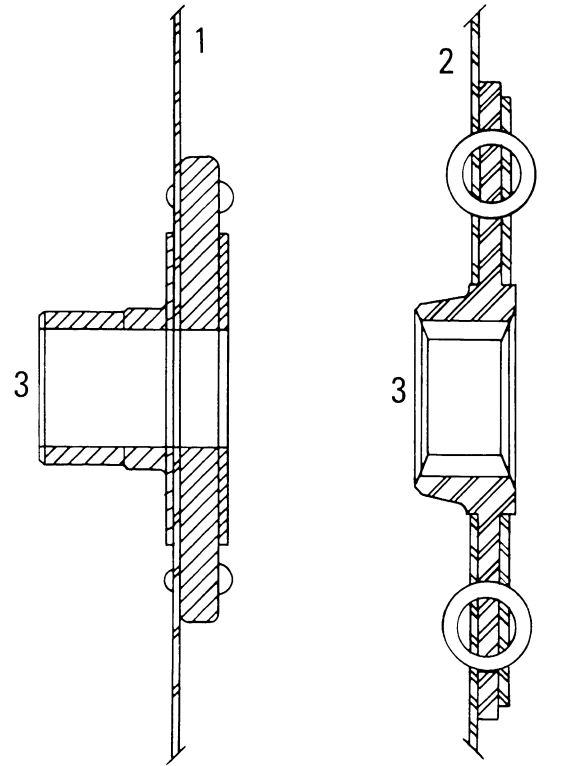

1. Drive Plate, Case Engine
2. Drive Plate, GMC Engine
3. Toward Engine

840384

Machines With GMC Engine

Removal

1. See Section 8205. Remove the hydraulic pump.
2. Loosen the cap screws that fasten the mounting plate to the flywheel housing.
3. Hold the mounting plate in place and remove the cap screws and lock washers.
4. Remove the mounting plate.
5. Remove the coupling from the drive plate.
6. Loosen the self-locking cap screws that fasten the drive plate to the flywheel.
7. Hold the drive plate in place and remove the self-locking cap screws.
8. Remove the drive plate.
9. Remove the adapter from the flywheel.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading


Inspection

1. Inspect the splines of the coupling, drive plate, and the hydraulic pump shaft. If the splines are worn or damaged, use new parts.
2. Check the drive plate for distortion. Use a new drive plate as necessary.
3. Inspect the adapter for wear. If the ID of the adapter is worn, use a new adapter.

Installation

1. Install the adapter in the flywheel.
2. Hold the drive plate against the flywheel. See the illustration on page 2053-11 and make sure that the pilot side of the drive plate is toward the engine.
3. Install the self-locking cap screws. Tighten the cap screws to 35 to 42 pound-feet (48 to 57 N m, 5 to 6 kg/m).
4. Install the coupling in the drive plate.
5. Hold the mounting plate against the flywheel housing.
6. Install the cap screws and lock washers. Tighten the cap screws to 35 to 42 pound-feet (48 to 57 N m, 5 to 6 kg/m).
7. See Section 8205 and install the hydraulic pump.

EXHAUST SYSTEMS

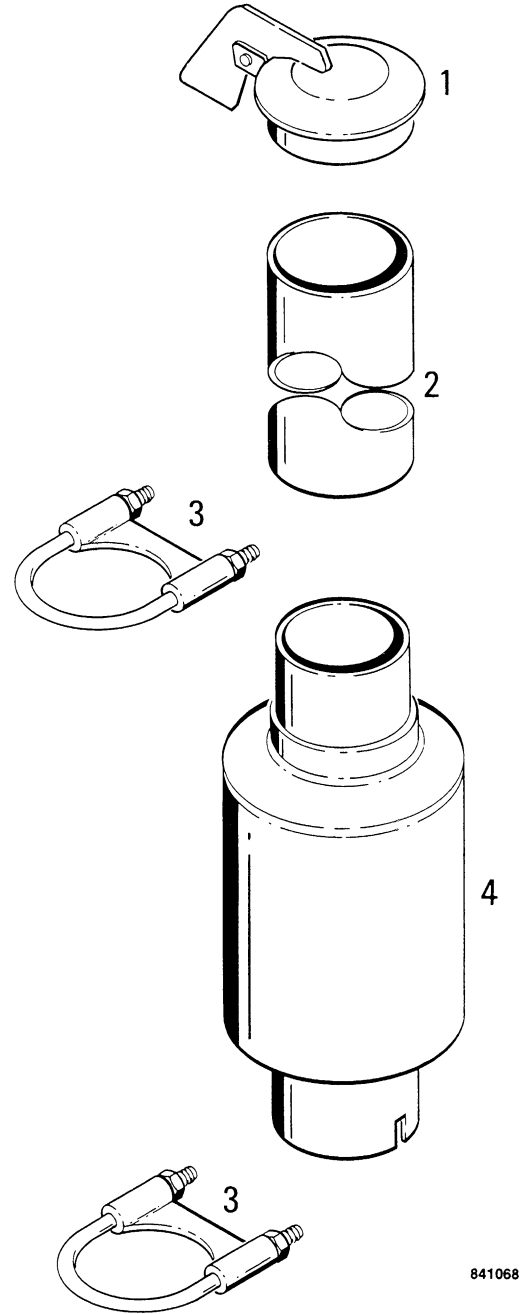

- | | |
|-------------------|-------------|
| 1. Cap | 3. Clamp |
| 2. Extension Pipe | 4. Arrester |

Spark Arrester for GMC Engines

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>