

# 1840 SKID STEER

## Service Manual

### 8-11093

## Table of Contents

| Description  | Section No.  | Publication Form No. |
|--|--------------|----------------------|
| <b>General</b>   |              |                      |
|  | <b>Tab 1</b> |                      |
| Section Index - General  |              | 8-11280              |
| Torque Specifications  | 1001         | 8-71600              |
| Fluids and Lubricants  | 1002         | 8-11292              |
| <b>Engines</b>   |              |                      |
|  | <b>Tab 2</b> |                      |
| Section Index - Engine   |              | 8-11300              |
| Engine and Radiator Removal and Installation   | 2001         | 8-11310              |
| Specification Details  | 2402         | 8-24163              |
| Cylinder Head and Valve Train  | 2415         | 8-24173              |
| Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Main Bearings, Oil Seals and Flywheel | 2425         | 8-24183              |
| Lubrication System   | 2445         | 8-24193              |
| Cooling System   | 2455         | 8-24203              |
| <b>Fuel System</b>   |              |                      |
|  | <b>Tab 3</b> |                      |
| Section Index - Fuel System  |              | 8-11321              |
| Fuel System and Filters  | 3410         | 8-24212              |
| Fuel Injectors   | 3413         | 8-24233              |
| CAV Injection Pump (4-390)1  | 3414         | 7-37131              |
| <b>Electrical</b>  |              |                      |
|  | <b>Tab 4</b> |                      |
| Section Index - Electrical   |              | 8-11331              |
| Electrical "How it Works"  | 4000         | 7-14020              |
| Removal and Installation of Electrical Components  | 4001         | 8-11340              |
| Electrical Specifications and Troubleshooting and Schematics                               | 4002         | 8-17753              |
| Battery  | 4003         | 8-11360              |
| Starter  | 4004         | 8-11370              |
| 65 Ampere Alternator A187873   | 4007         | 8-15670              |
| 65 Ampere Alternator A186125   | 4019         | 8-11381              |
| <b>Power Train</b>   |              |                      |
|  | <b>Tab 6</b> |                      |
| Section Index - Power Train  |              | 8-11391              |
| Hydrostatic How It Works   | 6000         | 7-14030              |
| Removal and Installation of Power Train Components   | 6001         | 8-11401              |

CASE CORPORATION  
700 State Street  
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION  
3350 South Service Road  
Burlington, ON L7N 3M6 CANADA

**Reprinted**

Bur 8-11653

Copyright © 2001 Case Corporation  
Printed in U.S.A.  
Issued May, 1992 (Revised February, 2001)

# Table of Contents

| Description  | Section No.    | Publication Form No. |
|--|----------------|----------------------|
| Hydrostatic Drive System Troubleshooting                           | 6002           | 8-11413              |
| Controls   | 6003           | 7-44300              |
| Piston Pump  | 6004           | 8-44180              |
| Motor  | 6005           | 8-68601              |
| Pump Drive Coupling  | 6006           | 8-11450              |
| Sprockets, Chains and Axles  | 6007           | 8-11441              |
| Wheels and Tires   | 6008           | 8-11461              |
| <b>Hydraulics</b>  |                | <b>Tab 8</b>         |
| Section index - Hydraulics   |                | 8-11491              |
| How It Works   | 8000           | 7-14040              |
| Removal and Installation of Hydraulic Components                   | 8001           | 8-11500              |
| Hydraulic System Specifications and Troubleshooting and Schematics | 8002           | 8-11513              |
| Cleaning the Hydraulic System and Hydrostatic System               | 8003           | 8-11520              |
| Pump   | 8004           | 8-11530              |
| Loader Control Valve   | 8005           | 8-11541              |
| Auxiliary Control Valve  | 8006           | 8-11550              |
| Backhoe Control Valve - D100 Backhoe                               | 8007           | 8-11561              |
| Backhoe Control Valve - D125 Backhoe                               | 8007           | 7-44240              |
| Cylinders  | 8009           | 8-11582              |
| <b>Mounted Equipment</b>   |                | <b>Tab 9</b>         |
| Section index - Mounted Equipment                                  |                | 8-11591              |
| Control Linkages, Pedals and Levers "How it Works"                 | 9000           | 7-14050              |
| Pedals and Levers  | 9001           | 8-11603              |
| Loader   | 9002           | 8-11611              |
| ROPS Canopy, Seat, Seat Belts, and Operators Compartment           | 9003           | 8-11621              |
| Auxiliary Hydraulic Installation                                   | 9004           | 8-11630              |
| Backhoe (D100 Backhoe)   | 9005           | 8-11640              |
| Backhoe (D125 Backhoe)   | 9005           | 7-44270              |
| <b>Rear Pocket</b>   |                |                      |
| Hydraulic and Electrical Schematic Foldout                         | In Rear Pocket | 7-11951              |

**NOTE:** Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX - GENERAL

| Section Title                        | Section Number |
|--------------------------------------|----------------|
| Standard Torque Specifications.....  | 1001           |
| Fluids and Lubricants .....          | 1002           |
| Detailed Engine Specifications ..... | 1024           |

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# 1001


## STANDARD TORQUE SPECIFICATIONS


### TABLE OF CONTENTS

|   |        |  |        |
|---|--------|--|--------|
| <b>Torque Specifications - Decimal Hardware</b> ..... | 1001-2 | <b>Torque Specifications - Steel Hydraulic Fittings</b> .....  | 1001-4 |
| <b>Torque Specifications - Metric Hardware</b> ...    | 1001-3 | <b>Torque Specifications - O-ring Face Seal Fittings</b> ..... | 1001-5 |

## TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.
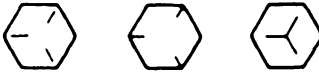
| <b>Grade 5 Bolts, Nuts, and Studs</b>   |                |                  |
|---|----------------|------------------|
|  |                |                  |
| Size  | Pound-<br>Feet | Newton<br>metres |
| <b>1/4 in</b>   | 9-11           | 12-15            |
| <b>5/16 in</b>  | 17-21          | 23-28            |
| <b>3/8 in</b>   | 35-42          | 48-57            |
| <b>7/16 in</b>  | 54-64          | 73-87            |
| <b>1/2 in</b>   | 80-96          | 109-130          |
| <b>9/16 in</b>  | 110-132        | 149-179          |
| <b>5/8 in</b>   | 150-180        | 203-244          |
| <b>3/4 in</b>   | 270-324        | 366-439          |
| <b>7/8 in</b>   | 400-480        | 542-651          |
| <b>1.0 in</b>   | 580-696        | 787-944          |
| <b>1-1/8 in</b>   | 800-880        | 1085-1193        |
| <b>1-1/4 in</b>   | 1120-1240      | 1519-1681        |
| <b>1-3/8 in</b>   | 1460-1680      | 1980-2278        |
| <b>1-1/2 in</b>   | 1940-2200      | 2631-2983        |


| <b>Grade 8 Bolts, Nuts, and Studs</b>  |                |                  |
|--|----------------|------------------|
|  |                |                  |
| Size   | Pound-<br>Feet | Newton<br>metres |
| <b>1/4 in</b>  | 12-15          | 16-20            |
| <b>5/16 in</b>   | 24-29          | 33-39            |
| <b>3/8 in</b>  | 45-54          | 61-73            |
| <b>7/16 in</b>   | 70-84          | 95-114           |
| <b>1/2 in</b>  | 110-132        | 149-179          |
| <b>9/16 in</b>   | 160-192        | 217-260          |
| <b>5/8 in</b>  | 220-264        | 298-358          |
| <b>3/4 in</b>  | 380-456        | 515-618          |
| <b>7/8 in</b>  | 600-720        | 814-976          |
| <b>1.0 in</b>  | 900-1080       | 1220-1465        |
| <b>1-1/8 in</b>  | 1280-1440      | 1736-1953        |
| <b>1-1/4 in</b>  | 1820-2000      | 2468-2712        |
| <b>1-3/8 in</b>  | 2380-2720      | 3227-3688        |
| <b>1-1/2 in</b>  | 3160-3560      | 4285-4827        |


**NOTE:** Use thick nuts with Grade 8 bolts.

## TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when special torques are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil is used.

| <b>Grade 8.8 Bolts, Nuts, and Studs</b>   |            |               |
|---|------------|---------------|
|  |            |               |
| Size  | Pound-Feet | Newton metres |
| <b>M4</b>   | 2-3        | 3-4           |
| <b>M5</b>   | 5-6        | 6.5-8         |
| <b>M6</b>   | 8-9        | 10.5-12       |
| <b>M8</b>   | 19-23      | 26-31         |
| <b>M10</b>  | 38-45      | 52-61         |
| <b>M12</b>  | 66-79      | 90-107        |
| <b>M14</b>  | 106-127    | 144-172       |
| <b>M16</b>  | 160-200    | 217-271       |
| <b>M20</b>  | 320-380    | 434-515       |
| <b>M24</b>  | 500-600    | 675-815       |
| <b>M30</b>  | 920-1100   | 1250-1500     |
| <b>M36</b>  | 1600-1950  | 2175-2600     |

| <b>Grade 10.9 Bolts, Nuts, and Studs</b>  |            |               |
|---|------------|---------------|
|  |            |               |
| Size  | Pound-Feet | Newton metres |
| <b>M4</b>   | 3-4        | 4-5           |
| <b>M5</b>   | 7-8        | 9.5-11        |
| <b>M6</b>   | 11-13      | 15-17.5       |
| <b>M8</b>   | 27-32      | 37-43         |
| <b>M10</b>  | 54-64      | 73-87         |
| <b>M12</b>  | 93-112     | 125-15        |
| <b>M14</b>  | 149-179    | 200-245       |
| <b>M16</b>  | 230-280    | 310-380       |
| <b>M20</b>  | 450-540    | 610-730       |
| <b>M24</b>  | 780-940    | 1050-1275     |
| <b>M30</b>  | 1470-1770  | 2000-2400     |
| <b>M36</b>  | 2580-3090  | 3500-4200     |

### Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

| Tube OD<br>Hose ID              | Thread<br>Size | Pound-<br>Feet | Newton<br>metres |
|---------------------------------|----------------|----------------|------------------|
| <b>37 Degree Flare Fittings</b> |                |                |                  |
| <b>1/4 in</b><br>6.4 mm         | 7/16-20        | 6-12           | 8-16             |
| <b>5/16 in</b><br>7.9 mm        | 1/2-20         | 8-16           | 11-21            |
| <b>3/8 in</b><br>9.5 mm         | 9/16-18        | 10-25          | 14-33            |
| <b>1/2 in</b><br>12.7 mm        | 3/4-16         | 15-42          | 20-56            |
| <b>5/8 in</b><br>15.9 mm        | 7/8-14         | 25-58          | 34-78            |
| <b>3/4 in</b><br>19.0 mm        | 1-1/16-12      | 40-80          | 54-108           |
| <b>7/8 in</b><br>22.2 mm        | 1-3/16-12      | 60-100         | 81-135           |
| <b>1.0 in</b><br>25.4 mm        | 1-5/16-12      | 75-117         | 102-158          |
| <b>1-1/4 in</b><br>31.8 mm      | 1-5/8-12       | 125-165        | 169-223          |
| <b>1-1/2 in</b><br>38.1 mm      | 1-7/8-12       | 210-250        | 285-338          |

| Tube OD<br>Hose ID                  | Thread<br>Size | Pound-<br>Feet | Newton<br>metres |
|-------------------------------------|----------------|----------------|------------------|
| <b>Straight Threads with O-ring</b> |                |                |                  |
| <b>1/4 in</b><br>6.4 mm             | 7/16-20        | 12-19          | 16-25            |
| <b>5/16 in</b><br>7.9 mm            | 1/2-20         | 16-25          | 22-23            |
| <b>3/8 in</b><br>9.5 mm             | 9/16-18        | 25-40          | 34-54            |
| <b>1/2 in</b><br>12.7 mm            | 3/4-16         | 42-67          | 57-90            |
| <b>5/8 in</b><br>15.9 mm            | 7/8-14         | 58-92          | 79-124           |
| <b>3/4 in</b><br>19.0 mm            | 1-1/16-12      | 80-128         | 108-174          |
| <b>7/8 in</b><br>22.2 mm            | 1-3/16-12      | 100-160        | 136-216          |
| <b>1.0 in</b><br>25.4 mm            | 1-5/16-12      | 117-187        | 159-253          |
| <b>1-1/4 in</b><br>31.8 mm          | 1-5/8-12       | 165-264        | 224-357          |
| <b>1-1/2 in</b><br>38.1 mm          | 1-7/8-12       | 250-400        | 339-542          |

| <b>Split Flange Mounting Bolts</b> |                |                  |
|------------------------------------|----------------|------------------|
| Size                               | Pound-<br>Feet | Newton<br>metres |
| 5/16-18                            | 15-20          | 20-27            |
| 3/8-16                             | 20-25          | 26-33            |
| 7/16-14                            | 35-45          | 47-61            |
| 1/2-13                             | 55-65          | 74-88            |
| 5/8-11                             | 140-150        | 190-203          |

## TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTING

| Nom. SAE Dash Size          | Tube OD                    | Thread Size | Pound-Feet | Newton Metres | Thread Size                               | Pound-Feet | Newton Metres |
|-----------------------------|----------------------------|-------------|------------|---------------|---|------------|---------------|
| <b>O-ring Face Seal End</b> |                            |             |            |               | <b>O-ring Boss End Fitting or Locknut</b> |            |               |
| -4                          | <b>1/4 in</b><br>6.4 mm    | 9/16-18     | 10-12      | 14-16         | 7/16-20                                   | 17-20      | 23-27         |
| -6                          | <b>3/8 in</b><br>9.5 mm    | 11/16-16    | 18-20      | 24-27         | 9/16-18                                   | 25-30      | 33-40         |
| -8                          | <b>1/2 in</b><br>12.7 mm   | 13/16-16    | 32-40      | 43-54         | 3/4-16                                    | 45-50      | 61-68         |
| -10                         | <b>5/8 in</b><br>15.9 mm   | 1-14        | 46-56      | 60-75         | 7/8-14                                    | 60-65      | 81-88         |
| -12                         | <b>3/4 in</b><br>19.0 mm   | 1-3/16-12   | 65-80      | 90-110        | 1-1/16-12                                 | 85-90      | 115-122       |
| -14                         | <b>7/8 in</b><br>22.2 mm   | 1-3/16-12   | 65-80      | 90-110        | 1-3/16-12                                 | 95-100     | 129-136       |
| -16                         | <b>1.0 in</b><br>25.4 mm   | 1-7/16-12   | 92-105     | 125-140       | 1-5/16-12                                 | 115-125    | 156-169       |
| -20                         | <b>1-1/4 in</b><br>31.8 mm | 1-11/16-12  | 125-140    | 170-190       | 1-5/8-12                                  | 150-160    | 203-217       |
| -24                         | <b>1-1/2 in</b><br>38.1 mm | 2-12        | 150-180    | 200-254       | 1-7/8-12                                  | 190-200    | 258-271       |

# 2001

## ENGINE REMOVAL AND INSTALLATION AND RADIATOR REMOVAL AND INSTALLATION

### TABLE OF CONTENTS

|                      |        |                             |         |
|----------------------|--------|-----------------------------|---------|
| Specifications ..... | 2001-2 | Engine Installation .....   | 2001-11 |
| Special Tools .....  | 2001-2 | Radiator Removal .....      | 2001-20 |
| Engine Removal ..... | 2001-3 | Radiator Installation ..... | 2001-23 |

## SPECIFICATIONS

Cooling system capacity.....18 U.S. quarts (17 litres)

### Special torques

Self-locking nuts that fasten the front and rear engine mounts to the frame.135 to 165 pound-feet (183 to 224 Nm)

Cap screws that fasten the fan to the engine .....276 to 324 pound-inches (31 to 37 Nm)

Cap screws that fasten the tandem pump to the pump mounting plate.....Apply 271 Loctite on the threads and tighten to 85 to 95 pound-feet (115 to 129 Nm)

Cap screws that fasten the pump mounting bracket to the pump mounting plate.....Apply 271 Loctite on the threads and tighten to 85 to 95 pound-feet (115 to 129 Nm)

Cap screws that fasten the radiator to the radiator mounting brackets ..15 to 20 pound-inches (1.68 to 2.25 Nm)

## SPECIAL TOOLS

Order special tools from one of the following addresses:

In the U.S.A.

Service Tools  
P.O. Box 314  
Owatonna, Minnesota 55060

In Canada

Jobborn Manufacturing Company  
97 Frid Street  
Hamilton, Ontario L8P 4M3

In Eruope

VL Church Ltd.  
P.O. Box 3, Daventry  
Northants, NN11 4NF  
England



The lifting sling is used to remove and install the engine. The part number of the tool is CAS-10119. This tool is first used on page 2001-9.

## ENGINE REMOVAL

### STEP 1




Open the rear door.

### STEP 2




Remove the radiator cap.

### STEP 3

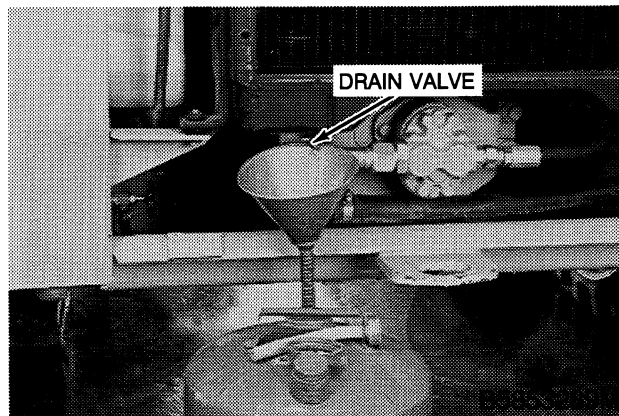


Open the drain valve and drain the cooling system. The cooling system capacity is approximately 18 U.S. quarts (17 litres) of coolant.

### STEP 4

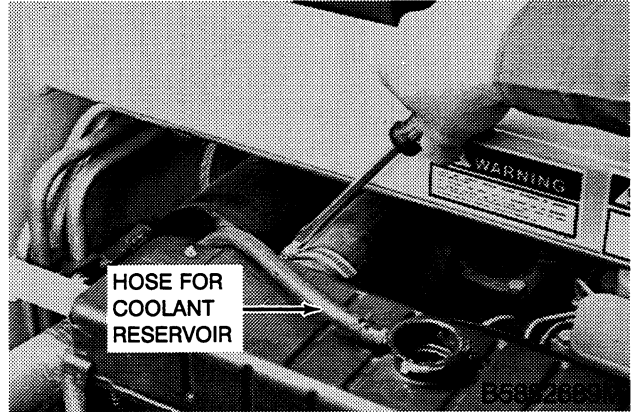


Loosen the clamp and disconnect the top hose from the radiator. Disconnect the hose for the coolant reservoir from the radiator. Install a plug in the coolant reservoir hose.

### STEP 5

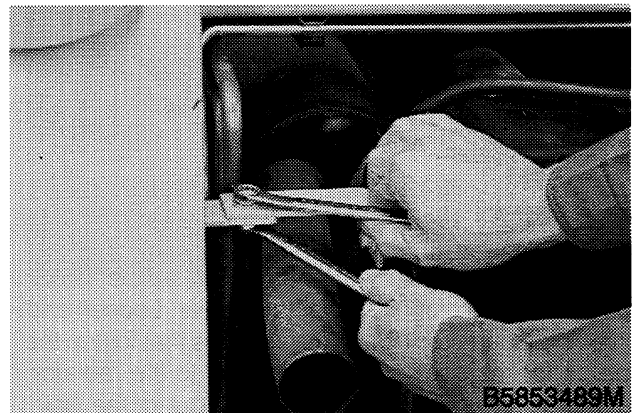


Loosen and remove the self-locking nut, flat washer, and bolt that fasten the top left radiator support to the frame.

### STEP 6

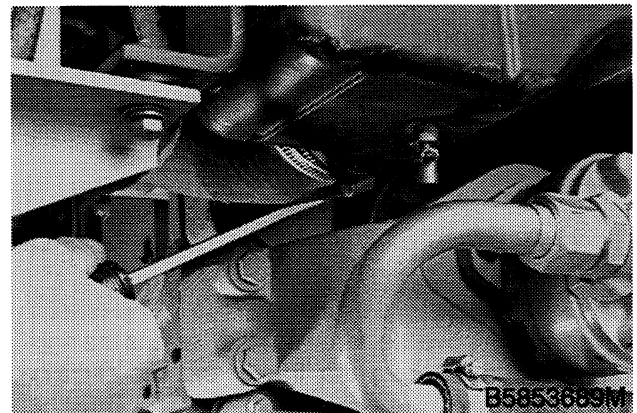

Loosen the clamp and disconnect the bottom hose from the radiator.

**STEP 7**

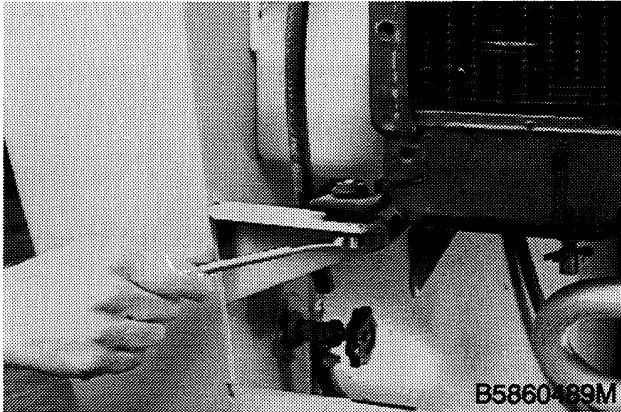


Loosen and remove the cap screw and flat washers that fasten the radiator to the left radiator mounting bracket.

**STEP 8**




Pull the left side of the radiator to the rear. Loosen and remove the cap screws and flat washers that fasten the clamps for the coolant reservoir hose to the radiator. Put the hose for the coolant reservoir out of the way.

**STEP 9**

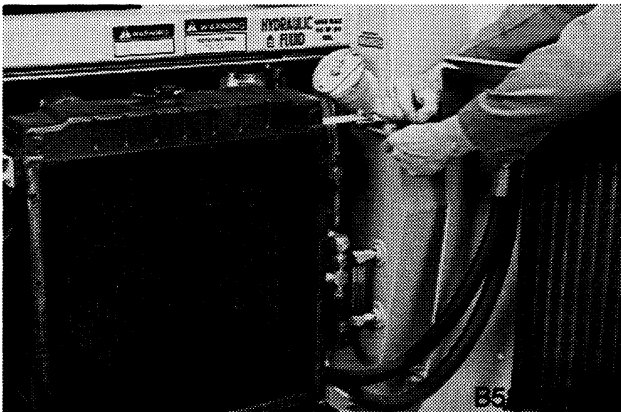

Loosen and remove the hardware that fastens the right side of the radiator to the frame and the radiator mounting bracket.

**STEP 10**

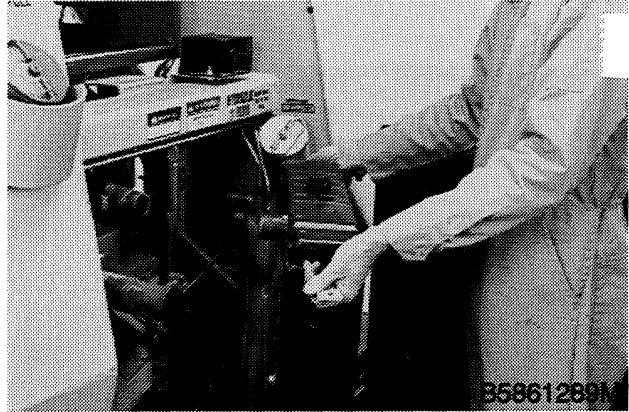

Remove the radiator from the machine.

**STEP 11**




Remove the floor plate. Disconnect the ground cable from the negative post on the battery.


**STEP 12**

Move the operators compartment forward according to the instructions in Section 9003.

**STEP 13**

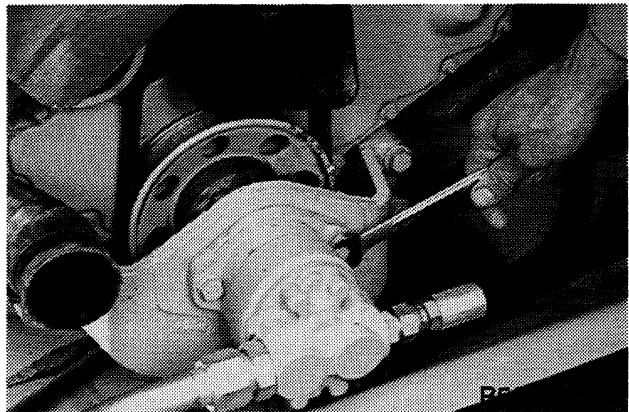


Loosen and remove the cap screws and flat washers that fasten the equipment pump to the rear engine mount.

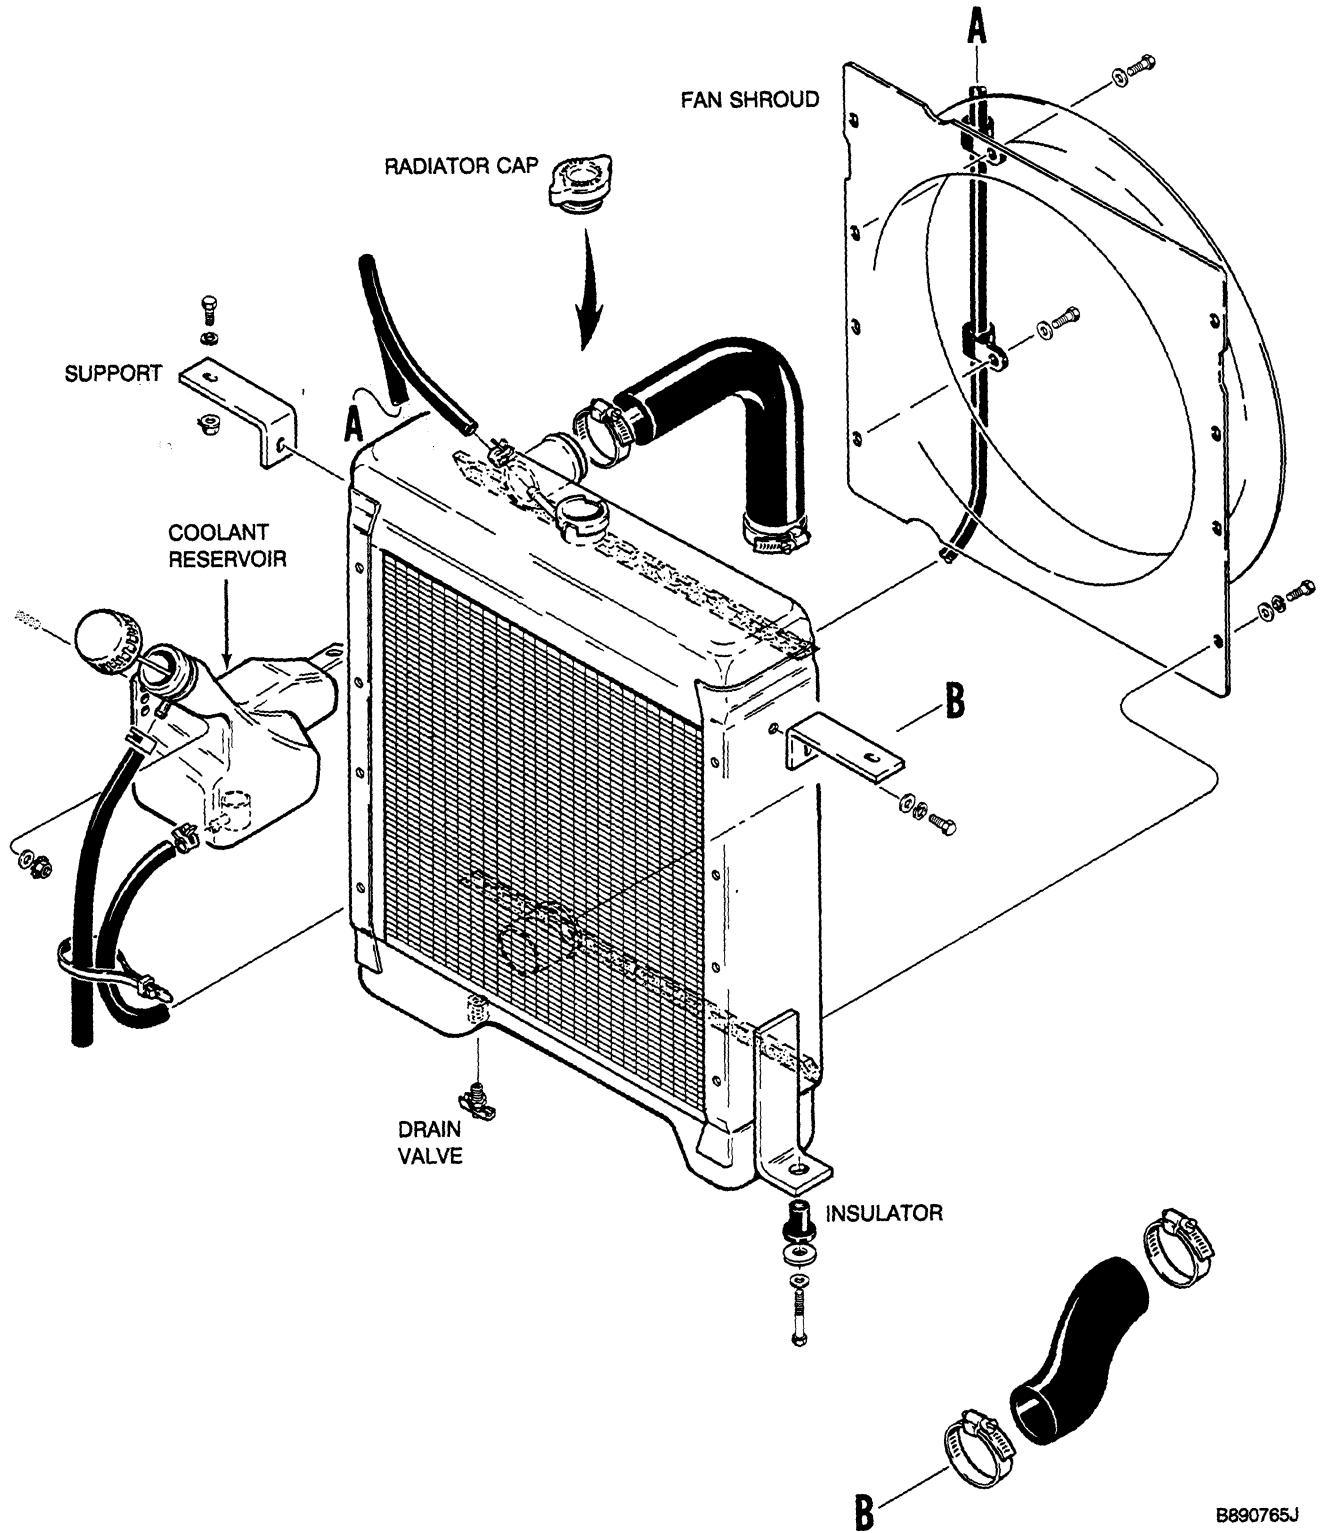

Radiator Installation


B890765J

**STEP 14**

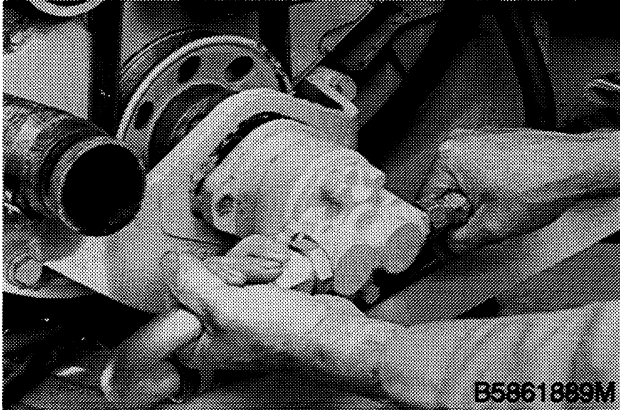


Pull the equipment pump away from the rear engine mount to disengage the drive shaft of the equipment pump from the coupling on the crankshaft pulley.

**STEP 17**

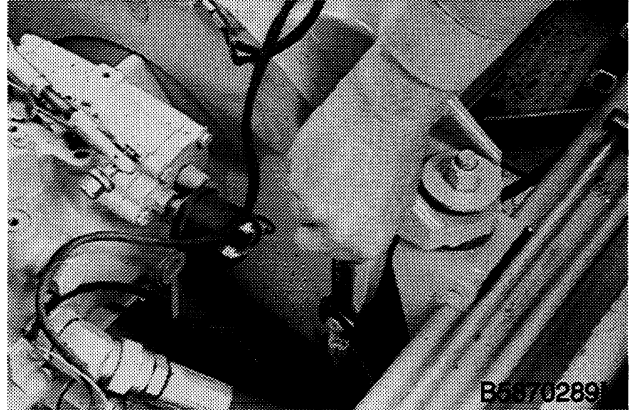


Loosen and remove the cap screw and lock washer that fasten the ground cable to the pump mounting plate. Remove the ground cable.

**STEP 15**

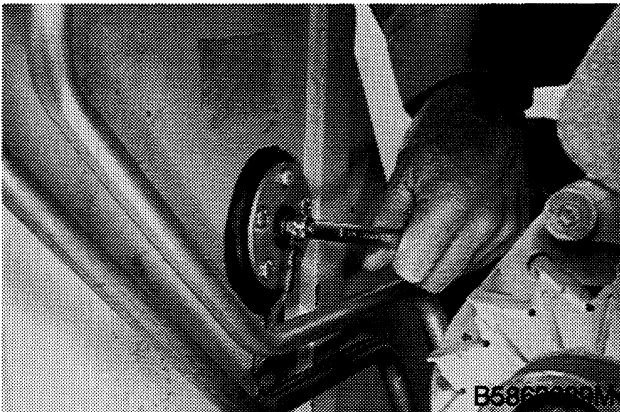


Disconnect the wire from the fuel level sender.

**STEP 18**

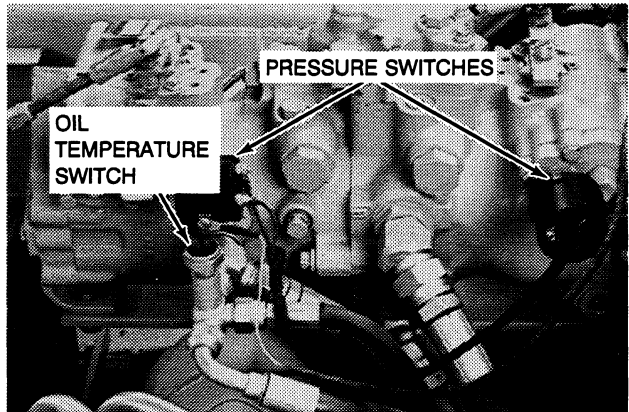



Disconnect the wire from the oil temperature switch. If the machine is equipped with a backup alarm, disconnect the wires from the pressure switches.

**STEP 16**

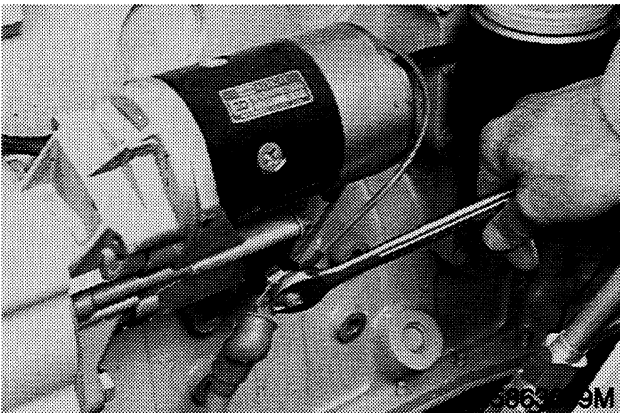

Disconnect the positive cable from the battery terminal on the starter solenoid.


**STEP 19**

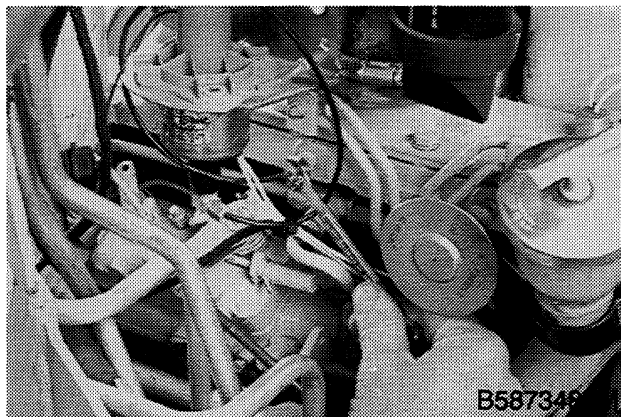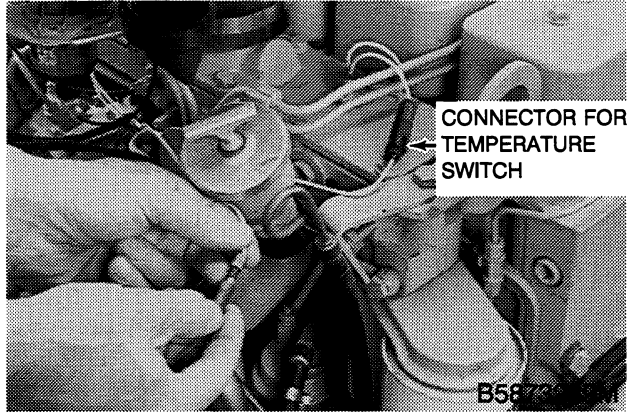

If the machine is equipped with ether injection:


1. Disconnect the wire to the valve assembly.
2. Disconnect the wire for the temperature switch.
3. Disconnect the tube from the intake manifold.

**STEP 20**

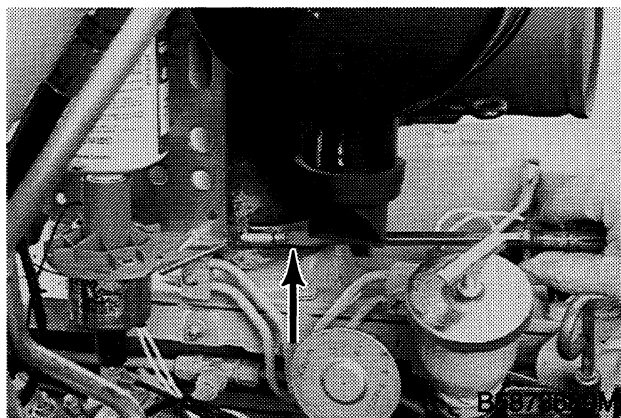


Loosen the clamp on the hose at the intake manifold.

**STEP 21**

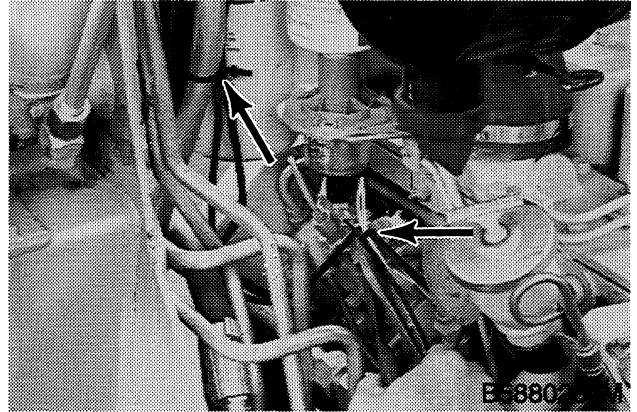

Cut the tie straps shown.


**STEP 22**

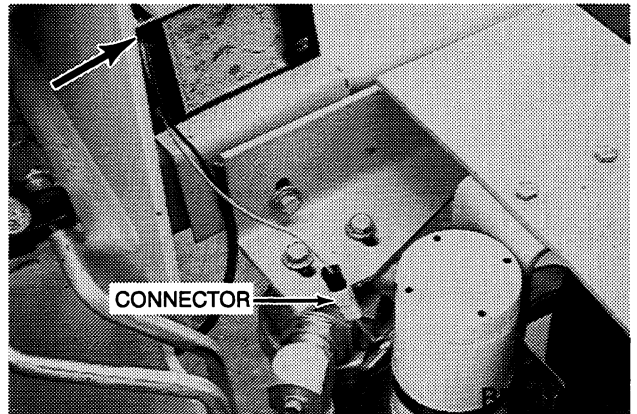

If the machine is equipped with a backup alarm:


1. Disconnect the connector for the backup alarm.
2. Disconnect the black wire from the side of the backup alarm.

**STEP 23**

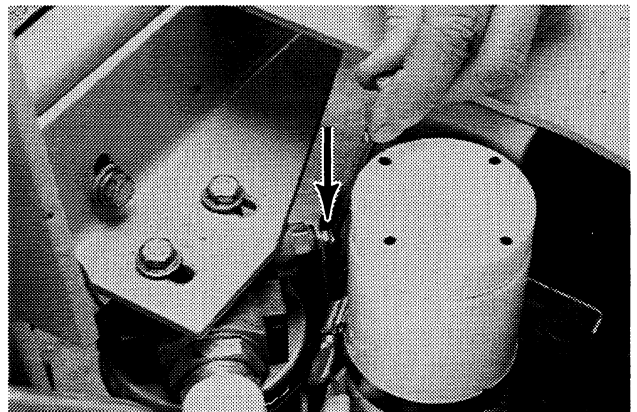


Disconnect the wire from the hydraulic oil filter.

**STEP 24**

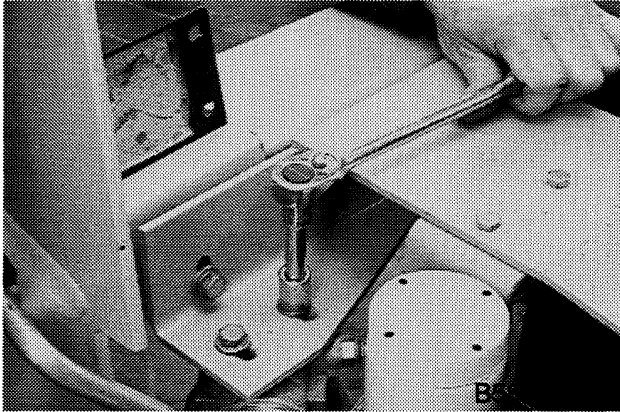


Loosen and remove the cap screws and hardened washers that fasten the hydraulic oil filter to the bracket.

**STEP 27**

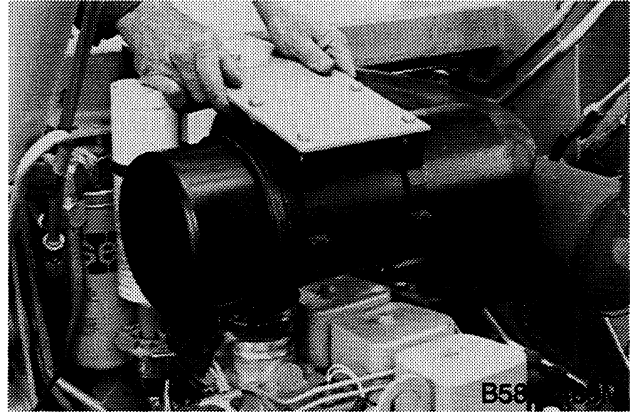

Remove the hardware for the bracket for the air cleaner, disconnect the hose from the intake manifold, and remove the air cleaner.

**STEP 25**

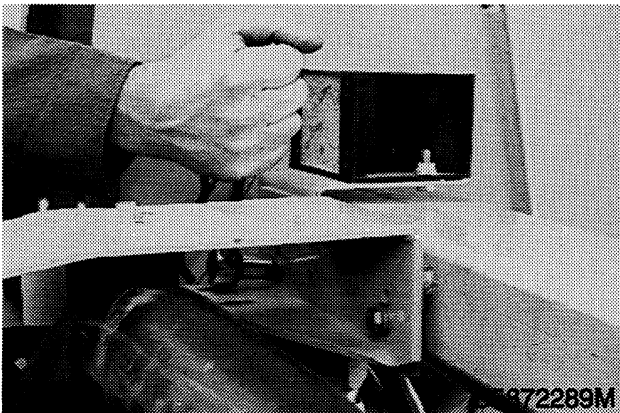


Loosen the cap screws, lock washers, and hardened washers that fasten the bracket for the air cleaner, and the bracket for the backup alarm, if equipped.

**STEP 28**


Cover or close the opening in the intake manifold.

**STEP 29**

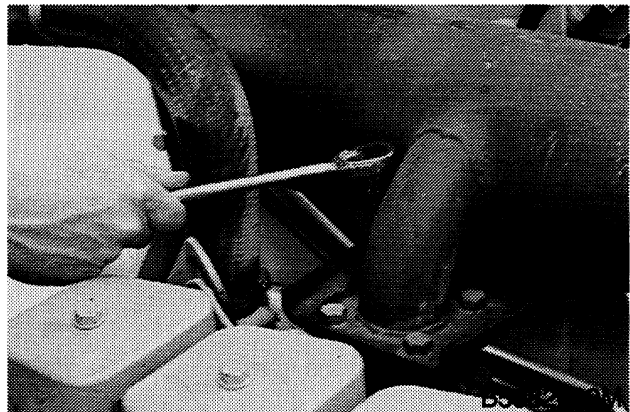

Loosen and remove the cap screws and lock washers that fasten the muffler to the exhaust manifold.

**STEP 26**

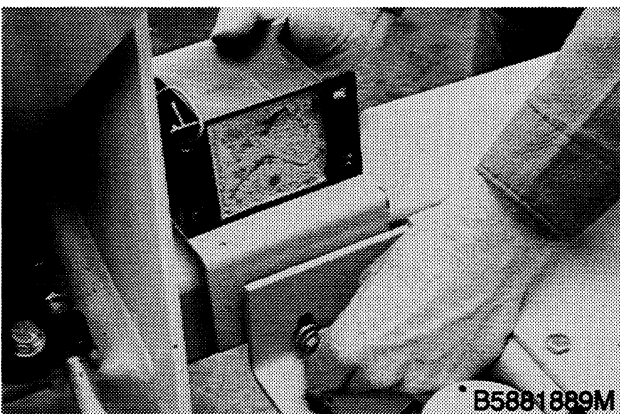


If the machine is equipped with a backup alarm, hold the backup alarm and remove the cap screw, lock washer, and hardened washer. Remove the bracket for the backup alarm.


**STEP 30**




Remove the muffler.

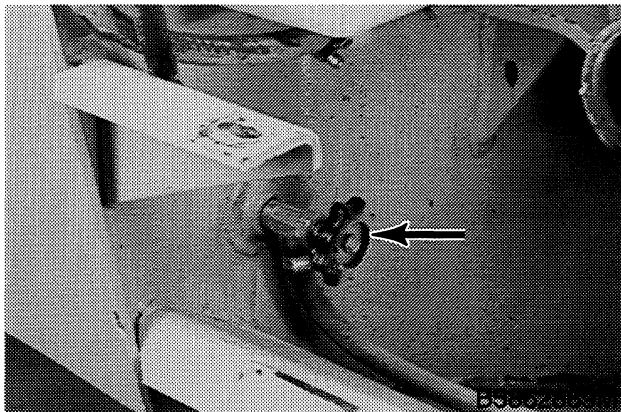**STEP 31**


Close the shutoff valve for the fuel supply line.

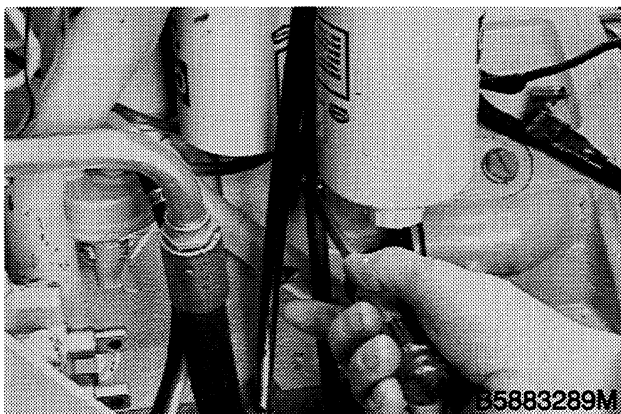**STEP 32**


Loosen the clamp and disconnect the hose from the fuel return line. Install a plug in the hose.

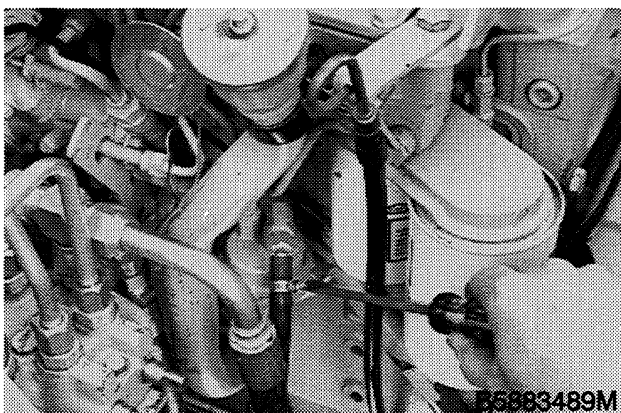**STEP 33**


Loosen the clamp and disconnect the fuel supply hose from the hand primer pump. Install a plug in the hose.

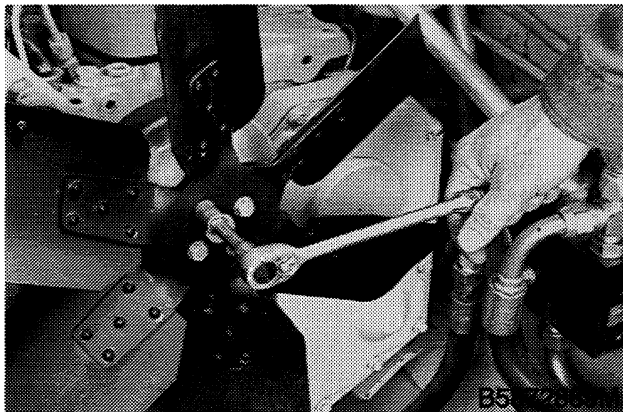**STEP 34**

Hold the fan in position and loosen and remove the cap screws and lock washers that fasten the fan to the engine. Remove the fan.

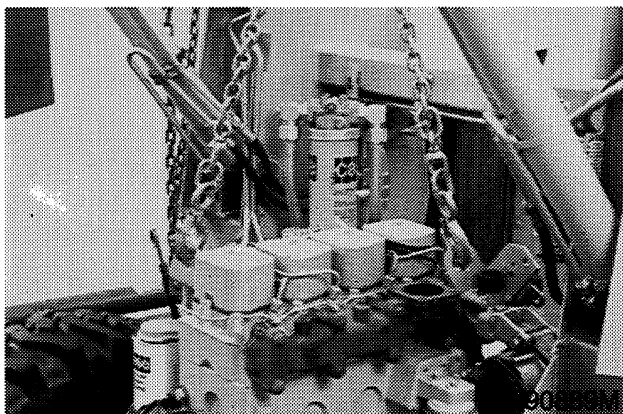
**STEP 35**

Connect the CAS-10119 lifting sling to the lifting eyes on the engine.

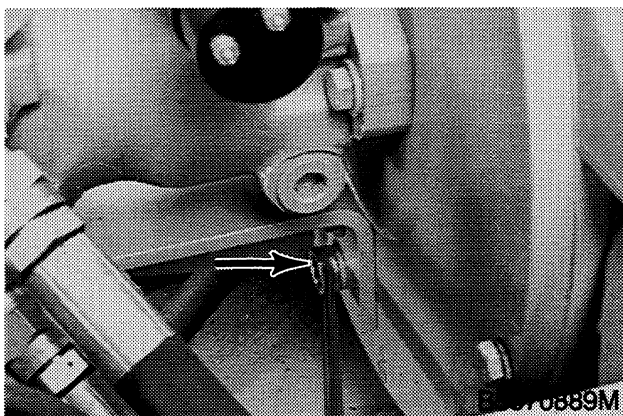**STEP 36**


Loosen and remove the cap screws and flat washers that fasten the tandem pump mounting bracket to the tandem pump mounting plate.

**STEP 37**

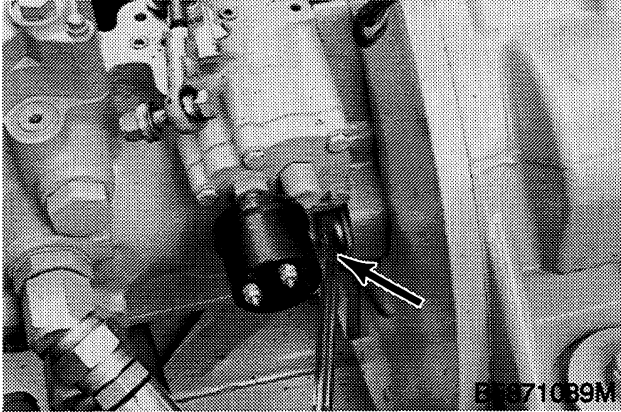


Loosen and remove the cap screws and flat washers that fasten the tandem pump to the tandem pump mounting plate.

**STEP 40**

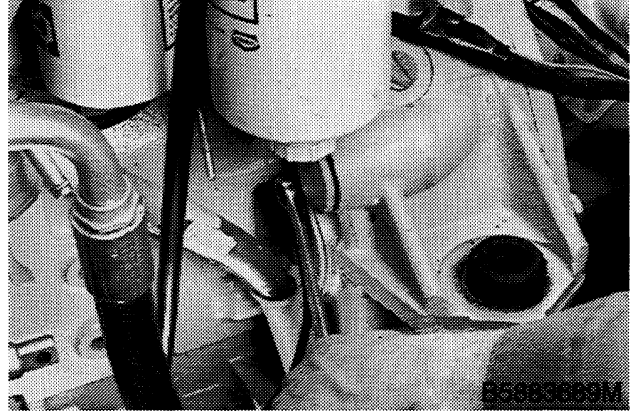


Loosen and remove the cap screw and lock washer that fastens the ground wire to the engine. Remove the ground wire.

**STEP 38**

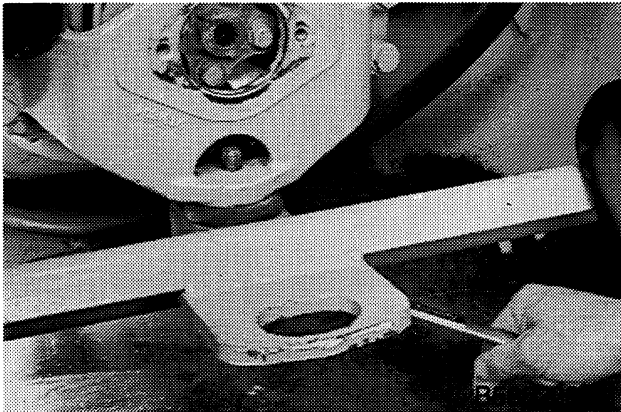


Loosen and remove the cap screw and hardened washer that fasten the rear engine mount to the frame.

**STEP 41**

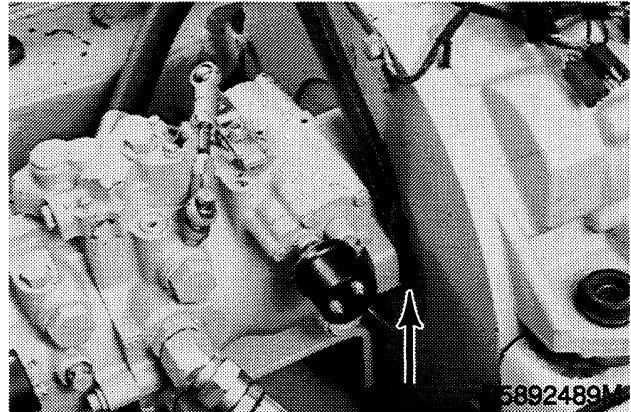


Use a prybar to help separate the tandem pump from the pump mounting plate.

**STEP 39**

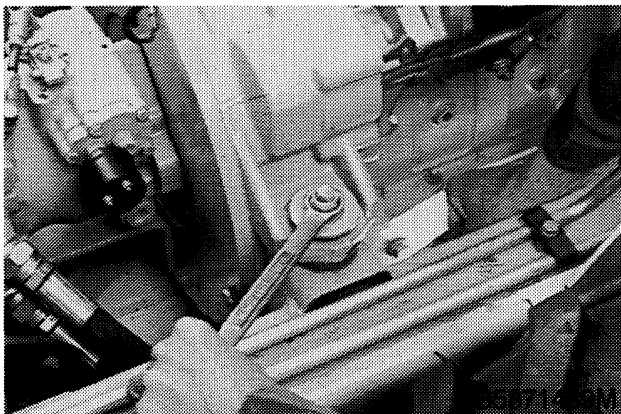


Loosen and remove the self-locking nuts, hardened washers, and bolts that fasten both front engine mounts to the frame.

**STEP 42**

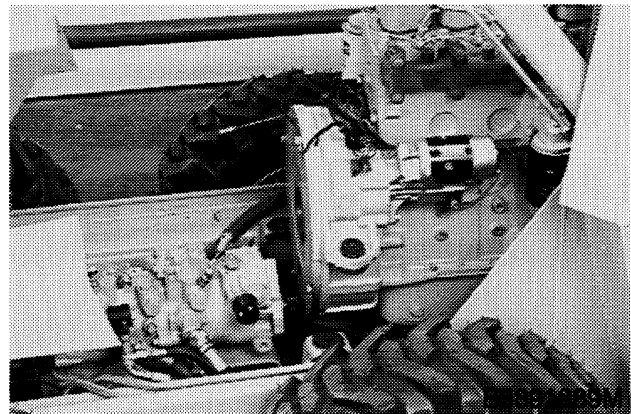

Move the engine toward the rear to disengage the drive coupling on the flywheel from the drive shaft on the tandem pump. Raise the engine.


**STEP 43**

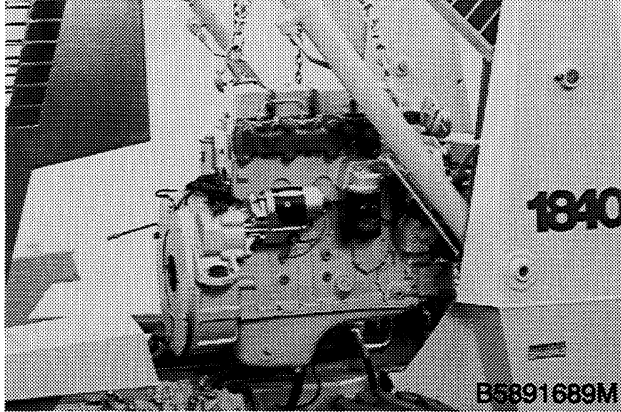


Remove the engine from the machine.

**ENGINE INSTALLATION**

**STEP 44**

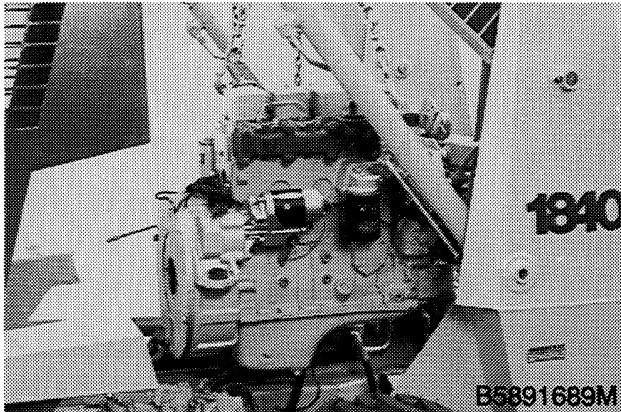


Lift the engine over the machine and lower the engine.

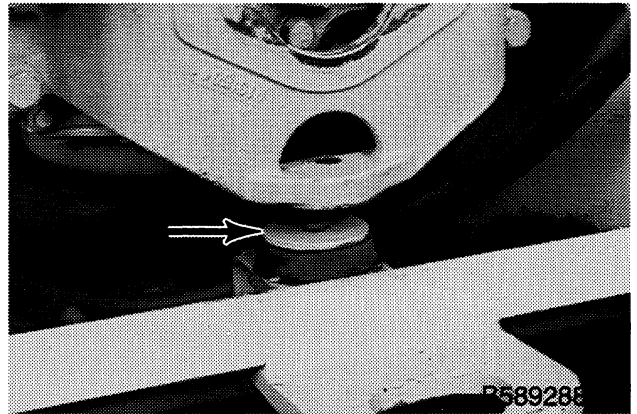

Make sure the hardened washers are installed as shown.


**STEP 45**

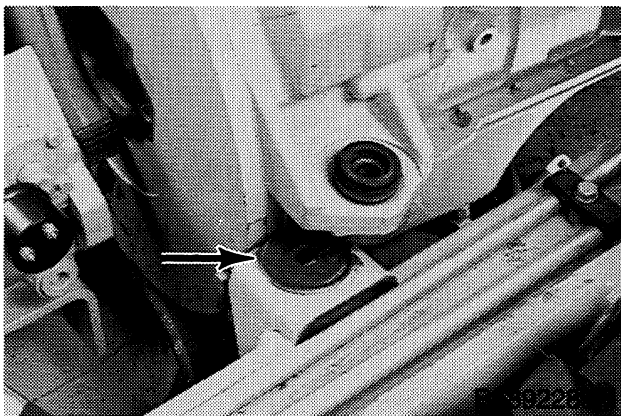

**STEP 46**


Engage the drive coupling on the flywheel with the drive shaft of the tandem pump and push the engine forward.

**STEP 47**

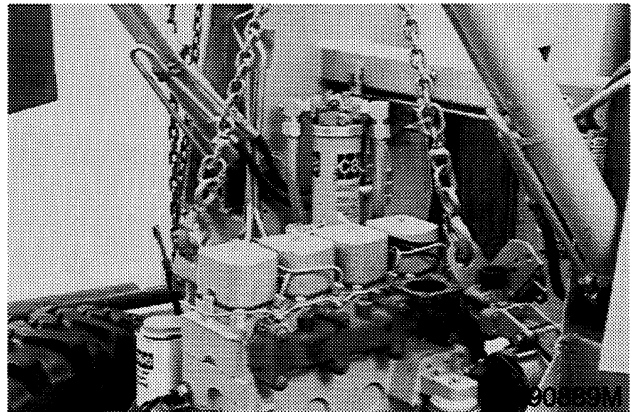


Lower the engine into place.

**STEP 48**

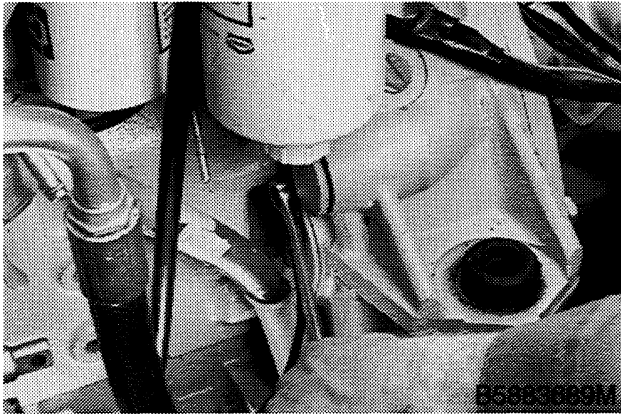


Install the cap screw, lock washer, and ground wire. Tighten the cap screw.

**STEP 49**

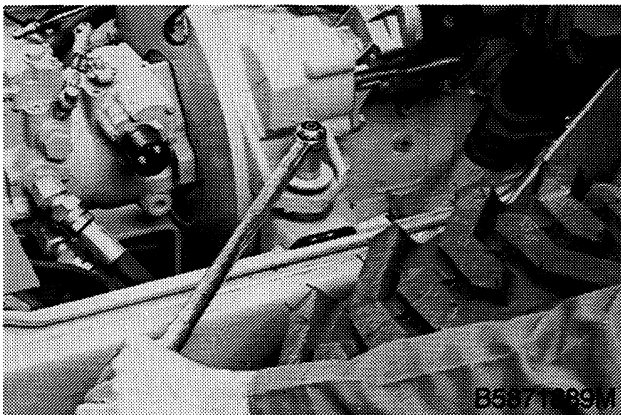


Install the bolts, hardened washers, and self-locking nuts that fasten the front engine mounts to the frame. Tighten the self-locking nuts to 135 to 165 pound-feet (183 to 224 Nm).

**STEP 50**

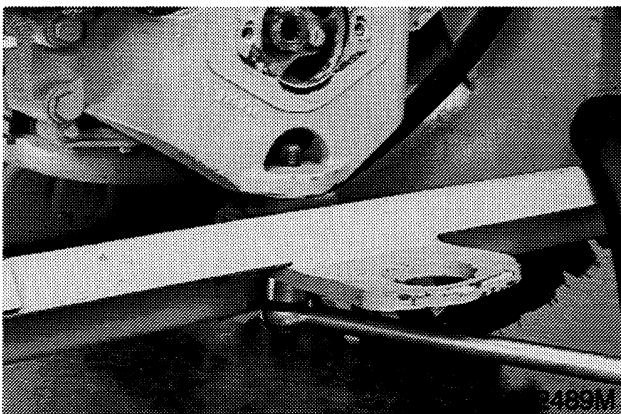


Install the cap screw and hardened washer that fastens the rear engine mount to the frame. Tighten the self-locking nut to 135 to 165 pound-feet (183 to 224 Nm).

**STEP 51**

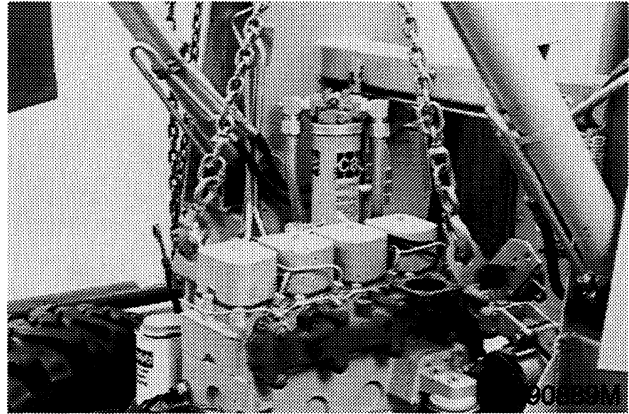


Disconnect the CAS-10119 lifting sling from the engine.

**STEP 52**

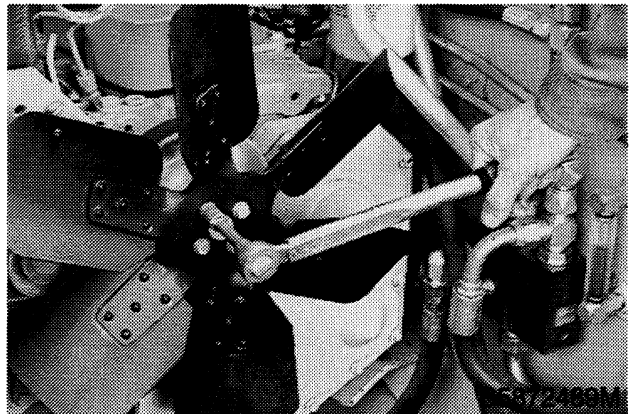


Put the fan in position on the engine. Install the cap screws and lock washers and tighten the cap screws to 276 to 324 pound-inches (31 to 37 Nm).


**STEP 53**

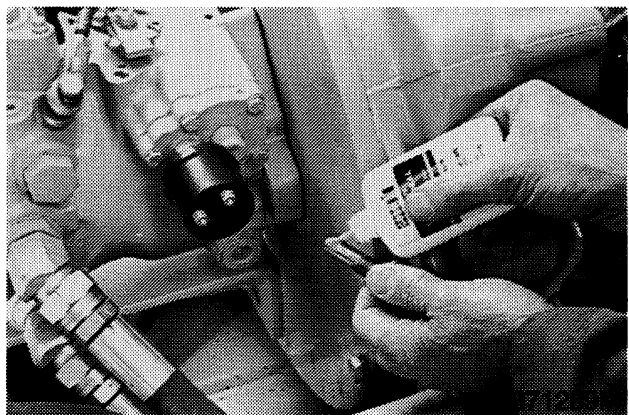


Apply 271 Loctite to the threads of the cap screws that fasten the tandem pump and the tandem pump mounting bracket to the tandem pump mounting plate.

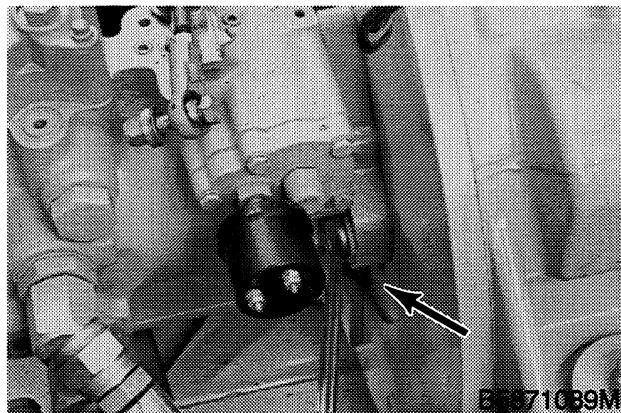**STEP 54**


Install and tighten the cap screws that fasten the tandem pump to the pump mounting plate to 85 to 95 pound-feet (115 to 129 Nm).

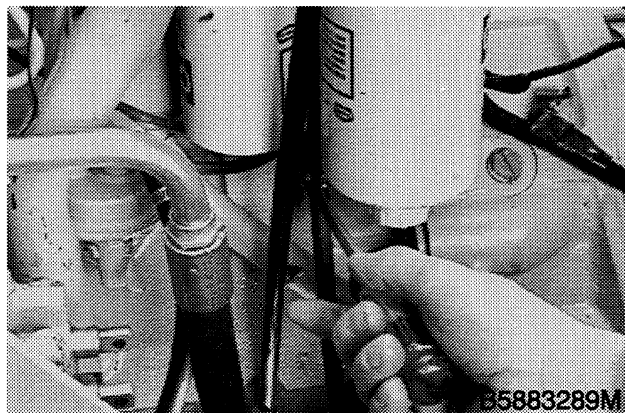**STEP 57**


Connect the hose to the fuel return line and tighten the clamp.

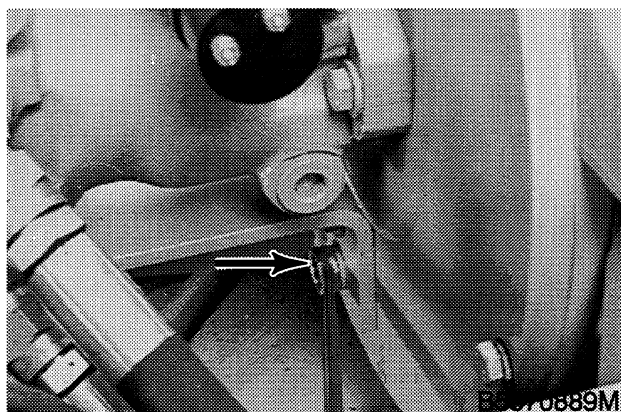**STEP 55**


Install and tighten the cap screws that fasten the pump mounting bracket to the pump mounting plate to 85 to 95 pound-feet (115 to 129 Nm).

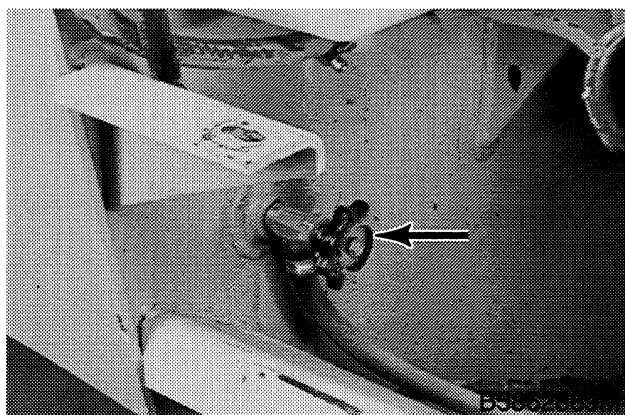**STEP 58**

Open the shutoff valve for the fuel supply line.

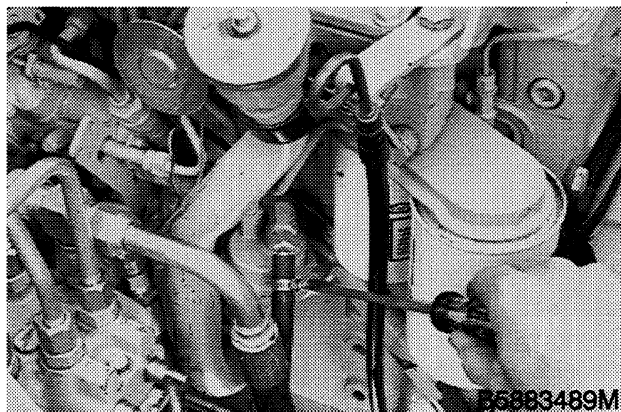
**STEP 56**

Connect the fuel supply hose to the hand primer pump and tighten the clamp.

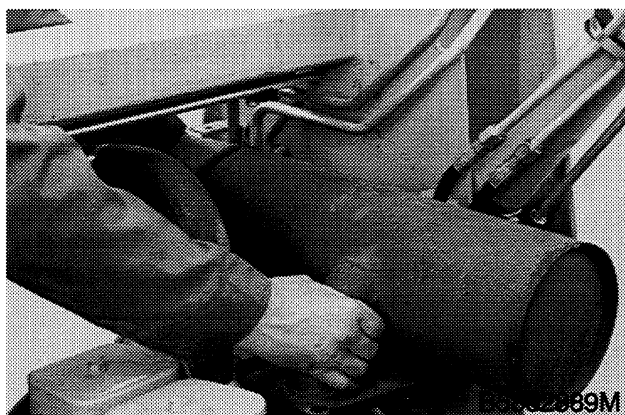**STEP 59**


Install the muffler.

**STEP 60**

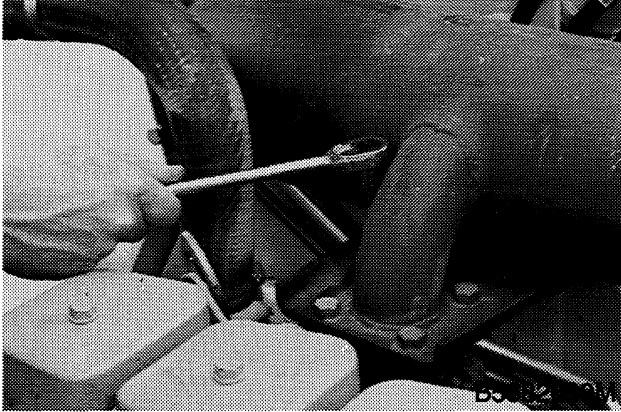


Install the cap screws and lock washers that fasten the muffler. Tighten the cap screws.

**STEP 61**

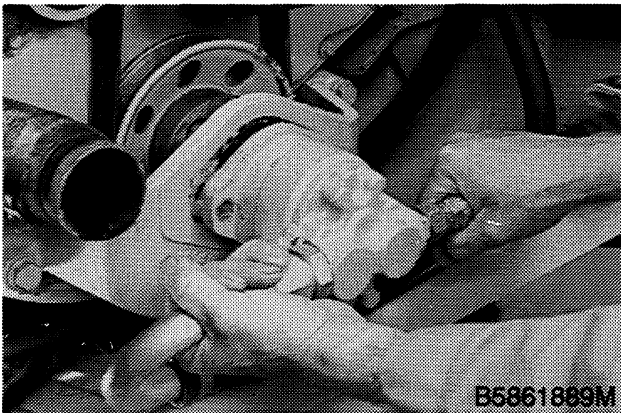


Lubricate the drive shaft with Molykote Type G lubricant. Engage the drive shaft of the equipment pump with the coupling on the crankshaft pulley. Push the equipment pump against the rear engine mount and install the cap screws and lock washers.

**STEP 62**

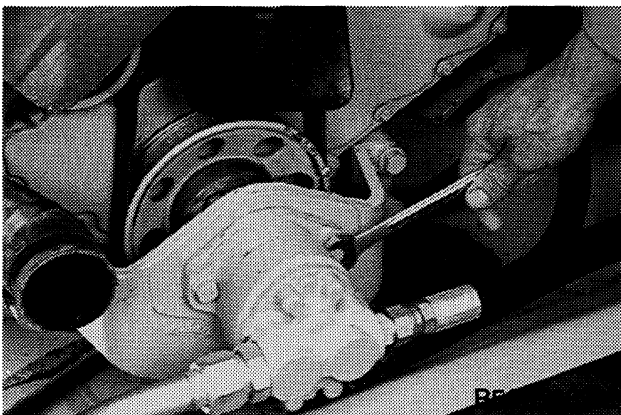


Tighten the cap screws.

**STEP 63**

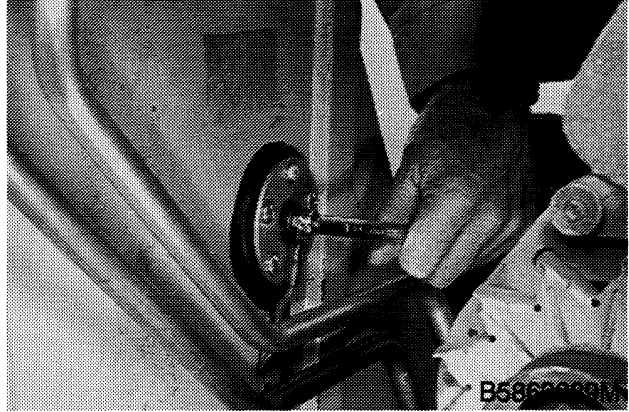


Connect the wire to the fuel level sender.

**STEP 64**

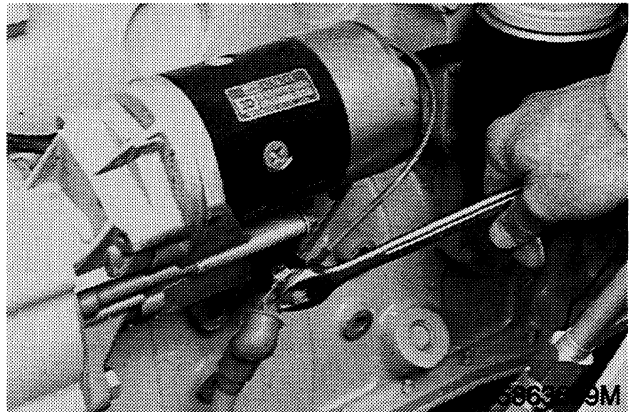


Connect the positive cable to the battery terminal on the starter solenoid.

**STEP 65**

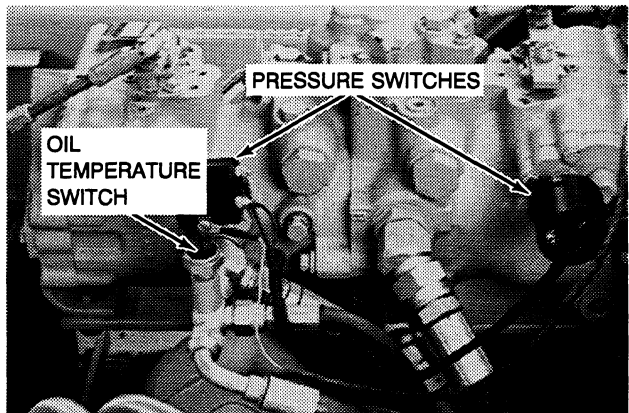

Connect the wire to the oil temperature switch. If the machine is equipped with a backup alarm, connect the wires to the pressure switches.

**STEP 66**

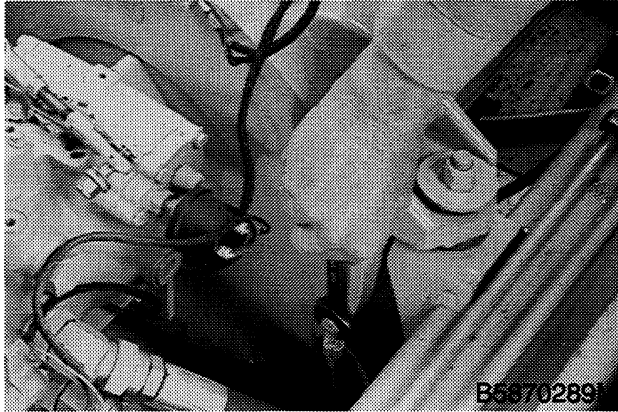


Install the cap screw, flat washer, and ground cable to the pump mounting plate. Tighten the cap screw.

**STEP 67**


Remove the tape or cover from the opening for the intake manifold.

**STEP 68**

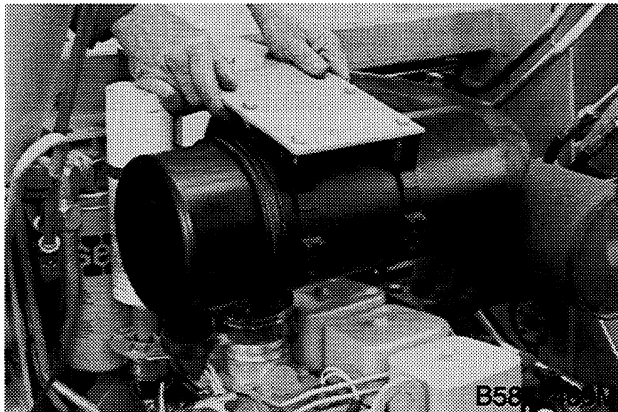


Install the air cleaner and connect the hose to the intake manifold.

**STEP 69**

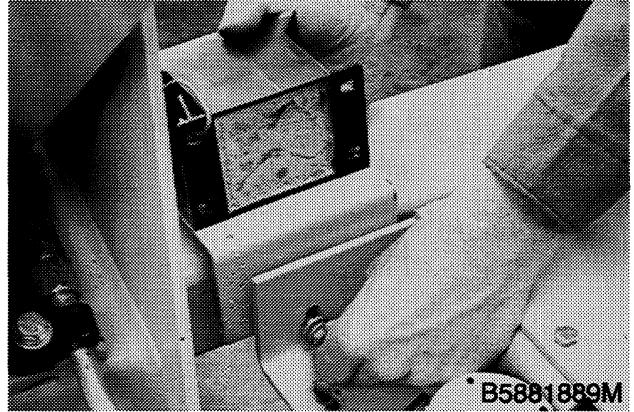


If the machine is equipped with a backup alarm, install the bracket for the backup alarm between the bracket for the air cleaner and the frame. Hold the backup alarm and install the cap screw, lock washer, and hardened washer.

**STEP 70**

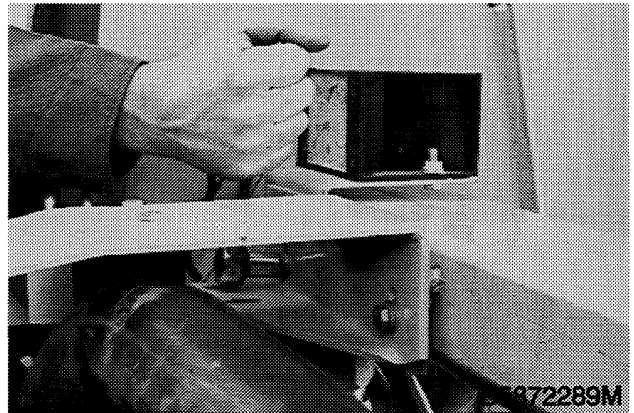


Install the other cap screw, lock washer, and hardened washer. Tighten the cap screws.

**STEP 71**

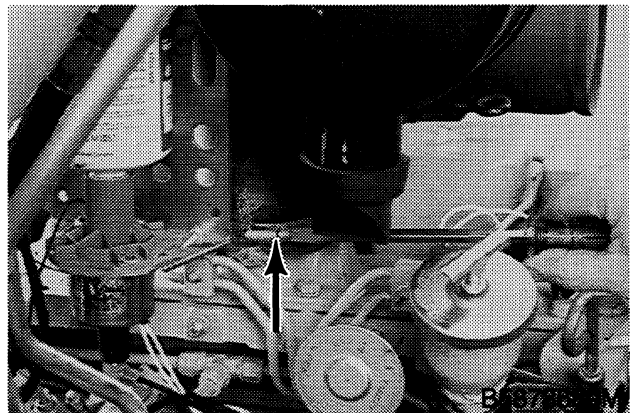


Tighten the clamp on the hose at the intake manifold.

**STEP 72**

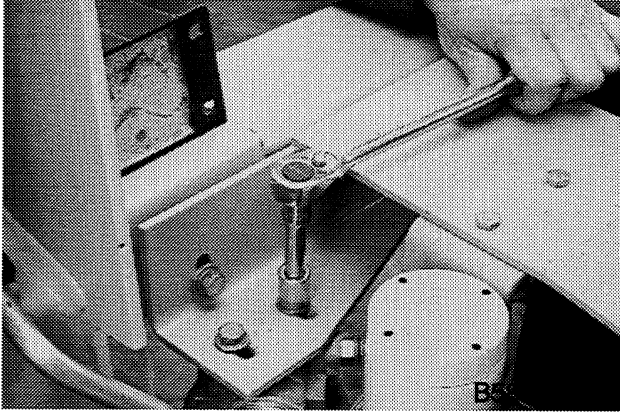


Install the cap screws and hardened washers that fasten the hydraulic oil filter to the bracket. Tighten the cap screws.

**STEP 73**

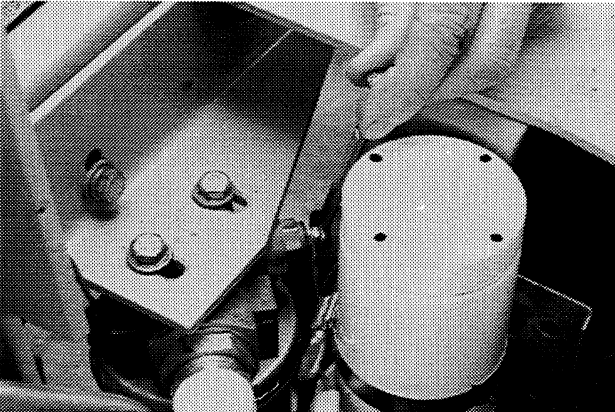

Connect the wire to the hydraulic oil filter.



**STEP 74**

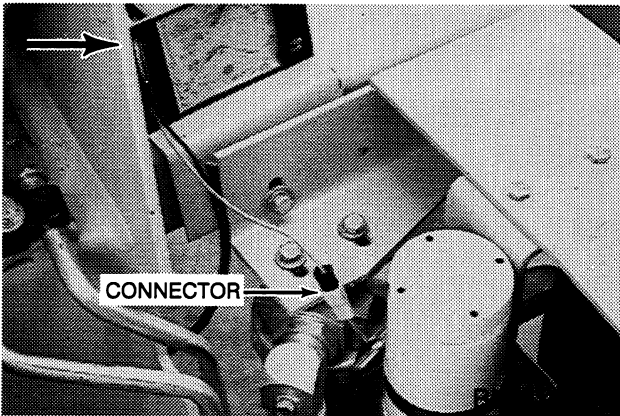

If the machine is equipped with a backup alarm:

1. Connect the black wire to the side of the backup alarm.
2. Connect the connector for the wire harness.


**STEP 75**

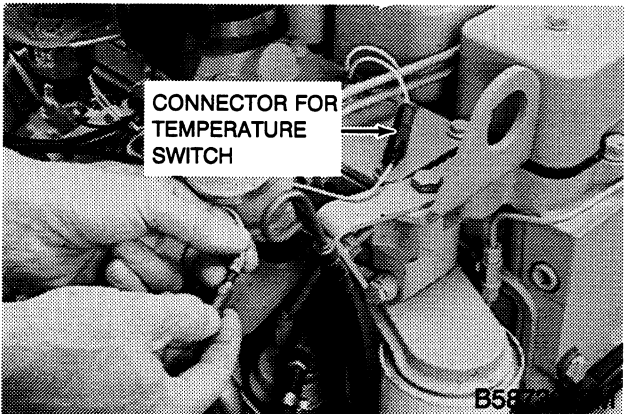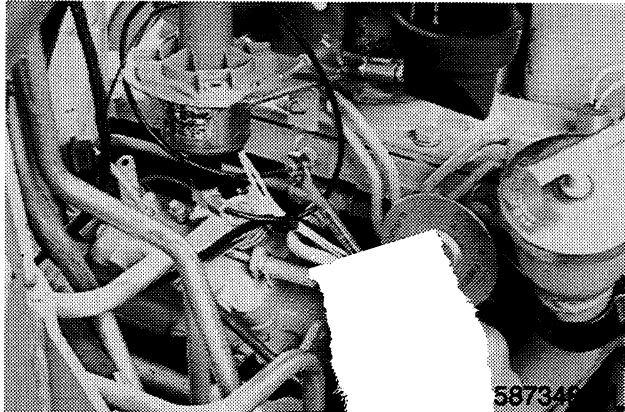

If the machine is equipped with ether injection:

1. Connect the tube to the intake manifold.
2. Connect the wire for the temperature switch.
3. Connect the wire to the valve assembly.

**STEP 76**

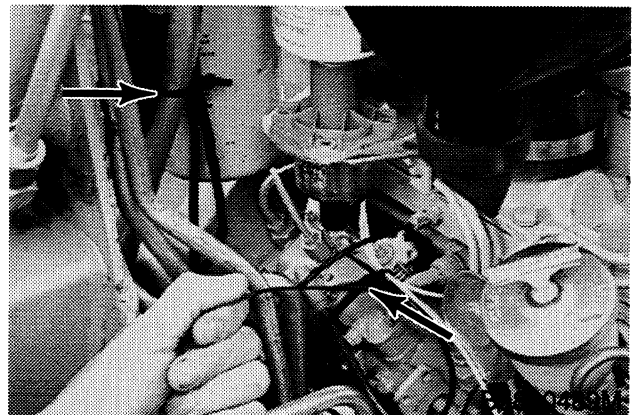



Install new tie straps as shown.

**STEP 77**

Fasten the operators compartment in the operating position according to the instructions in Section 9003.

**STEP 78**

Connect the ground cable to the negative post on the battery. Install the floor plate.

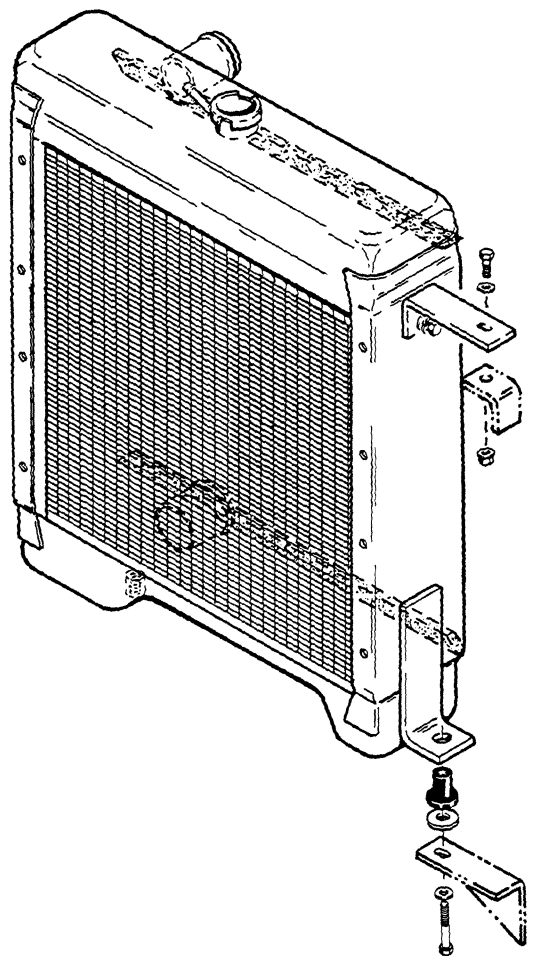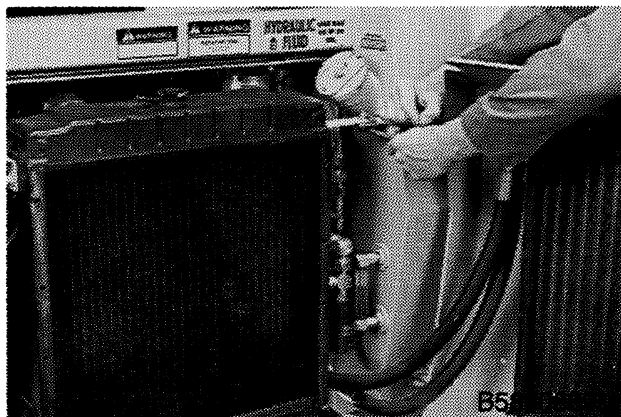**STEP 79**

Install the hardware for the right side of the radiator as shown. Tighten the bottom cap screw to 15 to 20 pound-inches (1.68 to 2.25 Nm).



**Suggest:**

**If the above button click is invalid.**


**Please download this document**

**first, and then click the above link**

**to download the complete manual.**


**Thank you so much for reading**

### STEP 80

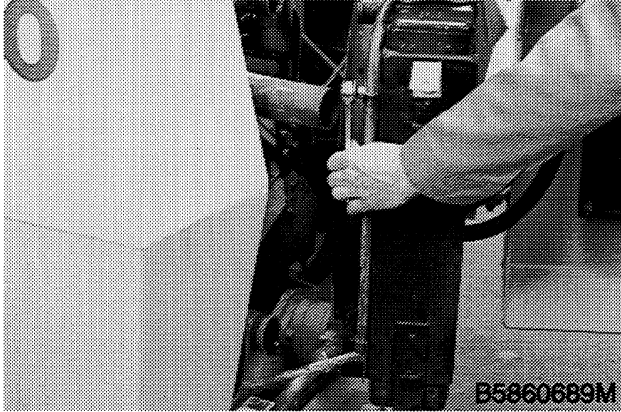


Install the clamps for the coolant reservoir hose and install the cap screws and flat washers. Tighten the cap screws.

### STEP 81

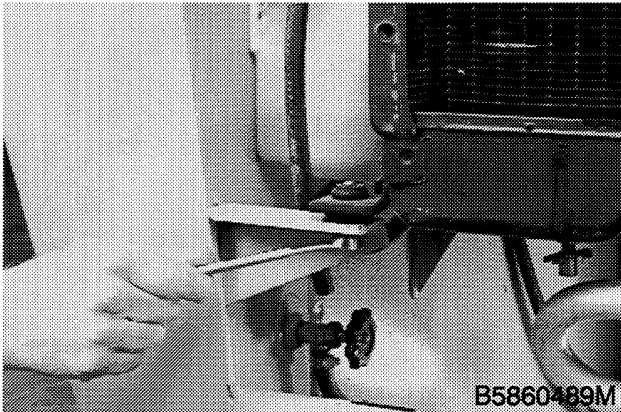


Push the left side of the radiator to the front. Install the cap screw and flat washers that fasten the left side of the radiator to the left radiator mounting bracket. Tighten the cap screw to 15 to 20 pound-inches (1.68 to 2.25 Nm).

### STEP 82

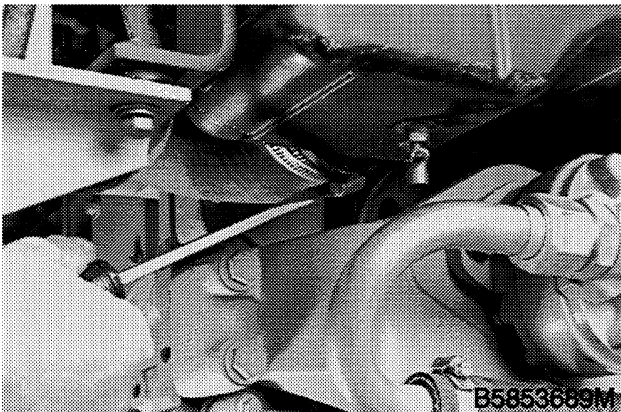

Connect the bottom radiator hose and tighten the clamp.


### STEP 83

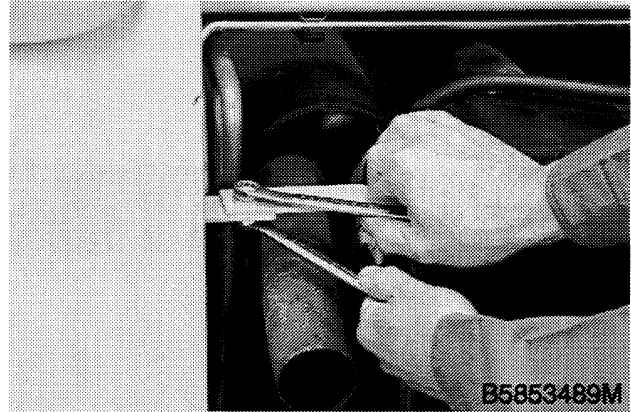

Install the bolt, flat washer, and self-locking nut that fasten the top left radiator support to the frame. Tighten the self-locking nut.


**NOTE:** Make sure the fan is centered in the fan shroud. Loosen radiator mounting hardware and move radiator as required.

### STEP 84

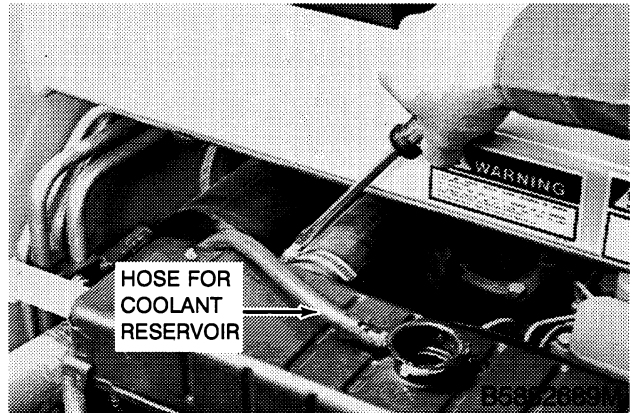

Connect the hose for the coolant reservoir to the radiator. Connect the top radiator hose and tighten the clamp.

### STEP 85

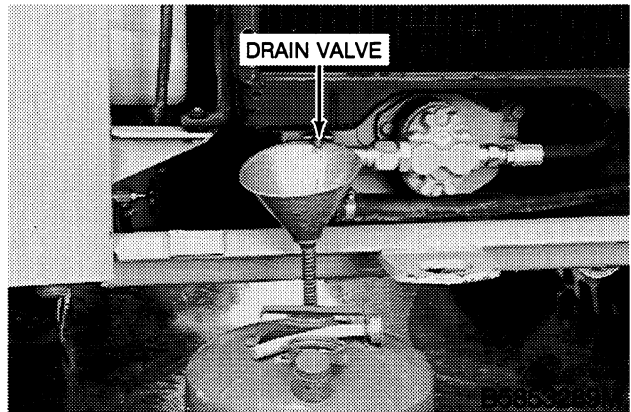

Close the drain valve in the radiator and fill the radiator with coolant. See Section 1002 for coolant specifications.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**