

5010 Standard Tractor (Serial No. 8000-Up)



JOHN DEERE

OPERATORS MANUAL

5010 Standard Tractor
(Serial No. 8000-Up)

OMR36977 H4 English

OMR36977 H4

LITHO IN U.S.A.
ENGLISH





TO THE PURCHASER

Your versatile new John Deere Tractor meets the exacting requirements of modern farming.

Operating ease and comfort, hydraulic power when and where you need it, the ability to match engine power and transmission speed to any job, outstanding economy and dependability, modern styling, and simplicity of lubrication and service are all special features of this great new tractor.


We are confident this modern tractor, combined with equally advanced John Deere tools and implements, will help you to farm better, easier, and more profitably.

At the time the tractor was delivered, the John Deere dealer discussed with you its safe operation and proper care. However, before putting the tractor to work, read this manual. It contains complete instructions for operating the tractor, caring for it, and taking full advantage of its many time- and labor-saving features. After reading the manual, keep it in a convenient place for quick and easy reference if questions arise concerning operation, lubrication or service.


The service policy which you received with your new tractor certifies that the tractor was properly inspected and prepared for delivery by your John Deere dealer. Keep this policy in a safe place and present it to the dealer whenever services which it authorizes are required.

Your John Deere dealer wants to help you get the most value from your tractor. His skilled servicemen can handle every job efficiently. These men are trained in modern service methods; they have all necessary tools and equipment. If new parts are needed, only genuine John Deere parts will be installed. These parts are exact duplicates of the originals, made from the same patterns and of the same high-quality materials.

When in need of new parts, be prepared to furnish your dealer with the engine serial number, the tractor chassis serial number, and the tractor series number. For ready reference, locate and record the serial numbers in the spaces provided in the following illustrations.

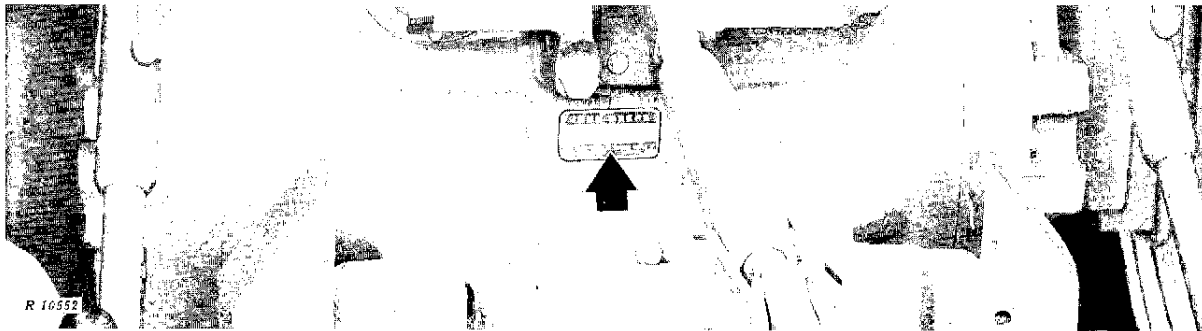

Record Tractor Chassis Serial Number

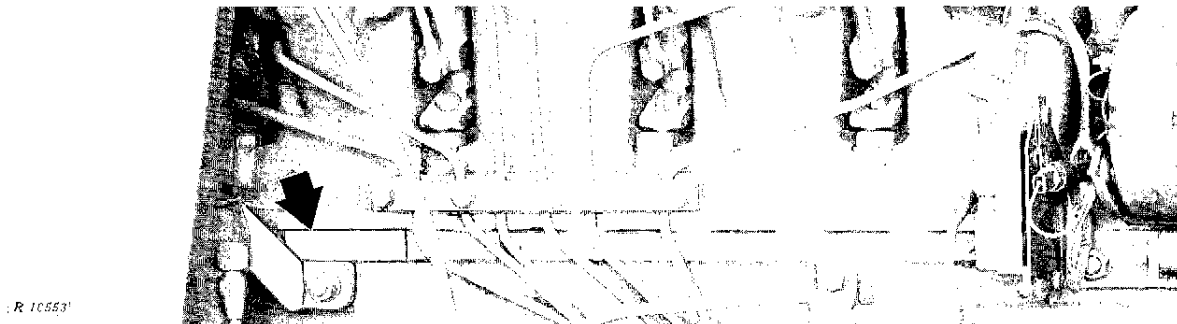

Record Engine Serial Number



CONTENTS

<i>Specifications</i>	2
<i>Controls and Instruments</i>	4
<i>Operation</i>	6
<i>Safety Rules</i>	26
<i>Fuels and Lubricants</i>	28
<i>Lubrication and Periodic Service</i>	31
<i>Service</i>	39
<i>Tractor Storage</i>	50
<i>Trouble Shooting</i>	51
<i>Index</i>	57

REVISED INFORMATION CONCERNING ENGINE OIL AND FILTER CHANGES

Since this manual was printed, the engine oil and filter change recommendations have been revised as follows:

Engine oil change period - every 100 hours of service.
Filter change period - every 200 hours of service.

On new and rebuilt engines, change oil and filter after first 100 hours of service.

Use oil meeting MIL-L-2104B specifications of viscosity recommended in the lubrication and periodic service section of this manual. *NOTE: If fuel sulfur content exceeds 0.5 percent, use Series 3 oil which has been MS Sequence Tested.*

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

ELECTRICAL SYSTEM:

Type 24-volt, split-load system
 Starter and alternator voltage 24 volts
 Lights and Accessory voltage 12 volts
 Batteries . . Four 6-volt, 51 plate, 115 am-
 pere-hour, tractor-type, connected in series

TRANSMISSION:

Type Syncro-Range, constant-mesh
 Gear selections . . . 8 forward and 3 reverse
 Shifting 4 stations, synchronized
 shifting within stations

HYDRAULIC SYSTEM:

Type Closed center, constant pressure.
 Includes power steering, power
 brakes, implement control, and
 transmission and differential lu-
 brication.

Maximum pressure 2250 psi

BRAKES Hydraulically power actuated,
 disk-type operating in oil

POWER TAKE-OFF:

Type Independent, constant running
 Speed (1900 engine rpm) 1010 rpm
 PTO ahead of drawbar hitch point . 20-3/8 in.
 PTO shaft above ground 25-1/2 in.

PTO CLUTCH Hydraulically power ac-
 tuated, hand-operated

	Size	Ply
FRONT TIRES	11.00-16	8
REAR TIRES***	24.5-32	10
FRONT WHEEL TREAD	67 in.	
REAR WHEEL TREAD	See page 11	


DIMENSIONS:

Wheel base	104 in.
Over-all length	172-1/4 in.
Over-all height	96-1/4 in.
Height to steering wheel	81-1/2 in.
Width	Regular wheel, 95-3/4 in. Dual wheel, 120 in.
Clearance	16 in.
Turning radius	12 ft. 6 in.

SHIPPING WEIGHT (Less fuel and
 extra ballast) 12,270-lbs.

****Additional tire sizes available.*

Specifications and design subject to change without notice.

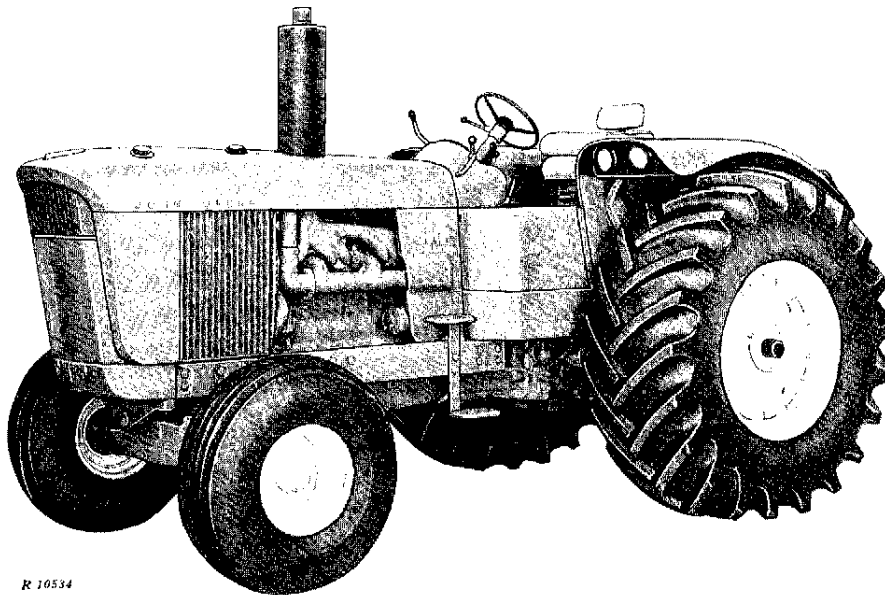


R 10534

John Deere 5010 Standard Diesel Tractor




CONTROLS AND INSTRUMENTS

Before attempting to operate your new tractor, become familiar with the location and purpose of its controls and instruments. Study the next few pages carefully, regardless of your previous tractor experience.

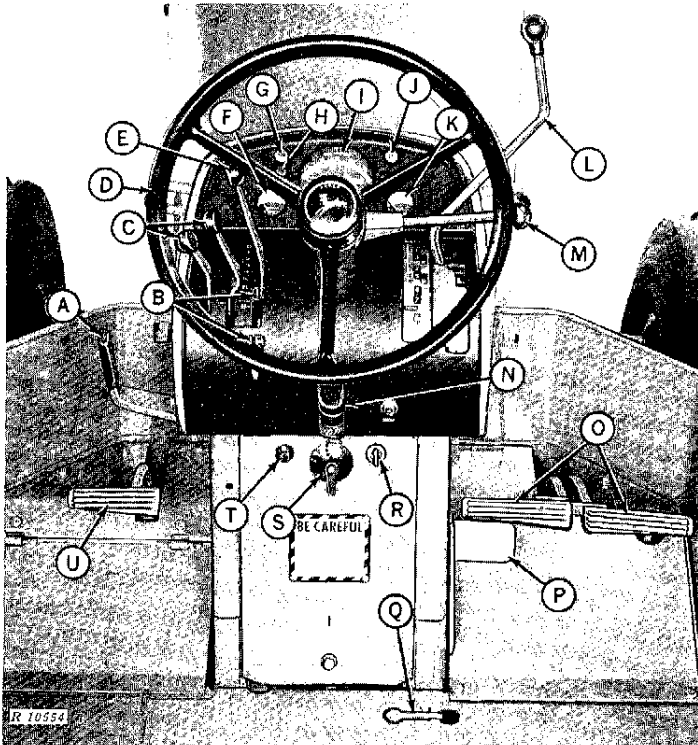

- A - PTO Clutch Operating Lever (Page 24)
- B - Rockshaft Control Lever Stop and Lock (Page 18)
- C - Remote Cylinder Operating Levers (Page 15)
- D - Steering Wheel
- E - Rockshaft Control Lever (Page 18)
- F - Water Temperature Gauge
- G - Alternator Indicator Lamp (Page 6)
- H - Speed Indicator Knob (Page 10)
- I - Speed-Hour Meter (Pages 10 and 31)
- J - Oil Pressure Indicator Lamp (Page 6)
- K - Fuel Gauge
- L - Gear Shift Lever (Page 10)
- M - Hand Throttle (Page 8)
- N - Ether Starting Fluid Adaptor (Page 7)
- O - Brake Pedals (Page 10)
- P - Foot Throttle (Page 8)
- Q - Power Take-Off Drive Disconnect Lever (Page 24)
- R - Key Switch (Page 6)
- S - Light Switch (Page 14)
- T - Starter Switch (Page 6)
- U - Clutch Pedal (Page 10)

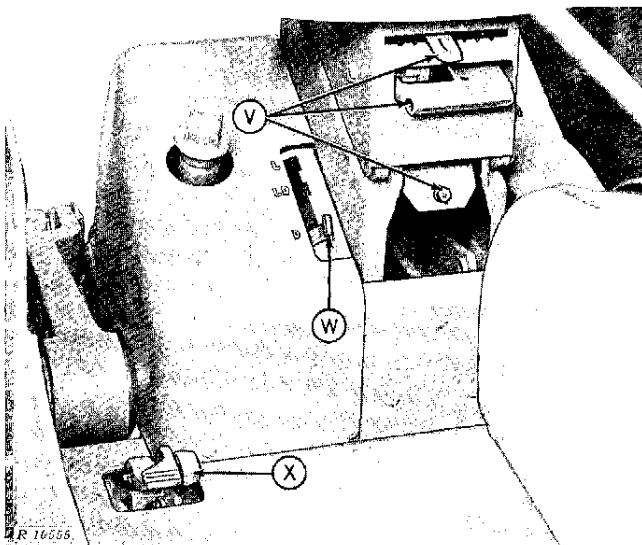

- V - Seat Controls (Page 5)
- W - Rockshaft Selector Lever (Page 18)
- X - Differential Lock Operating Pedal (Page 11)

SEATS

Your tractor may be equipped with either the regular seat or an optional deluxe seat. The regular seat is cushioned by no-sag springs and foam padding, while the deluxe seat uses a steel compression spring and shock absorber to provide "Float-Ride" suspension. The deluxe seat is also equipped with a flexibly-mounted padded backrest and semi-circular foam padding which surrounds the operator.

Use only warm water and mild soap to clean the seat cushions. NEVER USE SOLVENTS.

MOVING SEAT TO UPPER, REAR POSITION

To move the deluxe seat up and back, stand up and lift the seat release latch. The seat will move automatically to the upper, rear position. Sit down to return the seat to normal, preset operating position.

To move the regular seat out of the way for standing, lift the seat release latch and push the seat to the upper, rear position where it will latch. To return the seat to normal, preset operating position, lift the latch and allow the seat to move forward.

ADJUSTING FOR HEIGHT OF OPERATOR


The normal operating position of the seat can be suited to the height of the individual operator. To make this adjustment, first move the seat to the upper, rear position. Then shift the seat po-

sition selector lever between "short" and "tall" until the pedals and levers can be operated comfortably when you are seated. The seat will always return to this position when you sit down after having moved the seat up and to the rear for standing.

ADJUSTING FOR WEIGHT OF OPERATOR (DELUXE SEAT)

You can adjust the tension of the steel compression spring of the deluxe seat to conform to your weight. This enables the seat to "float" when the tractor is driven over rough ground. To make this adjustment, turn the weight adjusting screw clockwise or counter-clockwise until the indicator on the left-hand side of the seat conforms to your weight.

ADJUSTING COUNTERBALANCE SPRING (DELUXE SEAT)

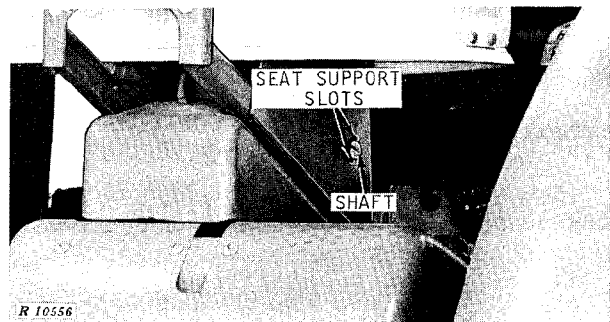


Turning Counterbalance Shaft

If the deluxe seat does not move fully to the rear when unlatched, adjust the counterbalance spring as follows. Push the seat to the upper, rear position. Insert a screwdriver in the slot in the counterbalance shaft and push in on the screwdriver to unlatch the shaft. Turn the shaft counter-clockwise until seat action is satisfactory. Line up the latch across the end of the shaft with one of the pairs of slots in the side of the seat support and release pressure on the screwdriver.

ADJUSTING THE BACK (REGULAR SEAT)

The position of the back of the regular seat can be adjusted to suit the individual operator. To move the back up or down, remove the seat back attaching screws, and move the back to the desired position.

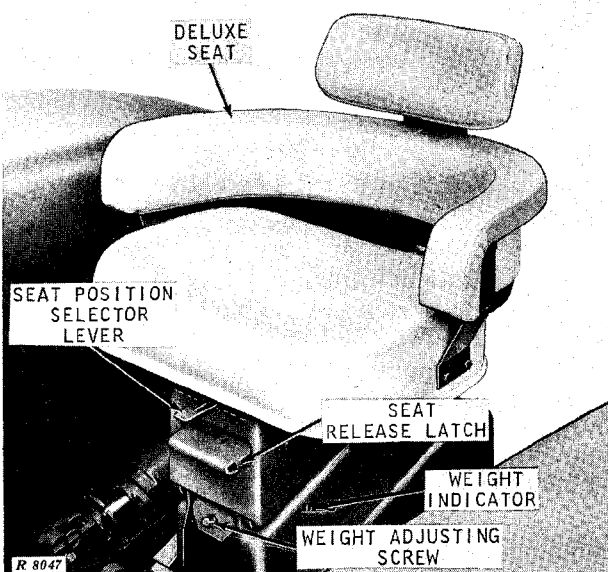

Seat Controls



OPERATION

Complete instructions for operating your tractor safely and efficiently are given on the following pages. By following these directions carefully, you can be sure that you are taking full advantage of the many features built into your tractor.

OPERATING THE ENGINE

PRESTARTING CHECKS

(1) Perform the following checks and services before starting the engine for the first time each day:

(a) Check the engine crankcase oil level - see page 33.

(b) Check the radiator coolant level - see page 33.

(c) Change the air cleaner oil when the dirt level exceeds 3/8-inch - see page 34. If the tractor has a precleaner, check the collector bowl - see page 34.

(d) Check the fuel pump sediment bowl - see page 39.

(e) Lubricate the wide-swing drawbar rollers, the front axle pivot pins, steering knuckle pins, steering bellcrank, and steering cylinder end fittings—see page 34.

STARTING THE ENGINE

NOTE: If the prevailing temperature is 40° F. or lower, it may be necessary to use a cold weather starting aid to start the engine - see next column.


(2) Make sure that the fuel shut-off valve at the bottom of the fuel tank is open - see page 39.

(3) See that the shift lever is in the "PARK" position. Depress the clutch pedal to decrease drag on the engine.

(4) Set the hand throttle approximately one-half of its travel downward to the first stop.

(5) Turn the key switch clockwise to the first position. Both indicator lights should glow. If either light fails to glow, turn off the key and determine the cause.

(6) Press on the starter switch to start the engine. Do not press on the starter switch for more than 30 seconds at a time. To do so may overheat the starter. If the engine does not start the first time, wait for a minute or two before trying again. If it does not start after four attempts, see "Trouble Shooting" (page 75).

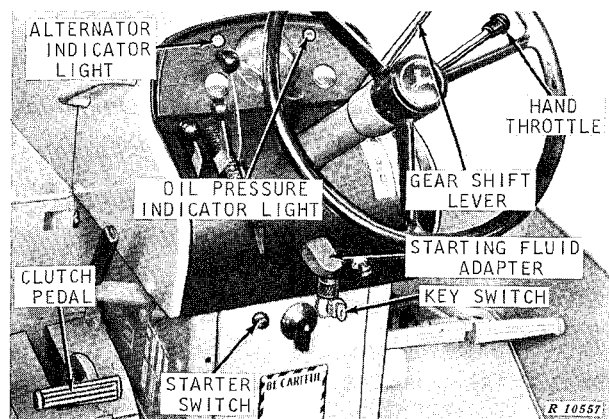

Starting Controls

If the starter switch is released before the engine starts, wait until the starter and the engine stop before trying again. This will prevent possible damage to the starter.

(7) After the engine starts, both indicator lights should go out. If either light continues to glow when the engine is running, stop the engine and determine the cause.

CAUTION: Always leave key switch on while the engine is running so the indicator lights will function.

COLD WEATHER STARTING AIDS

For cold weather starting, the tractor is equipped with an ether starting fluid adapter. Other starting aids are available from your John Deere dealer.


These aids are effective at low temperatures, only when the engine is otherwise operating satisfactorily. They will not correct such deficiencies as low battery charge, crankcase oil of heavy viscosity, and high electrical resistance which may prevent the engine from starting.

Always use No. 1 diesel fuel at temperatures below 0° F.

STARTING FLUID ADAPTER

This adapter is used to inject atomized starting fluid into the engine air intake system. Pressurized cans of starting fluid are available from your John Deere dealer.

To use the can of starting fluid, remove the safety cap and plastic spray button from the can. Remove the cap from the adapter and position the can under the adapter.

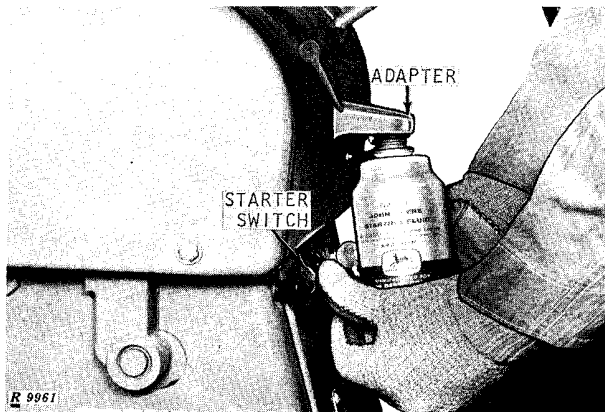

Injecting Starting Fluid

To inject starting fluid, push up on the can.

CAUTION: To avoid damage, turn engine with starter one or two revolutions before injecting starting fluid. Inject starting fluid only while the engine is turning.

Relax pressure on the can between "shots" of starting fluid. Stop injecting fluid after the engine starts. If the engine begins to die during the first few minutes of operation, inject another "shot" of fluid. When the engine is operating satisfactorily, remove the can from the adapter and replace the safety cap on the can.

Be sure to install the cap on the adapter when it is not in use. This will prevent dust from being drawn into the engine.


Store starting fluid cans where they will not be subject to extreme cold or warm temperatures. For best results, store fluid at room temperature.

CAUTION: Ether starting fluid is highly flammable.

SHUTTING OFF HYDRAULIC PUMP

If the tractor has a hydraulic pump shut-off screw (available from your John Deere dealer), the starter speed may be increased during cold weather by shutting off the hydraulic pump so it

will not build up pressure. To do so, turn the shut-off screw in (clockwise) one turn with a screwdriver. Then turn the screw in by hand until resistance is felt. Turn the screw in one more turn.

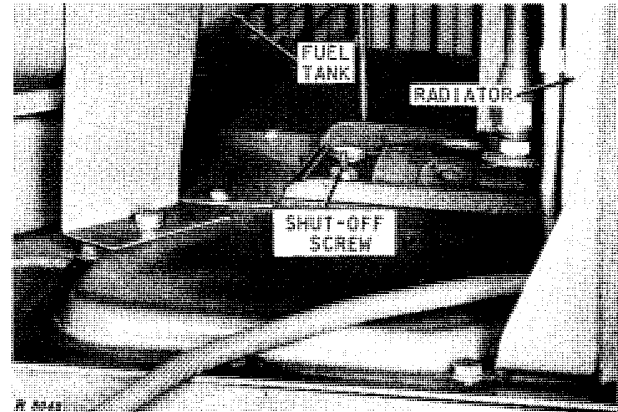

Hydraulic Pump Shut-Off Screw

After the engine has started, use a screwdriver to back the shut-off screw all the way out (turn the screw counter-clockwise). The pump will now build up pressure.

NOTE: Oil will leak past the shut-off screw if it is not backed all the way out against the internal stop.

CRANKCASE OIL HEATER

To facilitate cold weather starting, a 240-watt, 115-volt electrical crankcase oil heater can be installed in the engine oil pan. To use the heater, remove the cap, connect the cord to the heater and connect to any 115-volt electrical source. To remove the electrical connector from the heater, press release lever in the connector.

ADDITIONAL BATTERIES

Cold weather starting can be made easier by connecting additional 12-volt batteries in parallel with the tractor batteries.

CAUTION: Gas given off by batteries is explosive. To prevent injury or battery damage, avoid sparks near the batteries.

Make sure all electrical switches or accessories are turned off and make the last connection or the first disconnection at some point away from the batteries.

Use two 12-volt booster batteries and four jumper cables. Connect the first jumper cable

8 Operation

to the positive (+) post of the first booster battery and to the positive (+) post of the second from front tractor battery. Connect the second jumper cable from the negative post of the second booster battery and to the negative post of the second from rear tractor battery. Connect one end of the third jumper cable to the negative post of the first booster battery. Connect one end of the fourth jumper cable to the positive (+) post of the second booster battery. To make the last connection away from the batteries, connect the other ends of the third and fourth jumper cables.

NOTE: To prevent damage to the light gauge ground wire, never connect a booster battery to the tractor frame. Tractor is equipped with an ALTERNATOR. To prevent damage to alternator or electrical system, be sure to connect batteries in proper polarity.

See your John Deere dealer for additional booster battery information.

TRACTOR WARM-UP PERIOD

Always be sure the tractor is warmed up properly before operating under a full load.

A good way to do this is first to idle the engine at about 1500 rpm for 5 minutes and then operate it at about 1900 rpm for another 5 minutes.

It is good practice to operate the tractor for the first 30 minutes in a lower gear than is normally required for the load. This gives the oil a chance to circulate freely and prevents undue wear on engine or transmission parts.

ENGINE IDLING

Avoid unnecessary engine idling. Prolonged engine idling may cause the engine coolant temperature to fall below its normal range. This in turn causes crankcase oil dilution, due to incomplete fuel combustion, and permits formation of gummy deposits on valves, pistons, and piston rings. It also promotes rapid accumulation of engine sludge and unburned fuel in the exhaust system.

When the tractor is to remain idle for a considerable length of time, stop the engine.

ENGINE SPEEDS

The tractor engine is designed to operate at working speeds ranging from 1500 to 2200 rpm. The engine can be operated at any speed in the working range to meet various operating conditions. Operate the engine at 1900 rpm to obtain the SAE rated PTO speed.

In addition, engine speeds can be varied up to 2500 rpm to save time when traveling on highways or smooth-surfaced roads.


Slow idle speed is approximately 600 rpm.

To check engine speeds, see page 37.

USING HAND THROTTLE

Use the hand throttle to select slow idle or any of the variable governed speeds from 1500 to 2200 rpm.

Move the hand throttle counter-clockwise as far as it will go to obtain normal slow idle speed of 600 rpm.

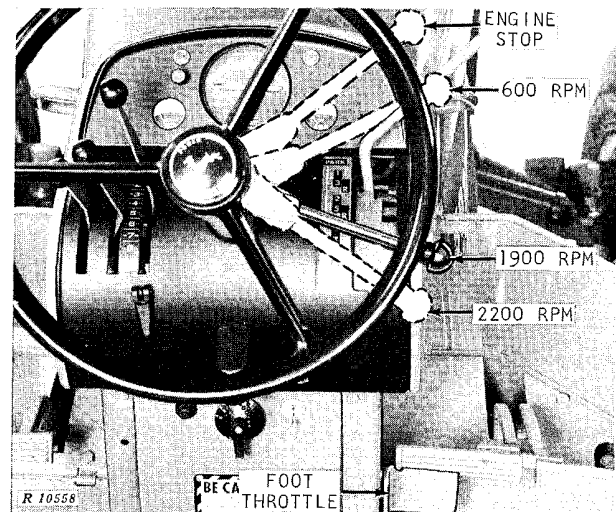

Range of Hand Throttle Positions

To obtain 1900 rpm load speed, move the throttle clockwise to the first stop. Placing the throttle halfway between slow idle and 1900 rpm gives the 1500 rpm speed. Engine speeds between 1500 and 1900 rpm may be selected by moving the lever between these two positions.

To obtain working speeds above 1900 rpm, pull out on the knob at the end of the hand throttle. With the knob pulled out, move the throttle clockwise as far as it will go. This is the 2200 rpm load speed position. Engine speeds between 1900 and 2200 rpm may be selected by moving the lever between these two positions.

USING FOOT THROTTLE

The foot throttle is used to obtain engine transport speeds or to raise engine speed momentarily. When the foot throttle is pushed all the way downward, the engine operates at 2500 rpm load speed.

NOTE: The foot throttle should not be used to increase the normal engine working speed.

STOPPING THE ENGINE

Place the shift lever in "PARK" and allow the engine to idle a few minutes. Sudden stopping of a hot engine may allow some parts to overheat momentarily and cause possible damage.

With the hand throttle in the 600 rpm position, pull out on the knob at the end of the throttle lever and move lever counter-clockwise as far as it will go. This stops fuel injection. After a few revolutions the engine will stop.

After stopping the engine, remove the key from the switch to prevent tampering and unauthorized operation. Removing the key also prevents battery discharge in the event that the switch was accidentally left in the "ON" position.

BREAKING IN THE ENGINE

With the following exceptions, the engine is ready for normal operation. To facilitate break-in, avoid prolonged periods of engine idling, particularly for the first 100 hours of service.

When the sulphur content of the diesel fuel used does not exceed 0.5%, change the engine oil and the engine oil filter after the first 100 hours of service. See page 35.

When the sulphur content of the diesel fuel exceeds 0.5%, change the engine oil and oil filter after the first 20 hours of operation.

NOTE: If the coolant temperature rises above the "N" range, shift to a lower gear to reduce the load.

OPERATING THE TRACTOR

SELECTING GROUND SPEED

The tractor has 8 forward speeds and 2 reverse speeds for each of the throttle positions that may be used. These combinations enable the operator to balance speed and power for maximum economy and allow him flexibility to meet varying working conditions. For example, for a given ground speed the operator may choose to work in a low gear at high engine speed for maxi-

imum reserve power or in a higher gear at a lower engine speed for maximum fuel economy.

Examples of the ground speeds at which the tractor will travel are shown below. Engine working speeds may be varied between 1500 rpm and 2200 rpm, and engine transport speeds may be varied up to 2500 rpm. Tractor ground speeds shown in the chart are only for engine speeds of 1500, 1900, 2200, and 2500 rpm.

TRACTOR GROUND SPEEDS

NOTE: The ground speeds shown in this chart are for a tractor equipped with 24.5-32 rear tires with a loaded radius of 31.6 inches.


Gear	Hand throttle operating range			Maximum foot throttle speed	
	1500 rpm	*1900 rpm	2200 rpm	2500 rpm	
1st	1-1/4 mph	1-3/4 mph	2 mph	
2nd	2 mph	2-1/2 mph	3 mph	
3rd	2-3/4 mph	3-1/2 mph	4 mph	
4th	3-1/2 mph	4-1/2 mph	5-1/4 mph	
5th	4-1/2 mph	5-1/2 mph	6-1/2 mph	
6th	5-3/4 mph	7-1/4 mph	8-1/2 mph	
7th	7-1/2 mph	9-1/2 mph	11 mph	12-1/2 mph	} Transport Only
8th	12-1/4 mph	15-1/2 mph	17-3/4 mph	20-1/4 mph	
1st reverse	2-3/4 mph	3-1/2 mph	4 mph	4-1/2 mph	
2nd reverse	4-1/4 mph	5-1/2 mph	6-1/4 mph	7 mph	

**1900 rpm engine speed gives 1000 rpm PTO speed. Some PTO-driven implements are operated at other speeds. For detailed instructions, see the implement operator's manual.*

10 Operation

Gates in the shift quadrant permit selection of the proper gear for the work to be done, as shown in the illustration. Turn the speed indicator knob on the instrument panel so that the speed-hour meter will show the correct tractor ground speed in miles per hour for the gear selected.

Avoid overloading the tractor. When this occurs, operate in a lower gear. Overloading causes undue strain on parts, eventually resulting in poor operation and unnecessary repair expense.

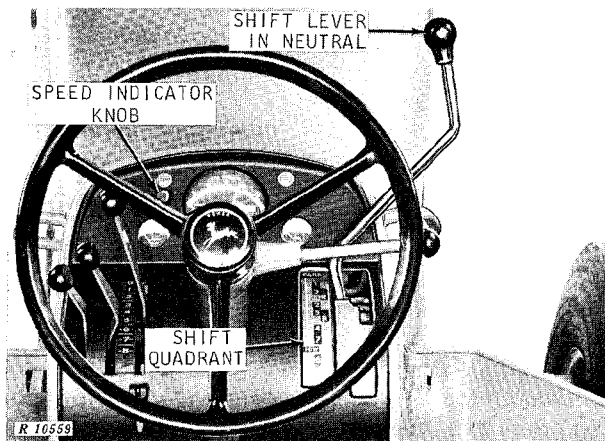

Shift Lever, Shift Quadrant, and Speed Indicator Knob

SHIFTING BETWEEN STATIONS


The shift quadrant has four shift stations. Stations No. 1 and 2 have two forward speeds and one reverse speed. Stations No. 3 and 4 have two forward speeds.

With the tractor stopped and the clutch pedal depressed, move the shift lever to a neutral position at the left side of the quadrant. Then move the shift lever to the station that has the desired speed. Move the lever to the right and into the speed desired.

Gradually release the clutch pedal to take up the load smoothly.

SHIFTING WITHIN STATIONS

With the clutch pedal depressed, the transmission can be shifted from one forward speed to the other forward speed within the same station while the tractor is in motion. For instance, you can shift between 1st and 3rd gears, 2nd and 5th gears, 4th and 7th gears, and 6th and 8th gears without stopping the tractor.

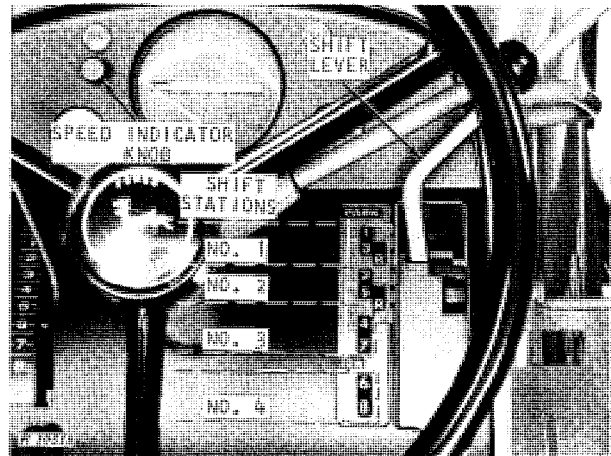

Gear Shift Stations

You can also shift from a forward speed to the reverse speed within the same station without stopping the tractor. However, to avoid injury and damage to the tractor, do so only at slow ground speed.

Gradually release the clutch pedal to engage the clutch.

PARKING THE TRACTOR

When the tractor is stopped for parking, for holding it on an incline, or for holding it during PTO work, move the shift lever as far as it will go forward from neutral to the "PARK" position.

To shift from "PARK," move the shift lever rearward to the station desired.

CAUTION: Be sure the tractor is stopped before placing the shift lever in the "PARK" position.


TOWING THE TRACTOR

When towing the tractor, place the shift lever in "TOW" and have an operator steer the tractor.

CAUTION: Never tow the tractor at high speeds. Always attach a tow bar or chain to the tractor frame. When possible, run the engine to maintain hydraulic pressure for power operation of steering and brakes.

DIFFERENTIAL LOCK

Your tractor may be equipped with a differential lock that will turn both rear wheels at the same speed. This prevents the usual loss of power when one wheel is slipping.

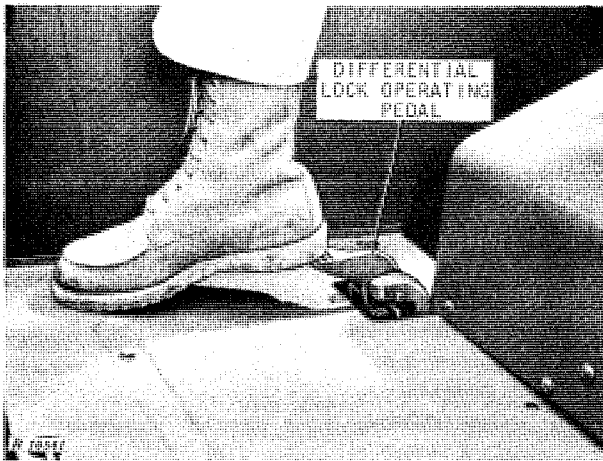


Differential Lock Operating Pedal

When one wheel starts to slip or whenever desired, engage the differential lock by depressing the operating pedal located at the right-rear side of the platform. When no longer required and before turning the tractor, disengage the differential lock by depressing one or both brake pedals. The front wheels should be in the straight ahead position when disengaging the differential lock.

CAUTION: Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.

POWER STEERING AND BRAKES

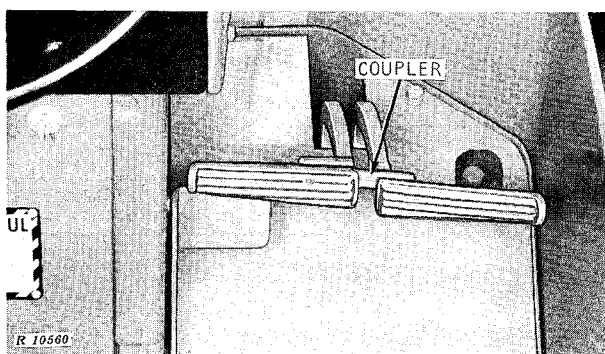

Brake Pedals Coupled Together

The tractor is equipped with full hydraulic power steering and power brakes so that a minimum of effort is required to operate the tractor.

The brake system is equipped with an accumulator which provides force for several brake applications after the tractor engine is stopped.

To assist in making sharp turns, apply the brakes individually or, to stop the tractor, apply both brakes simultaneously. When traveling at high speed, couple the pedals together as shown and use a light pressure on the pedals.

REAR WHEEL TREAD

ADJUSTMENT RANGE (Single Rear Wheels)


Rear wheel tread ranges of 70 to 82 inches with 24.5-32 tires are obtained by moving the wheel on the axle by the rack and pinion.

The rims must always be mounted on the wheels in the narrow tread position.

ADJUSTMENT (Dual Rear Wheels)

If your tractor is equipped with 18.4-34 dual rear tires, be sure the wheels are positioned with 3 inches fender-to-tire clearance and 2-3/4 inches tire-to-tire clearance. It is very important that the inner wheel rim clamp nuts and hub cap screws be securely tightened because the outer wheel must be removed to retighten them.

CAUTION: Never operate the tractor when the rim clamp nuts or hub cap screws are loose.

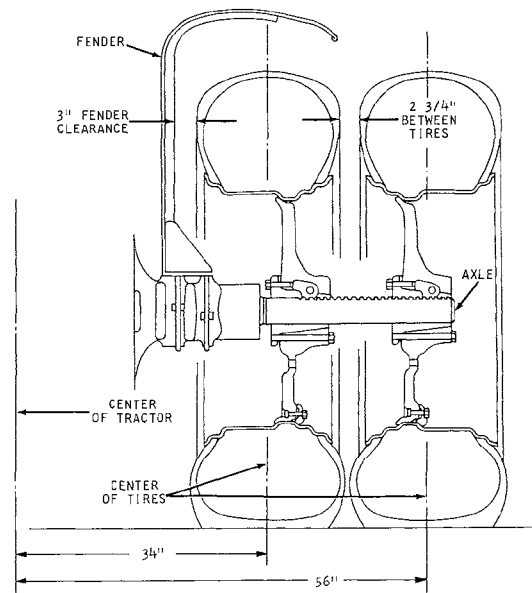


Dual Rear Wheel Tread Adjustment

12 Operation

RACK AND PINION METHOD

This method of rear wheel tread adjustment is accomplished by turning a pinion gear in the wheel hub. The pinion engages a rack on the axle to move the wheel in or out on the axle.

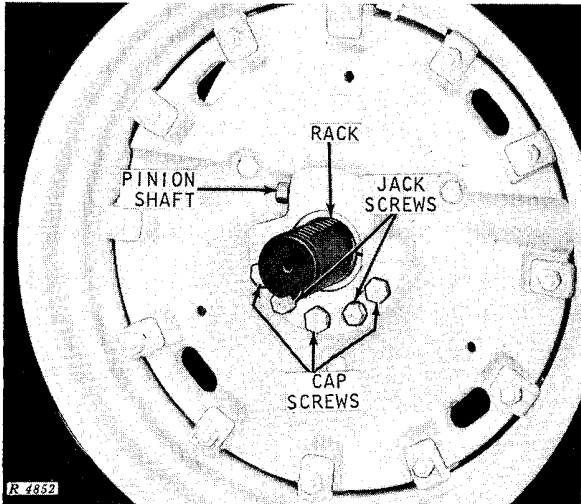

Rack and Pinion Adjustment

The rack and pinion adjustment can be made with up to two outside wheel weights installed. Additional weights will interfere with the turning of the pinion.

Rotate the wheel until the rack on the axle is up. Loosen the three cap screws $1/4$ to $3/8$ inch. To loosen the tapered sleeve, turn the two jack screws clockwise until the notches in the hex. surface are even with the wheel hub.

Jack up the tractor and turn the pinion gear to move the wheel in or out on the axle. Measure the amount the axle protrudes from the hub to maintain the same distance from the wheels to the tractor centerline.

CAUTION: Avoid adjusting wheels too close to the rear axle housing. This can damage the pinion when the hub is tightened. To avoid this, adjust the wheel to the innermost position until the pinion contacts the end of the rack. Then back up until the wheel has moved outward at least $1/4$ inch.

Be sure that the tire or wheel weights do not rub the tractor.

After the desired tread is obtained, back out the jack screws until the entire hex. surface is exposed. Remove the cap screws, oil the threads, and install the cap screws. Tighten them securely.

CAUTION: The Jack screws **MUST BE FREE TO TURN** after the hub is tightened. If necessary, back the jack screws out a little further.

After a few hours service, **RETIGHTEN** the cap screws and keep them tight.

INSTALLING RIMS

When installing the rim after servicing a tire, tighten the clamps evenly to 150 ft-lbs torque. Hammer each bolt head to seat the bolts. Retighten the clamp bolt nuts to the specified torque.

After a few hours service, **RETIGHTEN** the clamp bolt nuts and keep them tight.

TIRES

Properly inflated tires are important to the operation of your tractor. The amount of air pressure to be carried in the front and rear tires depends upon the implement used with the tractor and the amount of ballast employed.

Keep the tires inflated according to the recommendations shown below. Under-inflated tires break and wear out rapidly. Over-inflated tires reduce traction and increase wheel slippage.

INFLATION CHARTS


FRONT TIRES		
Tire Size	Ply	Inflation Pressure
11.00-16	8	36 lbs.

REAR TIRES			
Tire Size	Ply	Inflation Pressure	
		With Little or No Added Ballast	With Max. Ballast or Heavy Rear-Mounted Implement
18.4-34	8	16 lbs.	20 lbs.
24.5-32	10	16 lbs.	18 lbs.

BALLAST

The performance of your tractor can be improved under certain conditions by adding or reducing the ballast at the front end or at the rear wheels.

FRONT END WEIGHTS

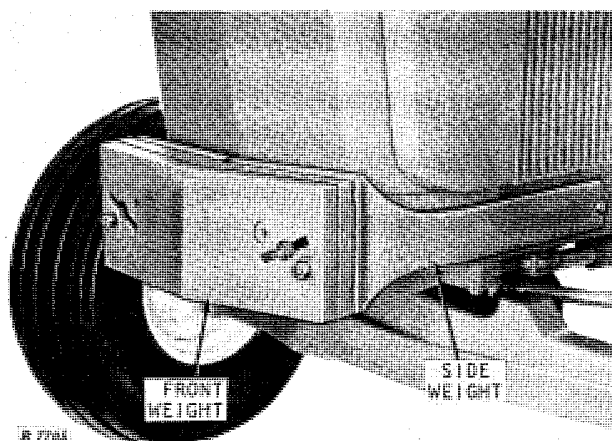

Front End Weight

When using heavy rear-mounted implements or when operating on hilly terrain, install side weights and front weights for increased stability and steering control.

Two side weights and up to eight front weights may be used. Each weight, available from your John Deere dealer, weighs 85 pounds.

Install the side weights first. Then attach the front weights as shown. Rotate each front weight 180 degrees from the preceding front weight to align the mounting holes.

With heavy rear-mounted implements in the raised position, drive slowly to maintain adequate stability; especially over rough ground.

REAR WHEEL WEIGHTS

Power can be wasted and tire life cut drastically by excessive rear wheel slippage. Wheel slippage can be reduced to a minimum by weighting the rear wheels with a liquid solution in the tires or with cast-iron wheel weights.

When the tractor is pulling its rated load, ballast should not be added to the point where all wheel slippage is eliminated. When too much weight is used, the tread marks will be clear and distinct. When too little weight is used, the tread marks will be obliterated.

Maximum Ballast

When the ballast given in the following chart is added, the 24.5-32 tire will be carrying its rated load. Ballast for 18.4-34 rear tires is limited by the 3rd gear operating capacity of the tractor. When ballast is added, adjust the tire pressure as shown in the inflation charts.

Variations from the ballast shown in the chart may be required to meet various field conditions.

RATED TIRE CARRYING CAPACITY

Maximum Added Ballast Per Rear Tire	
With Rockshaft	4290 lbs.
Without Rockshaft	4880 lbs.

However, rear wheel ballast should never exceed the weight required to provide traction for loads within the 3rd gear operating capacity of the tractor.

Be sure to remove the additional weight when it is no longer required.

Cast-Iron Weights

Large 1600-pound or 300-pound cast-iron weights are attached to the inside of the wheel. If additional ballast is necessary, smaller 120-pound weights may be attached to the outside of each rear wheel.

Liquid Weight

Water and calcium chloride solution is an economical means of adding weight to the rear wheels. This solution, added in the tire inner tubes, will not damage the inner tube or tire if used in the proper proportions. The addition of calcium chloride is recommended to prevent the water from freezing.

Use of this method of weighting the rear wheels has the full approval of the tire companies. See your John Deere dealer for this service. The following chart lists the liquid weight each tire will hold when 75 per cent full (filled to valve level).

**LIQUID WEIGHT PER TIRE
(75 PERCENT FILLED)**

Tire Size	Water Only	Slush-Free at 13° F.; Solid at -23° F. (Approx. 2 Lbs. CaCl2 Per Gal. Water)	Slush-Free at -12° F.; Solid at -52° F. (Approx. 3.5 Lbs. CaCl2 Per Gal. Water)
		18.4-34	769 lbs.
24.5-32	1430 lbs.	1620 lbs.	1742 lbs.


LIGHTS

The lights on your tractor are designed to give the maximum amount of safety and convenience when operating at night or during other periods of low visibility.

HEADLIGHTS

Dual sealed-beam headlights are mounted in the front of each fender. The two inner lights

14 Operation

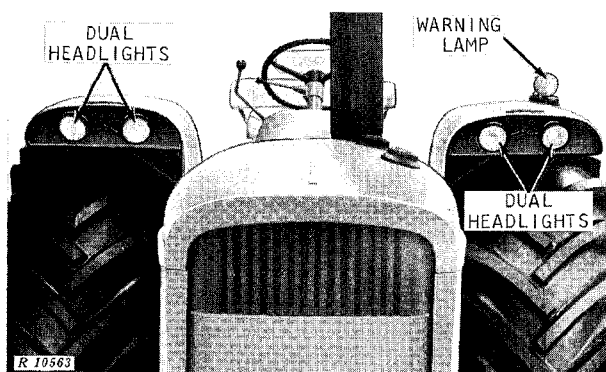

Built-In Dual Headlights

throw strong beams ahead of the tractor. The outer flood lights illuminate the ground at both sides as well as ahead of the tractor.


TAILLIGHT

The combination red-white taillight is mounted on the left fender. It illuminates implements at the rear of the tractor or glows red for night highway travel.

FLOOD LAMP

A flood lamp is mounted at the rear of the right-hand fender. It illuminates implements at the rear of the tractor in addition to the combination taillight.

LIGHT SWITCH

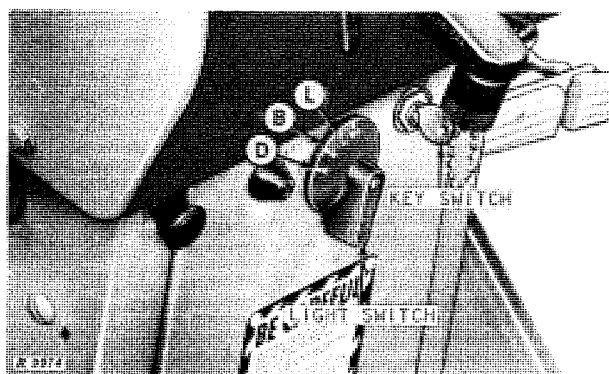

Light Switch

When the key switch is in the "ON" position, the light switch will turn on the tractor lights. The light switch has four positions:

"OFF" - To turn off all lights.

"L" - To turn on all four headlights and both rear white flood lamps.

"B" - To turn on all four headlights and red taillight.

"D" - To dim the headlights by turning off the inner headlights. The outer headlights and red taillight are turned on.

ADJUSTING THE HEADLIGHTS

The headlights on your tractor should be adjusted to illuminate the desired working area at the front and sides of the tractor.

When driving on the highway at night, readjust the headlights sufficiently downward so that they will not blind the driver of an oncoming vehicle.

Always dim the tractor headlights when meeting a vehicle at night by turning the light switch to "D."


TRACTOR AND IMPLEMENT WARNING LAMP

This lamp (which is amber to the front and red to the rear) is mounted on a bracket on the left rear fender. When desired, the lamp can be equipped with a flasher, available from your John Deere dealer.

The lamp is easily detachable and can be used as a warning lamp on towed implements.

The lamp is connected to the implement outlet socket and is lighted as long as it is connected.

ELECTRICAL OUTLET SOCKET

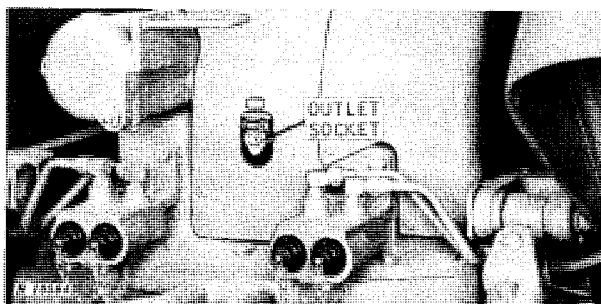

Electrical Outlet Socket

The socket, a source of 12-volt, DC electrical power, is used for plugging in the implement warning lamp, auxiliary lights, or other electrical equipment.

HIGHWAY DRIVING

When transporting (or driving) the tractor on a road or highway at night or during the day, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link


to download the complete manual.

Thank you so much for reading

IMPLEMENT HITCH AND CONTROL SYSTEM

The implement hitch and control system on your tractor provides a quick and easy method of attaching and lifting various implements and controlling their operation. The system can include one or two remote cylinders, a rockshaft and 3-point hitch, a drawbar, or a power take-off to operate power-shaft driven implements.

REMOTE HYDRAULIC CYLINDERS

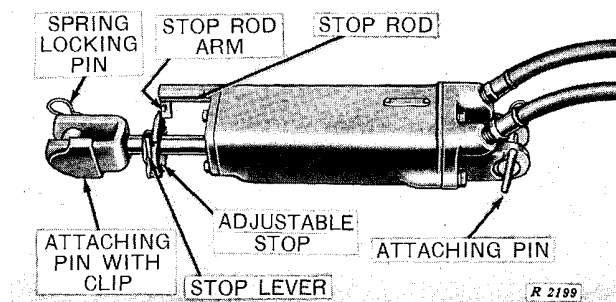


Hydraulic Stop Remote Hydraulic Cylinder

Your tractor can be equipped to operate one or two single-acting or double-acting remote hydraulic cylinders. The cylinders are connected by hoses to breakaway couplers at the rear of the tractor and are operated by oil from the main hydraulic pump. Pressure oil from the pump is directed by selective control valves, located under the hood, through the breakaway couplers and hoses to the cylinders. The valves are operated by levers located at the left side of the tractor dash. The two remote cylinders can be operated individually or simultaneously.


When not in use, the cylinders can be stored on transport brackets located at the rear of the tractor.

CAUTION: Before placing remote cylinder on transport bracket, fully retract the cylinder. Then, rotate breakaway coupler operating levers to the straight rearward position to lock the cylinders in the retracted position.

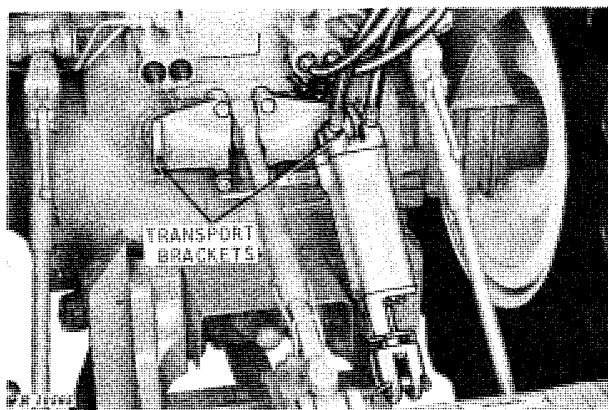

Remote Cylinder on Transport Brackets

USING REMOTE CYLINDER OPERATING LEVERS

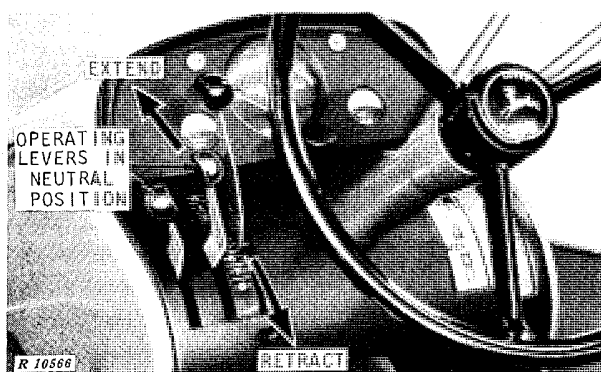

Remote Cylinder Operating Levers

Tractors equipped to operate one remote cylinder have an operating lever at the left side of the dash. Tractors equipped to operate two remote cylinders have two operating levers side by side. The inner lever operates the remote cylinder attached to the right-hand breakaway coupler; and the outer lever operates the cylinder attached to the left-hand coupler. Each lever has six operating positions:

(1) *Neutral.* Move lever to center position in the quadrant.

(2) *Slow Extend.* Move lever slightly forward from neutral. The lever must be held until the desired adjustment is reached. In most applications, this will raise the implement.

(3) *Fast Extend.* Move lever all the way to the front. The lever will remain in this position until the end of the piston stroke when it will automatically return to the neutral position.

(4) *Slow Retract.* Move lever slightly toward the rear from neutral. The lever must be held until the desired adjustment is reached. In most applications, this will lower the implement.

(5) *Fast Retract.* Move lever rearward to the first lock position. The lever will remain in this position until the end of the piston stroke when it will automatically return to the neutral position.

(6) *Float.* In addition, after making a simple adjustment, each lever can be moved all the way rearward in the quadrant to a float position to

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>