



**D  
REPAIR**

**M  
MANUAL**

**7FBR10, 13, 15, 18**

**VOL. 1**

**Pub. No. CE318**

# FOREWORD

This Manual (Volume 1) contains maintenance, specifications and repair procedures for the chassis, body and material handling system of the TOYOTA ELECTRIC POWERED FORKLIFT 7FBR10 to 18 series.

For diagnosis and service procedures of electrical controller, refer to Volume 2 (Pub. CE319)

Please use these manuals for providing quick, correct servicing of the corresponding forklift models.

This manual deals with the above models as of February 2001. Please understand that disagreement can take place between the descriptions in the manual and actual vehicles due to change in design and specifications. Any change or modifications thereafter will be informed by Toyota Industrial Equipment Parts & Service News.

**TOYOTA MOTOR CORPORATION**

# SECTION INDEX

NAME	SECTION
GENERAL	0
BATTERY	1
CHARGER	2
CONTROLLER	3
MULTI-DISPLAY FUNCTIONS	4
TROUBLESHOOTING	5
MOTOR	6
DRIVE UNIT	7
SUSPENSION & CASTER WHEEL	8
STEERING	9
FRONT BRAKE & AXLE	10
REAR BRAKE	11
BODY	12
MATERIAL HANDLING SYSTEM	13
MAST	14
SYLINDER	15
OIL PUMP	16
OIL CONTROL VALVE	17
HYDRAULIC PIPING	18
TBC-EPS	19
APPENDIX	20

**<https://www.ebooklibonline.com>**

Hello dear friend!



Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**


EXTERIOR VIEW

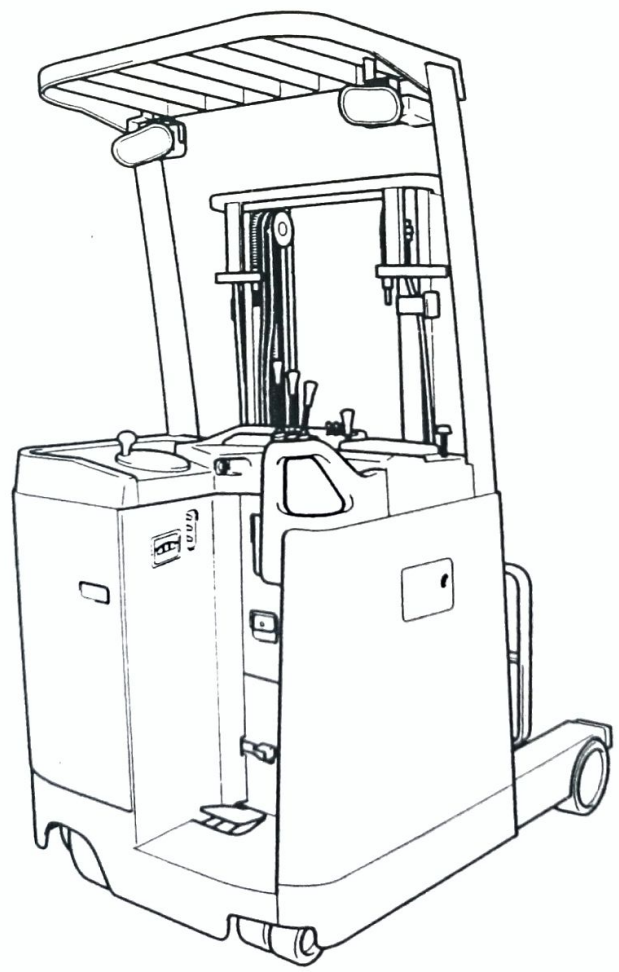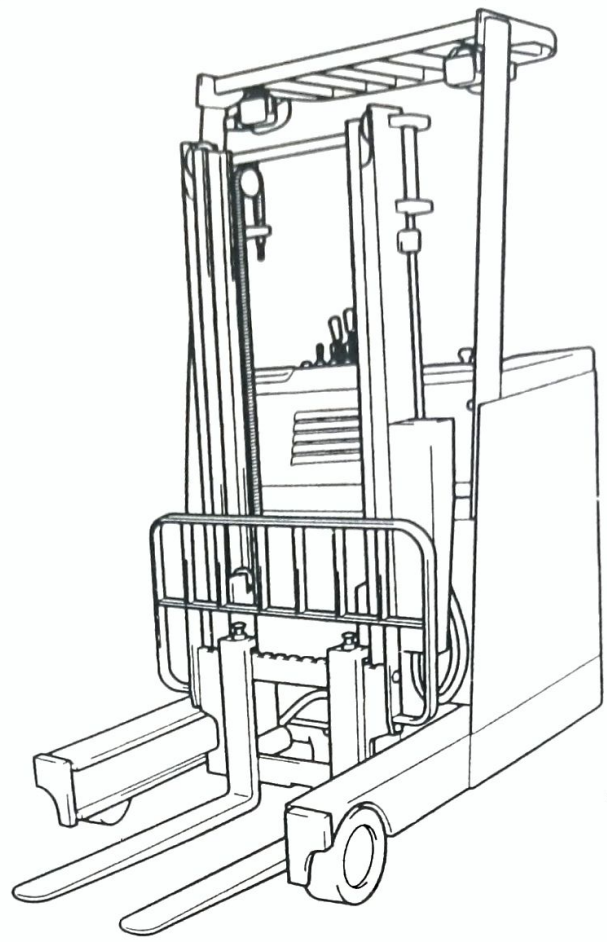

# VEHICLE MODELS

	Model	Control method	Battery		STD mast standard lifting height (mm)	Lifting height set for each mast			
			Voltage (V)	Quantity (AH/5HR)		V (mm)	SV (mm)	FV (mm)	FSV (mm)
7FBR series	7FBR10	Microcomputer	48	201	3000	2500 to 5000	2500 to 5000	2500 to 4000	3700 to 6000
	7FBR13	Microcomputer	48	201	3000	2500 to 5000	2500 to 5000	2500 to 4000	3700 to 6000
	7FBR15	Microcomputer	48	280	3000	2500 to 5000	2500 to 5000	2500 to 4000	3700 to 6000
	7FBR18	Microcomputer	48	280	3000	2500 to 5000	2500 to 5000	2500 to 4000	3700 to 6000

# FRAME NUMBER

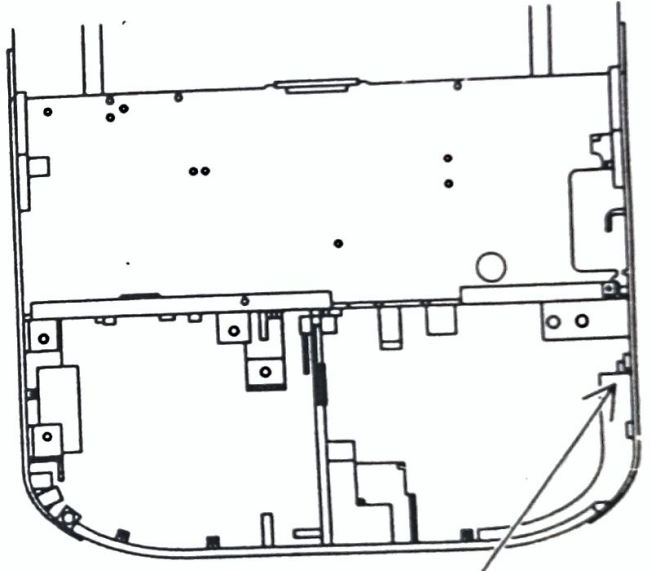Payload (ton)	Vehicle model	Punching format	Punching position
1.0	7FBR10	7FBR10-10011	 <p>Frame No. punching position</p>
1.25	7FBR13	7FBR13-10011	
1.5	7FBR15	7FBR15-10011	
1.8	7FBR18	7FBR18-10011	

0

# HOW TO USE THIS MANUAL

## EXPLANATION METHOD

### 1. Operating procedure


- (1) Operating procedures are described using either pattern A or pattern B.  
 Pattern A: Each step of the operation is explained with its own illustration.  
 Pattern B: Each step of the operation is explained with reference to step numbers in a single illustration. Explanations in the form of point operations, cautions, and notes follow.

Example of pattern B

## DISASSEMBLY • INSPECTION • REASSEMBLY

Tightening torque unit →  $T = N \cdot m$  (kgf-cm) [ft-lbf]

- Some step numbers may be omitted in some illustrations.

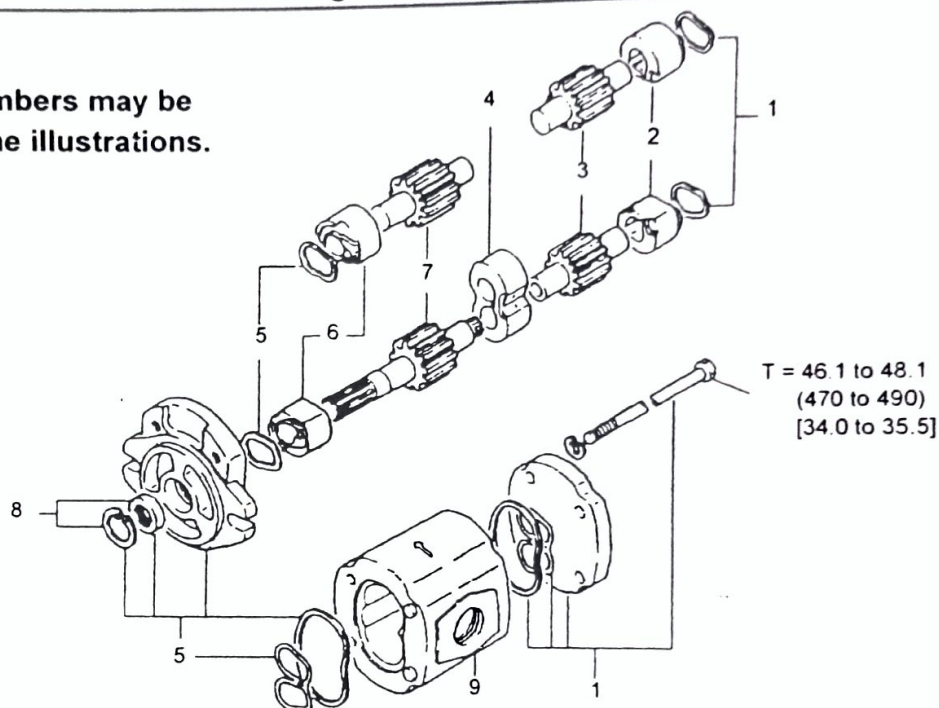

### Disassembly Procedure

- 1 Remove the cover. [Point 1]
- 2 Remove the bushing. [Point 2]
- 3 Remove the gear.

← Operation to be explained in following pages.

### Point Operations

← Explanation of operation point with illustration.

#### [Point 1]

Disassembly:

Make match marks before removing the pump cover.

#### [Point 2]

Inspection:


Measure the bushing inside diameter.

Limit 19.12 mm

1. How to read component figures

- (1) The component figures use the illustration in the parts catalog for the vehicle model. Please refer to the catalog to check the part name.

(Example)

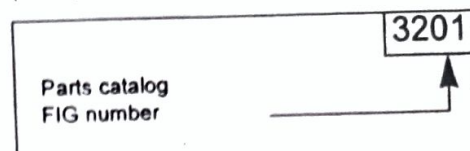

2. Matters omitted from this manual

- (1) This manual omits descriptions of the following jobs, but perform them in actual operation:
  - (a) Cleaning and washing of removed parts as required
  - (b) Visual inspection (partially described)

**TERMINOLOGY**

**Caution:**

Important matters, negligence of which may cause accidents. Be sure to observe them.

**Note:**

Important items, negligence of which may cause accidents, or matters in operating procedure which require special attention.

**Standard:** Value showing the allowable range in inspection or adjustment.

**Limit:** The maximum or minimum value allowed in inspection or adjustment.

**ABBREVIATIONS**

Abbreviation	Meaning	Abbreviation	Meaning
ASSY	Assembly	SAE	Society of Automotive Engineers (USA)
LH	Left Hand	SST	Special Service Tool
LLC	Long Life Coolant	STD	Standard
L/	Less	TBC	Traction and brake control
M/T	Manual Transmission	T/C	Torque Converter & Transmission
OPT	Option	T=	Tightening Torque
O/S	Oversize	OOT	Number of teeth (OOT)
PS system	Power Steering	U/S	Undersize
RH	Right Hand	W/	With (what follows is included)

## SI UNITS

### Meaning of SI

This manual uses SI units. SI represents the International System of Units, which was established to unify the various systems of units used in the past for smoother international technical communication.

### New Units Adopted in SI

Item	New unit	Conventional unit	Conversion rate* <sup>1</sup> (1 [conventional unit] = X [SI unit])
Force* <sup>2</sup>	N (newton)	kgf	1 kgf = 9.80665 N
Torque* <sup>2</sup> (Moment)	N·m	kgf·cm	1 kgf·cm = 0.0980665 N·m
Pressure	Pa (pascal)	kgf/cm <sup>2</sup>	1 kgf/cm <sup>2</sup> = 98.0665 kPa = 0.0980665 MPa
↑	↑	mmHg	1 mmHg = 0.133322 kPa
Revolving speed	r/min	rpm	1 rpm = 1 r/min
Spring constant* <sup>2</sup>	N/mm	kgf/mm	1 kgf/mm = 9.80665 N/mm
Volume	L	cc	1 cc = 1 mL
Power	W	PS	1 PS = 0.735499 kW
Heat quantity	W·h	cal	1 kcal = 1.16279 W·h
Specific fuel consumption	g/W·h	g/PS·h	1 g/PS·h = 1.3596 g/kW·h

#### <Reference>

- \* 1: X is the value obtained by converting 1 [in conventional unit] into the SI unit. It is also used as the conversion rate between conventional and SI units.
- \* 2: In the past, kilogram (kg), representing mass, was often used in place of weight kilogram (kgf), which should be used as the unit of force.

### Conversion between Conventional and SI Units

#### Equation for conversion

Value in SI unit = Conversion rate × Value in conventional unit	Conversion rate: Figure corresponding to X in the conversion rate column in the table above
Value in conventional unit = Value in SI unit ÷ Conversion rate	

When converting, change the unit of the value in conventional or SI units to the one in the conversion rate column in the table above before calculation. For example, when converting 100 W to the value in conventional unit PS, first change it to 0.1 kW and divide by the conversion rate 0.735499.

# OPERATING TIPS

## GENERAL INSTRUCTIONS

### 1. Skillful operation

- (1) Prepare the tools, necessary measuring instruments (circuit tester, megohmmeter, oil pressure gauge, etc.) and SSTs before starting operation.
- (2) Check the cable color and wiring state before disconnecting any wiring.
- (3) When overhauling functional parts, complicated sections or related mechanisms, arrange the parts neatly to prevent confusion.
- (4) When disassembling and inspecting a precision part such as the control valve, use clean tools and operate in a clean location.
- (5) Follow the specified procedures for disassembly, inspection and reassembly.
- (6) Always replace gaskets, packing, O-rings, self-locking nuts and cotterpins with new ones each time they are disassembled.
- (7) Use genuine Toyota parts for replacement.
- (8) Use specified bolts and nuts and observe the specified tightening torque when reassembling. (Tighten to the medium value of the specified tightening torque range.) If no tightening torque is specified, use the value given in the "standard tightening torque table".

### 2. Protection of functional parts (battery-operated vehicles)

- (1) Before connecting the battery plug after vehicle inspection or maintenance, thoroughly check each connector for any connection failure or imperfect connection.  
**Failure or imperfect connection of connectors related to controllers, especially, may damage elements inside the controllers.**

### 3. Defect status check

Do not start disassembly and/or replacement immediately, but first check that disassembly and/or replacement is necessary for the defect.


### 4. Waste fluid disposal

Always use a proper container when draining waste fluid from the vehicle. Careless discharge of oil, fuel, coolant, oil filter, battery or other harmful substance may adversely affect human health and the environment. Always collect and sort well, and ask specialized companies for appropriate disposal.

## JACKING UP


Always observe the following instructions when jacking up the vehicle:

- When the fork is loaded, unload it and park the vehicle on a flat surface. Be sure to avoid an inclined or rough surface.
- Use a jack with ample capacity and jack up the vehicle at the specified jack-up point. Jacking up at any other point is dangerous.
- Always support the load of jacked-up vehicle with wooden blocks at specified points. Supporting the vehicle with the jack only is very dangerous.
- Never, under any circumstances, put any part of the body (including hands and feet) under the jacked-up vehicle.





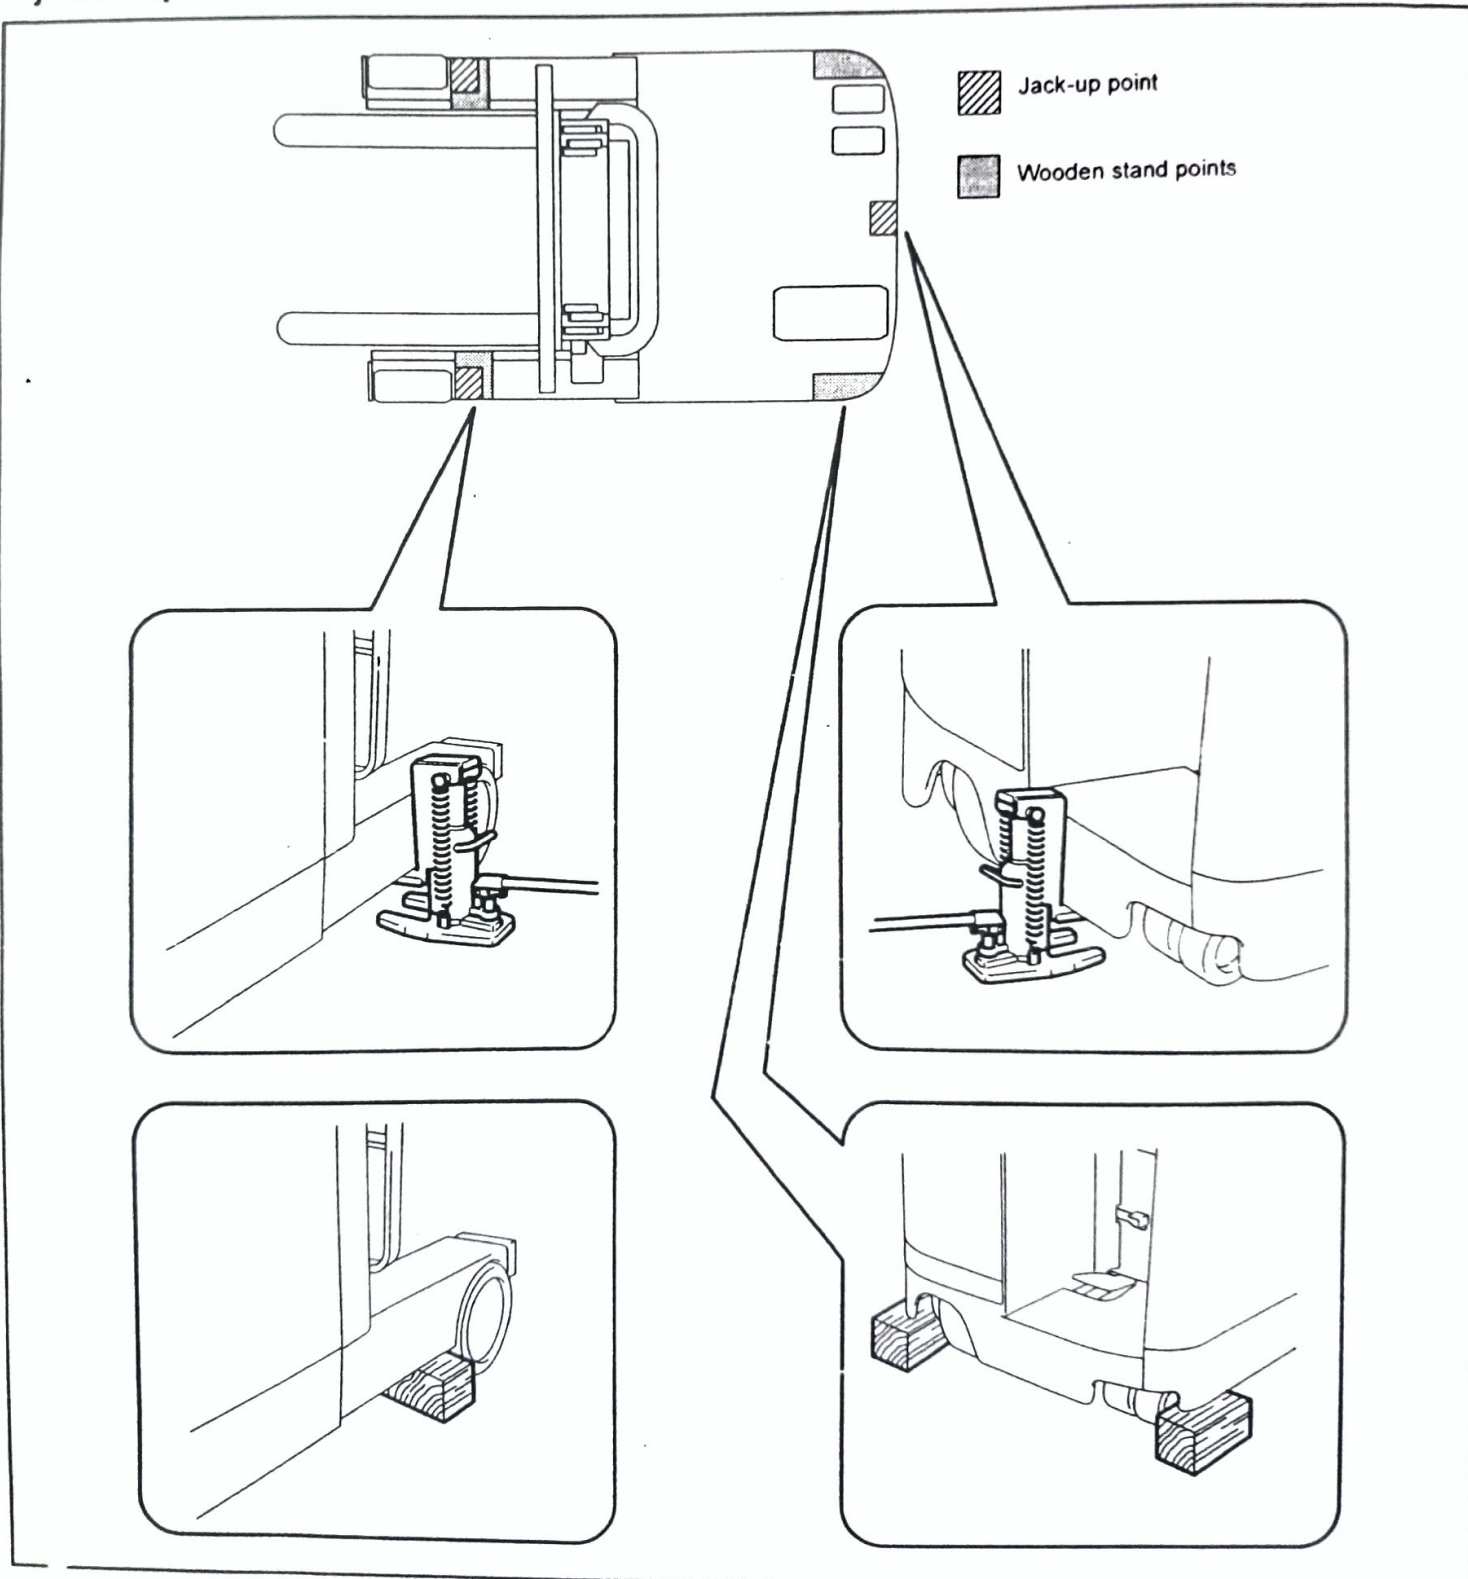


## HOISTING THE VEHICLE

When hoisting the vehicle, always observe the specified hoist attachment section and method. Never hoist by any other attachment section as it is very dangerous.

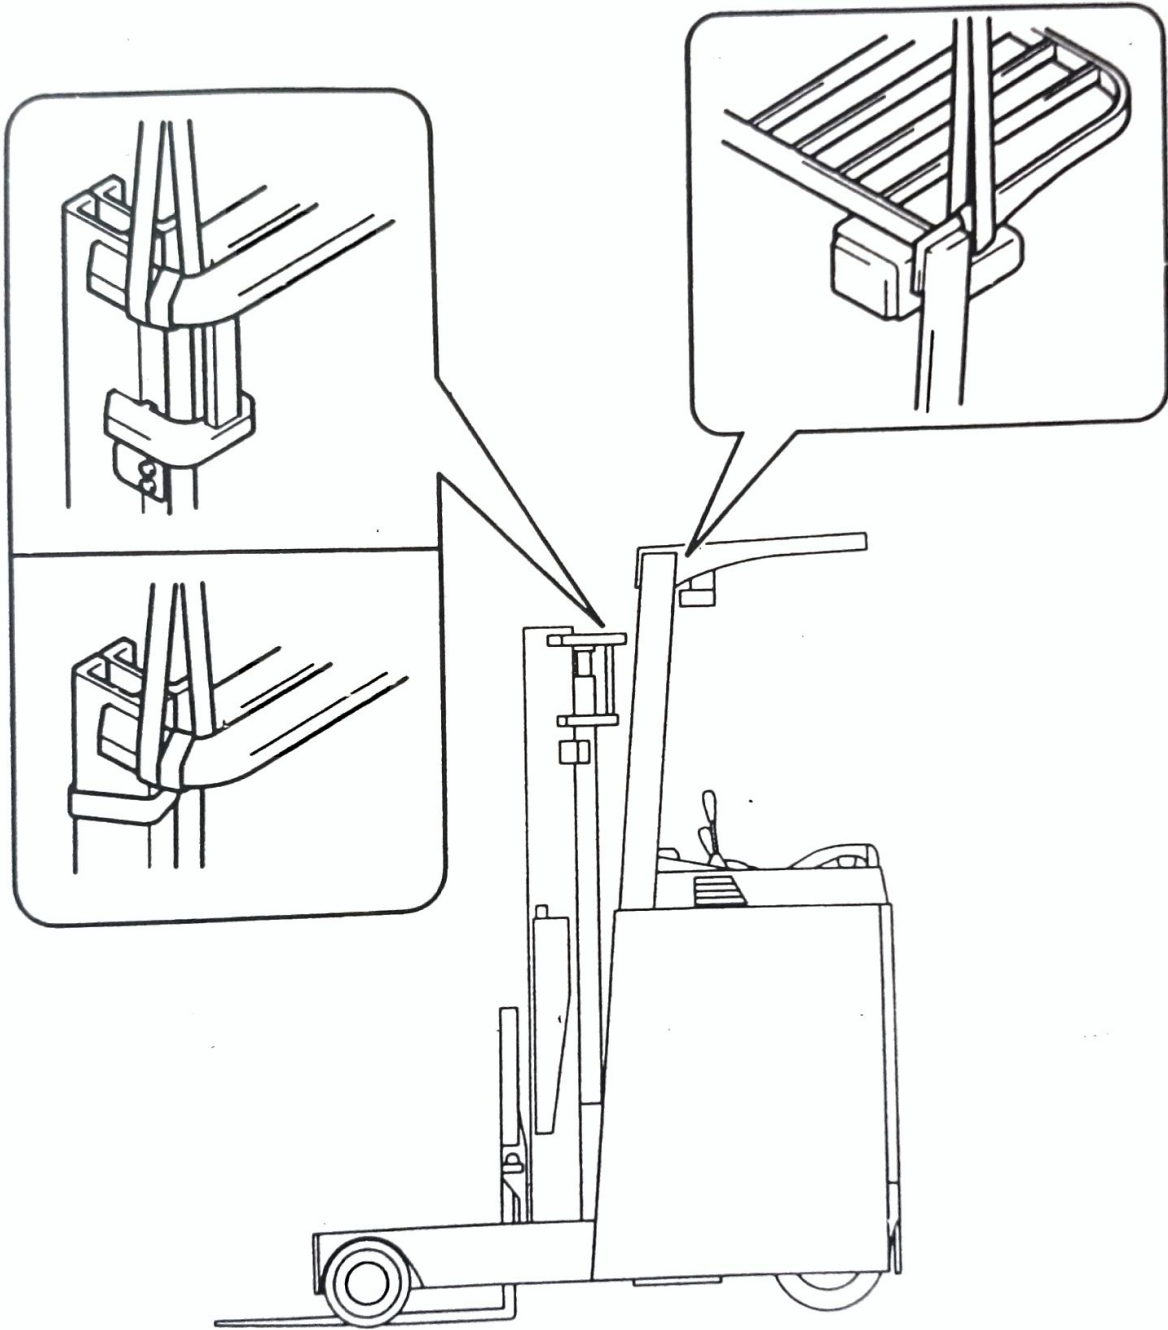

### WIRE ROPE SUSPENSION ANGLE LIST

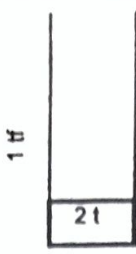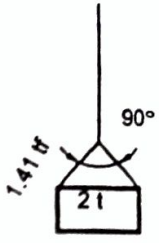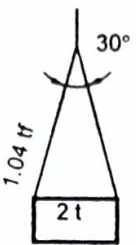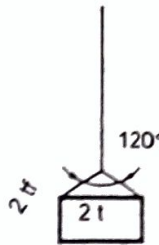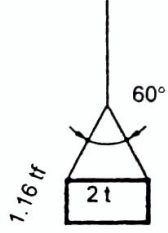Suspension angle	Tension	Compression	Suspension method	Suspension angle	Tension	Compression	Suspension method
0°	1.00 time	0 time		90°	1.41 time	1.00 time	
30°	1.04 time	0.27 time		120°	2.00 time	1.73 time	
60°	1.16 time	0.58 time					

### SAFE LOAD FOR EACH WIRE ROPE SUSPENSION ANGLE

Unit: N (ton:tf)

Rope diameter mm	Cutting load	Single-rope suspension	Two-rope suspension					Four-rope suspension			
		0°	0°	30°	60°	90°	0°	30°	60°	90°	
6	21380 (2.18)	3040 (0.31)	6080 (0.62)	5880 (0.60)	5200 (0.53)	4310 (0.44)	12160 (1.24)	11770 (1.20)	10400 (1.06)	8630 (0.88)	
8	31480 (3.21)	4410 (0.45)	8830 (0.90)	8530 (0.87)	7650 (0.78)	6280 (0.64)	17650 (1.80)	17060 (1.74)	15300 (1.56)	12550 (1.28)	
10	49230 (5.02)	6960 (0.71)	14020 (1.43)	13440 (1.38)	11770 (1.20)	9810 (1.00)	27460 (2.80)	26480 (2.70)	23540 (2.40)	19610 (2.00)	
12.5	76880 (7.84)	10980 (1.12)	21570 (2.20)	21280 (2.10)	18630 (1.90)	14710 (1.50)	43150 (4.40)	41190 (4.20)	37270 (3.80)	29420 (3.00)	
14	96400 (9.83)	13730 (1.40)	27460 (2.80)	26480 (2.70)	23540 (2.40)	18630 (1.90)	54920 (5.60)	52960 (5.40)	47070 (4.80)	37270 (3.80)	

## Components weights

Unit: kg

Member		Weight
Battery ASSY	7FBR10.13	340
	7FBR15.18	465
Drive motor ASSY		25
Pump motor ASSY	7FBR10.13	28
	7FBR15.18	30.5
Drive unit ASSY W/drive wheel		Approx. 90
Mast ASSY L/lift bracket & fork	7FBR10.13	Approx. 350
	7FBR15-18	Approx. 360
Vehicle weight	7FBR10	2030
	7FBR13	2050
	7FBR15	2190
	7FBR18	2270

## TOWING THE VEHICLE


Tow the vehicle as follows in case of a failure or for loading onto a truck:

- In the case of STD vehicle, tow it using the hole in the frame rear guard.
- In the case of a vehicle with a bumper weight, tow it using the tapped hole (M12 × 1.25) at the bumper weight.


### Note:

As a rule, do not tow a reach type vehicle. If it is unavoidable, keep the towing distance within the minimum required range.

STD

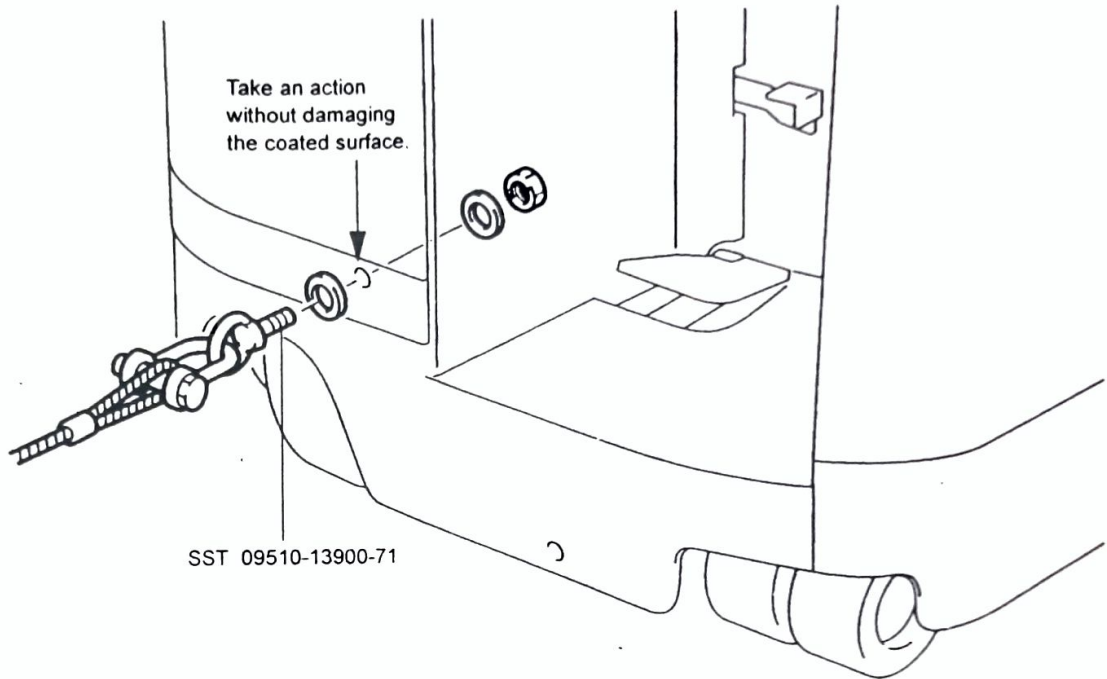


W/Rear bumper weight

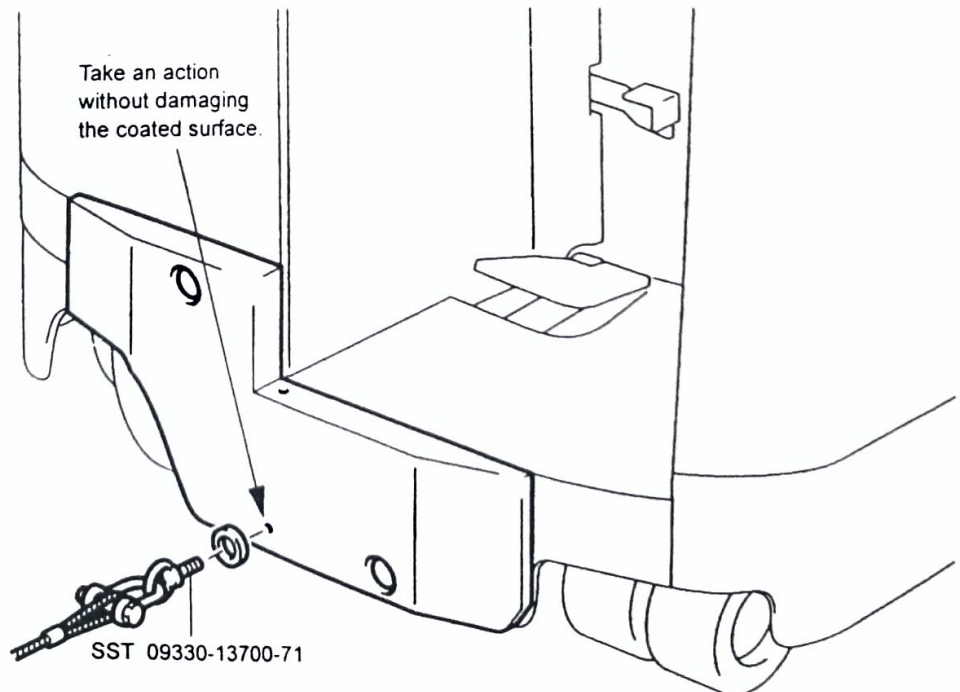

## ELECTRICAL PARTS INSPECTION

1. Always disconnect the battery plug before inspecting or servicing electrical parts.
2. Pay sufficient attention when handling electronic parts.

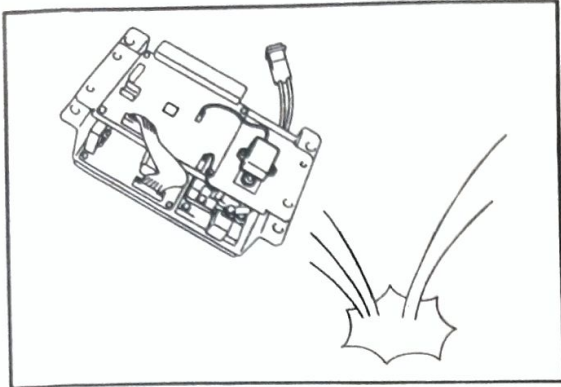

- (1) Never subject to electronic parts, such as computers and relays, to impact.
- (2) Never expose electronic parts to high temperature or moisture.
- (3) Do not touch connector terminals, as they may be deformed or damaged due to static electricity.

3. Use a circuit tester that matches the object and purpose of measurement.

**Analog type:** This type is convenient for observing movement during operation and the operating condition. The measured value should be used only for reference or rough judgement.

**Digital type:** A fairly accurate reading is possible. However, it is difficult to observe operation or movement.


(1) Difference between results of measurement with analog and digital types

\* The results of measurements using the analog type and the digital type may be different.

Use the circuit tester according to its instruction manual.

Differences between the polarities of the analog type and the digital type are described below.


### 1) Analog circuit tester

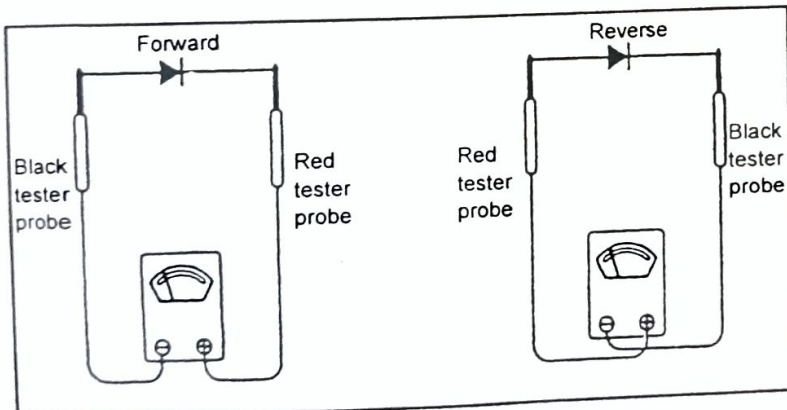

Example of measurement result  
Tester range: kΩ range

**Forward direction: Continuity 11 kΩ**  
**Reverse direction: No continuity ∞**

### 2) Digital circuit tester

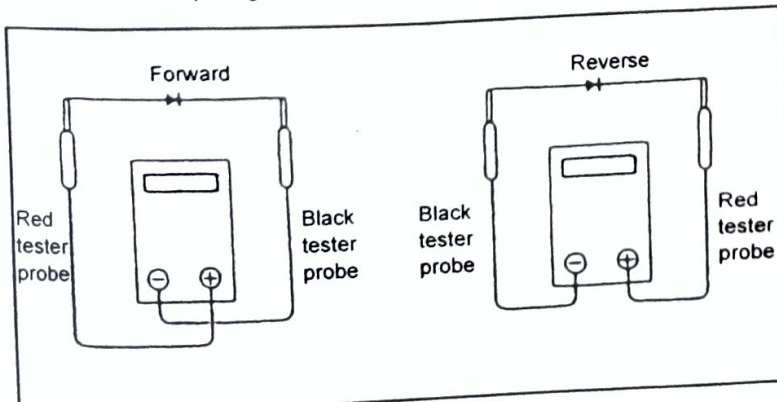

Example of measurement result  
Tester range: 2 MΩ range

**Forward direction: Continuity 2 MΩ**  
**Reverse direction: No continuity 1**








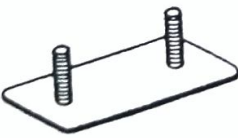


# STANDARD BOLT & NUT TIGHTENING TORQUE

Tightening torques of standard bolts and nuts are not indicated throughout the manual. Use the charts and table below to judge the standard tightening torque.

1. Find the class of the bolt strength on the table below and then find the bolt tightening torque on the tightening torque table.
2. The nut tightening torque can be judged from its corresponding bolt type.

## BOLT STRENGTH CLASS IDENTIFICATION METHOD


### Identification by bolt shape

	Shape and class	Class
Hexagon head bolt	 Bolt with raised or etched numeral on head	4 = 4T
Hexagon bolt		5 = 5T
		6 = 6T
		7 = 7T
		8 = 8T
(standard)	 No mark	4T
Hexagon flange bolt	 No mark	4T
Hexagon head bolt (standard)	 Bolt with two raised lines on head	5T
Hexagon flange bolt	 Bolt with two raised lines on head	6T
Hexagon head bolt (standard)	 Bolt with three raised lines on head	7T
Hexagon head bolt (standard)	 Bolt with four raised lines on head	8T
Welded bolt		4T
Stud bolt	 No mark	4T
	 2 mm groove(s) on one/both edge(s)	6T


### Identification by part No.

**Hexagon head bolt**

Part No. 91611-40625

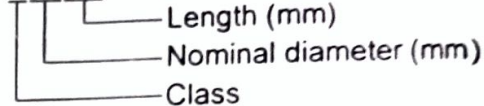

Length (mm)  
Nominal diameter (mm)  
Class

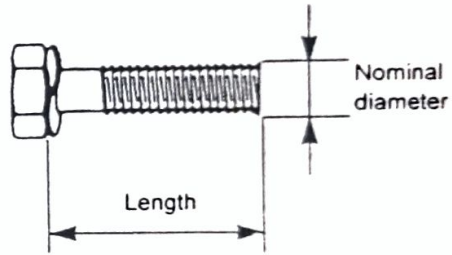


Length  
Nominal diameter


---

**Stud bolt**

Part No. 92132-40614

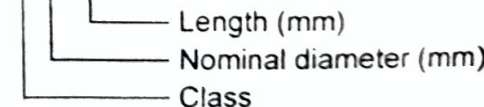

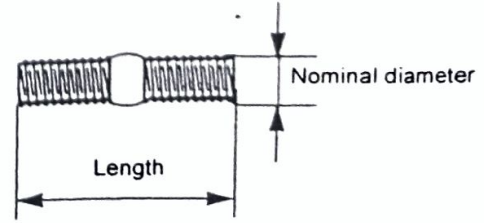

Length (mm)  
Nominal diameter (mm)  
Class




Length  
Nominal diameter

## TIGHTENING TORQUE TABLE

Class	Nominal diameter mm	Pitch mm	Standard tightening torque N·m (kgf·cm) [ft·lbf]	
			Hexagon head bolt 	Hexagon flanged bolt 
4T	6	1.0	5.4 (55) [48 in-lbf]	5.9 (60) [52 in-lbf]
	8	1.25	13 (130) [9]	14 (145) [10]
	10	1.25	25 (260) [19]	28 (290) [21]
	12	1.25	47 (480) [35]	53 (540) [39]
	14	1.5	75 (760) [55]	83 (850) [61]
	16	1.5	113 (1150) [83]	— (—) [—]
5T	6	1.0	6.4 (65) [56 in-lbf]	7.5 (75) [65 in-lbf]
	8	1.25	16 (160) [12]	18 (175) [13]
	10	1.25	32 (330) [24]	36 (360) [26]
	12	1.25	59 (600) [43]	65 (670) [48]
	14	1.5	91 (930) [67]	100 (1050) [76]
	16	1.5	137 (1400) [101]	157 (1600) [116]
6T	6	1.0	7.8 (80) [69 in-lbf]	8.8 (90) [78 in-lbf]
	8	1.25	19 (195) [14]	21 (215) [16]
	10	1.25	38 (400) [29]	43 (440) [32]
	12	1.25	72 (730) [53]	79 (810) [59]
	14	1.5	110 (1100) [80]	123 (1250) [90]
	16	1.5	170 (1750) [127]	191 (1950) [141]
7T	6	1.0	11 (110) [8]	12 (120) [9]
	8	1.25	25 (260) [19]	28 (290) [21]
	10	1.25	52 (530) [38]	58 (590) [43]
	12	1.25	95 (970) [70]	103 (1050) [76]
	14	1.5	147 (1500) [108]	167 (1700) [123]
	16	1.5	226 (2300) [166]	— (—) [—]
8T	6	1.0	12 (125) [9]	14 (145) [9]
	8	1.25	29 (300) [22]	32 (330) [24]
	10	1.25	61 (620) [45]	68 (690) [50]
	12	1.25	108 (1100) [80]	123 (1250) [90]
	14	1.5	172 (1750) [127]	196 (2000) [145]
	16	1.5	265 (2700) [195]	299 (3050) [221]

## PRECOATED BOLTS

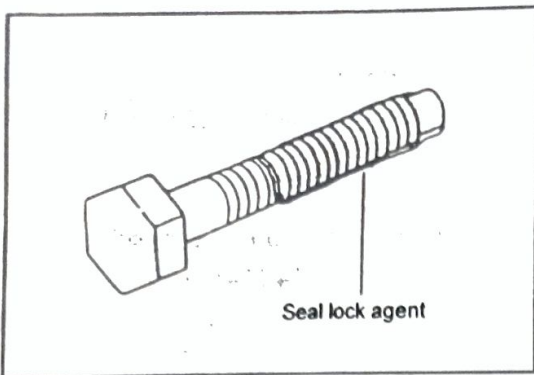

1. Do not replace or restore a precoated bolt as it is in the following cases:
  - (1) After it has been removed.
  - (2) When it has been moved by tightness check, etc. (loosened or tightened)

**Note:** For torque check, tighten the bolt at the lower limit of the allowable tightening torque range; if the bolt moves, retighten it according to the steps below.

2. How to reuse precoated bolts
  - (1) Wash the bolt and threaded hole.  
(The threaded hole must be washed even when replacing the bolt with a new one)
  - (2) Completely dry the washed parts by blowing with air.
  - (3) Apply a specified seal lock agent to the threaded portion of the bolt.

## HIGH PRESSURE HOSE FITTING TIGHTENING TORQUE

1. When connecting a high pressure hose, wipe the hose fitting and corresponding nipple contact surfaces with a clean cloth to remove foreign matter and dirt. Also check that there are no dents or other damage on the contact surfaces before installation.
2. When connecting the high pressure hose, hold the hose to align the fitting with the nipple and tighten the fitting.
3. The maximum tightening torque must not exceed twice the standard tightening torque.

Nominal diameter of screw	Standard tightening torque N·m (kgf·cm)		Hose inside diameter mm
	Standard	Tightening range	
7/16-20UNF	25 (250)	24 to 26 (240 to 270)	6
9/16-18UNF	49 (500)	47 to 52 (480 to 530)	9
3/4-16UNF	59 (600)	56 to 62 (570 to 630)	12
7/8-14UNF	59 (600)	56 to 62 (570 to 630)	12
7/8-14UNF	78 (800)	74 to 82 (740 to 840)	15
1-1/16-12UNF	118 (1200)	112 to 123 (1140 to 1250)	19
1-5/16-12UNF	137 (1400)	130 to 144 (1330 to 1470)	25
PF1/4	25 (250)	24 to 26 (240 to 270)	6
PF3/8	49 (500)	47 to 52 (480 to 530)	9
PF1/2	59 (600)	56 to 62 (570 to 630)	12
PF3/4	118 (1200)	112 to 123 (1140 to 1250)	19
PF1	137 (1400)	130 to 144 (1330 to 1470)	25

## RECOMMENDED LUBRICANT QUANTITY AND TYPES

Applicable portion	Type	Quantity
Drive unit	STD:Genuine Toyota hypoid gear oil 90 Cold storage vehicle:Genuine Toyota hypoid gearoil W	Approx. 2.0ℓ (until overflow from oil filler port) The above value is for reference.
Hydraulic oil	STD:Hydraulic oil ISO VG32 Cold area specification:Auto Fluid Special W Cold storage vehicle:Mobil Aero HFE	See the hydraulic oil filling quantity below.
Chassis parts	See the greasing list on the next page.	
Battery	Distilled water	Appropriate amount

### Hydraulic oil filling quantity

Unit: ℓ (US gal)

Hydraulic oil filling quantity			12	14	15	16	17	18	20	Tank capacity
MAST			○							9 (2.38)
7FBR15 series	V, SV	2500 to 3000	○							11 (2.90)
		3500 to 4000		○						12 (3.17)
		4500 to 5000			○					9 (2.38)
	FV	2500 to 3000					○			11 (2.90)
		3300 to 4000							○	11 (2.90)
	FSV	3700 to 4000				○				12 (3.17)
		4300 to 5000					○			13 (3.43)
		5500 to 6500						○		



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**


**Thank you so much for reading**

## Greasing list

Application and greasing points	Grease type	
	STD	Cold storage vehicle
Drive motor output coupling spline	Molywhite TA No. 1	
Drive unit turning bearing	MP grease	Esso Beacon 325
Steering gear tooth flanks	Chassis grease special	
Caster oscillation pin center bearing	Chassis grease special	Esso Beacon 325
Caster wheel bearing	MP grease	Esso Beacon 325
Steering angle sensor pin	Esso Beacon 325	
Steering shaft spline	Chassis grease special	Esso Beacon 325
Filling EPS gear case	Chassis grease special	Esso Beacon 325
Disc brake shaft & cam sliding portion	Chassis grease special	Esso beacon 325
Brake link pin Brake arm pin	MP grease	
Brake spring adjusting pin	MP grease	
Suspension shaft bearing	Chassis grease special	Esso Beacon 325
Suspension shaft spline	Chassis grease special	Esso Beacon 325
Lock cylinder pin	Chassis grease special	Esso Beacon 325
Side sliding battery stopper shaft	MP grease	
Inner mast free bar	MP grease	Esso Beacon 325
Fork shaft	Chassis grease special	
Reach leg side face	Chassis grease special	
Inner mast rail (SV, lower 400 mm)	MP grease	Esso Beacon 325
C/V lever link and shaft portions	MP grease	
Oil pump shaft spline	Chassis grease special	
Tilt pulley (V, SV) ATT pulley (V, SV)	MP grease	
Inside of tire angle sensor	Esso Beacon 325	

# LUBRICATION CHART

## STD vehicle

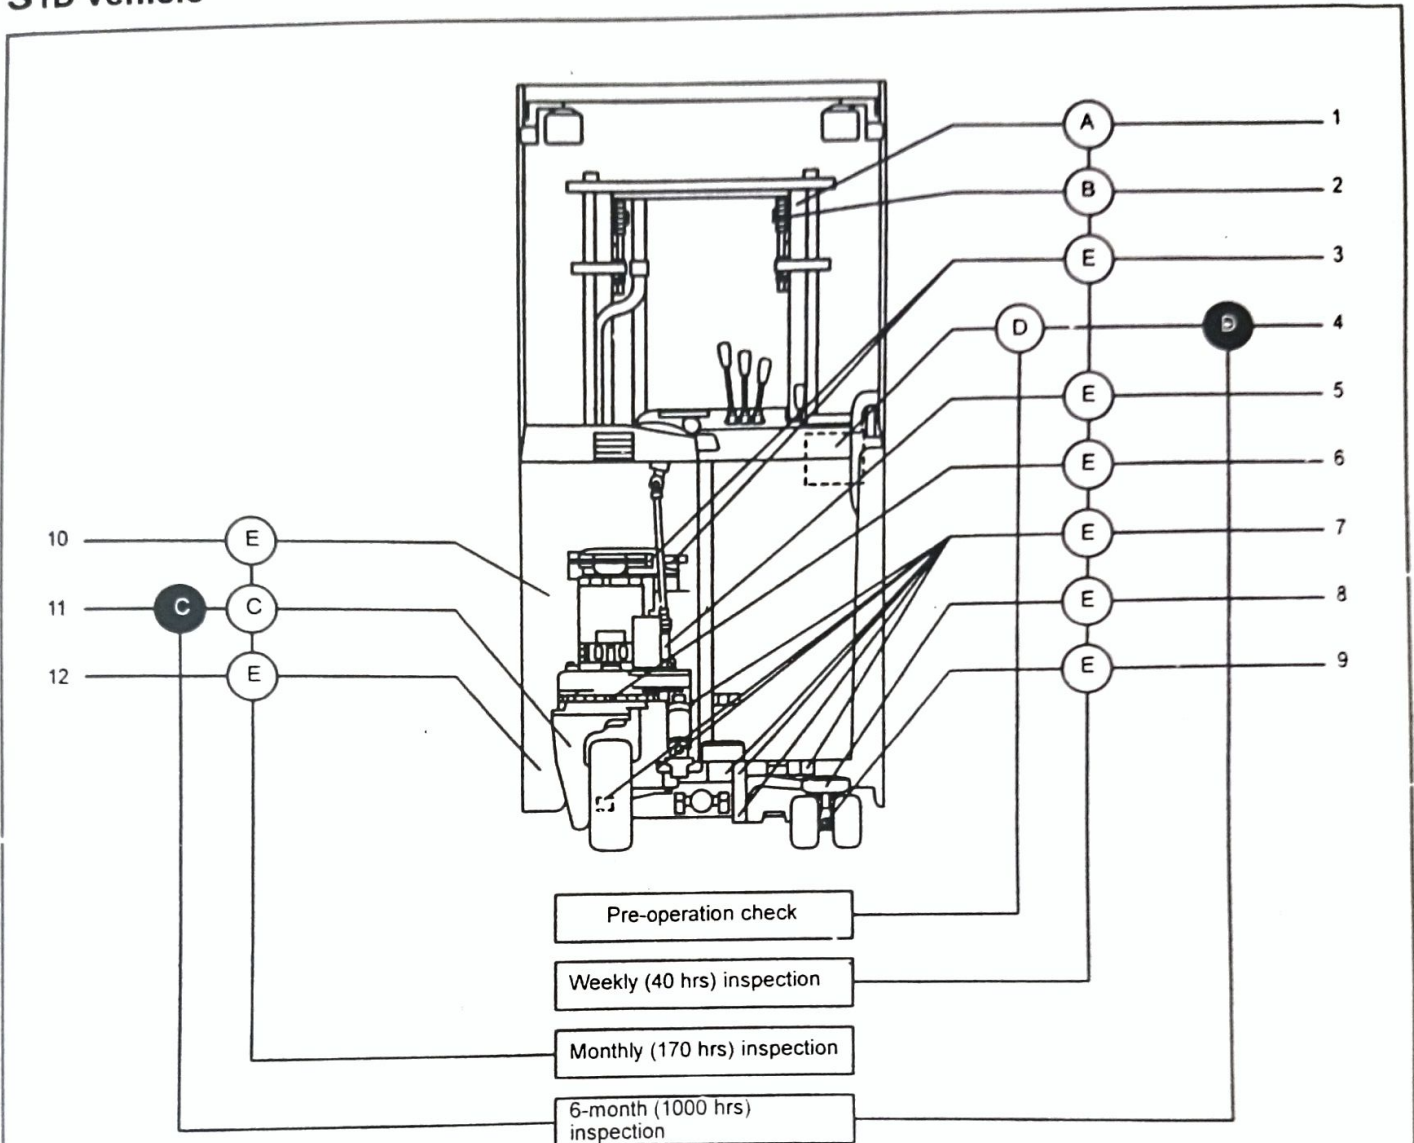

○ : Inspection and addition

● : Replacement

(A) MP Grease

(B) Motor Oil  
(gasoline engine vehicle)

(C) Hypoid Gear Oil  
(SAE85W-90)

(D) Hydraulic Oil (ISO VG32)

(E) Chassis Grease Special

1. Mast strip\*

2. Lift chain\*

3. Brake cam

4. Hydraulic oil tank

5. Steering shaft spline

6. Steering gear

7. Suspension shaft

8. Caster shaft  
(low overall height vehicle)

9. Caster shaft

10. Fork shaft

11. Drive unit

12. Reach leg

\*: both sides

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**