


**337**  
**341**



**Bobcat®**

# **Service Manual**

**S/N 233311001 & Above**  
**S/N 233211001 & Above**  
**(D Series)**

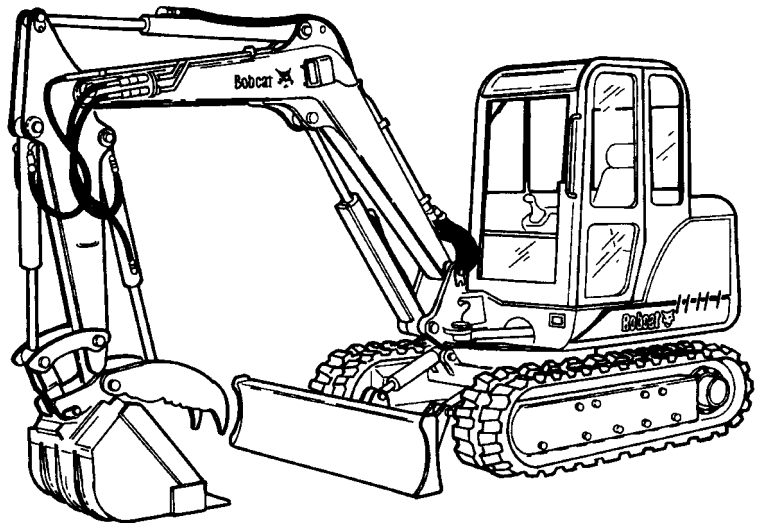

# MAINTENANCE SAFETY




## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

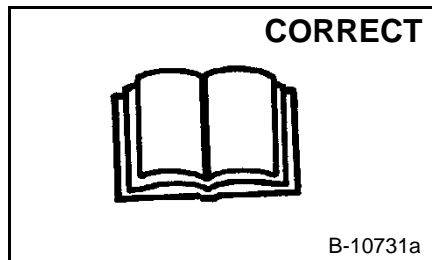


B-10731a

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

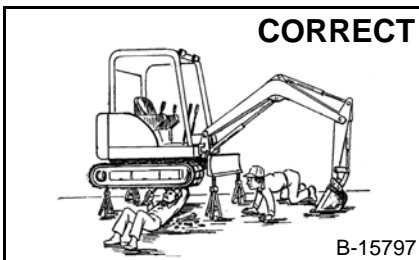


B-15797

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

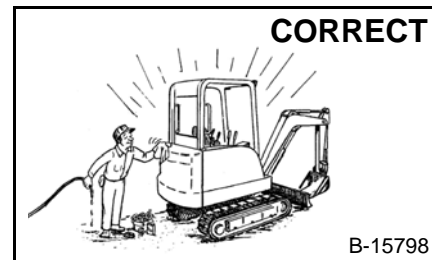

B-15798

- ⚠ Cleaning and maintenance are required daily.

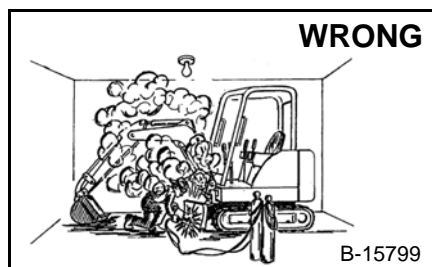


B-15799

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.




B-15800

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

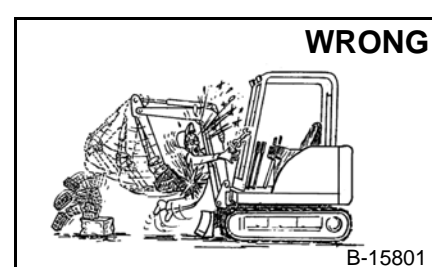


B-15801

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

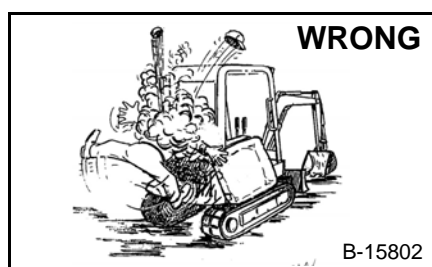

B-15802

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

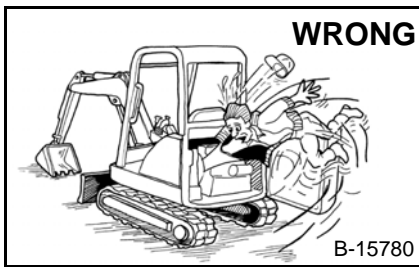

B-15780

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

## ALPHABETICAL INDEX

AIR CLEANER .....	60-01	GENERAL AIR CONDITIONING SERVICE	
AIR CLEANER SERVICE .....	10-01	GUIDELINES .....	70-01
AIR CONDITIONING SERVICE .....	70-01	HEATER/AC FAN .....	70-01
AIR CONDITIONING SYSTEM FLOW .....	70-01	HEATER AIR FILTER .....	10-01
ALTERNATOR .....	50-01	HEATER COIL .....	70-01
ARM .....	40-01	HEATER VALVE .....	70-01
ARM CYLINDER .....	20-01	HORN .....	40-01
BASIC TROUBLESHOOTING .....	70-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BATTERY .....	50-01	HYDRAULIC CONTROL VALVE ASSEMBLY .....	20-01
BLADE .....	30-01	HYDRAULIC EXCAVATOR SPECS .....	SPEC-01
BLADE CONTROL .....	40-01	HYDRAULIC FILTER .....	20-01
BLADE CYLINDER .....	20-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BOOM .....	40-01	HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01
BOOM CYLINDER .....	20-01	HYDRAULIC PUMP .....	20-01
BOOM OFFSET CYLINDER .....	20-01	HYDRAULIC SYSTEM .....	10-01
BOOM OFFSET LOCK VALVE .....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BUCKET .....	40-01	LEFT CONSOLE .....	40-01
BUCKET CYLINDER .....	20-01	LEFT CONTROL LEVER (JOYSTICK)	
BUILD UP VALVE .....	20-01	(S/N 233311870 & ABOVE AND	
CAB .....	40-01	233211878 & ABOVE) .....	20-01
CASE DRAIN FILTER .....	20-01	LEFT CONTROL LEVER (JOYSTICK)	
CLAMP CYLINDER .....	20-01	(S/N 233311869 & BELOW AND	
COMPONENTS .....	70-01	233211877 & BELOW) .....	20-01
COMPRESSOR .....	70-01	LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
CONDENSOR .....	70-01	LIFTING THE EXCAVATOR .....	10-01
CONTROL LINKAGE ASSEMBLY .....	40-01	LIGHTS .....	50-01
CONTROL PATTERN SELECTOR VALVE .....	20-01	LUBRICATION OF THE EXCAVATOR .....	10-01
CONVERSIONS .....	SPEC-01	MAIN RELIEF VALVE .....	20-01
COOLING SYSTEM .....	10-01	MANIFOLD ASSEMBLY/ACCUMULATOR .....	20-01
CROSSPORT RELIEF VALVE .....	20-01	MUFFLER .....	60-01
DIAGNOSTICS SERVICE CODE .....	50-01	OIL COOLER .....	20-01
DIRECT TO TANK VALVE .....	20-01	OPERATOR CAB .....	10-01
DUAL SEQUENCE VALVE .....	20-01	PORT RELIEF VALVES .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	50-01	PRESSURE REDUCING VALVE .....	20-01
ENGINE .....	60-01	PRESSURE RELIEF VALVE .....	70-01
ENGINE COMPONENTS AND TESTING .....	60-01	PRESSURE SWITCH .....	70-01
ENGINE LUBRICATION SYSTEM .....	10-01		
ENGINE SPECIFICATIONS .....	SPEC-01		
ENGINE SPEED CONTROL .....	40-01		
EVAPORATOR .....	70-01		
EVAPORATOR/HEATER UNIT .....	70-01		
EXPANSION VALVE .....	70-01		
FLOORMAT AND FLOOR PANELS .....	40-01		
FLYWHEEL AND HOUSING .....	60-01		
FUEL, COOLANT AND LUBRICANTS .....	SPEC-01		
FUEL LEVEL SENDER .....	50-01		
FUEL SYSTEM .....	10-01		
FUEL TANK .....	40-01		

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## ALPHABETICAL INDEX (CONT'D)

RADIATOR (S/N 233311422 & ABOVE, S/N 233211380 & ABOVE).....	60-01	TAILGATE.....	40-01
RADIATOR (S/N 233311421 & BELOW, S/N 233211379 & BELOW) .....	60-01	TAILGATE (S/N 233311550 & ABOVE, S/N 233211443 & ABOVE).....	10-01
RECEIVER/DRYER .....	70-01	TAILGATE (S/N 233311549 & BELOW, S/N 233211442 & BELOW) .....	10-01
RECONDITIONING THE ENGINE .....	60-01	TEMPERATURE/PRESSURE.....	70-01
REGULAR MAINTENANCE .....	70-01	THERMOSTAT .....	70-01
REMOVING AIR FROM HYDRAULIC SYSTEM .....	20-01	TORQUE SPECIFICATIONS .....	SPEC-01
RIGHT CONSOLE .....	40-01	TRACKS.....	30-01
RIGHT CONTROL LEVER (JOYSTICK) (S/N 233311870 & ABOVE AND 233211878 & ABOVE).....	20-01	TRACK DAMAGE IDENTIFICATION .....	30-01
RIGHT CONTROL LEVER (JOYSTICK) (S/N 233311869 & BELOW AND 233211877 & BELOW) .....	20-01	TRACK FRAME .....	30-01
RIGHT PEDAL AND LINKAGE.....	40-01	TRACK IDLER (RUBBER TRACK S/N 23331116 & ABOVE AND 23321117 & ABOVE, STEEL TRACK S/N 233311108 & ABOVE AND 233211100 & ABOVE.....	30-01
ROPS CANOPY.....	40-01	TRACK IDLER (RUBBER TRACK S/N 23331115 & BELOW AND 23321116 & BELOW STEEL TRACK S/N 233311107 & BELOW AND 233211099 & BELOW) .....	30-01
SAFETY.....	70-01	TRACK ROLLER (RUBBER TRACK S/N 23331116 & ABOVE AND 23321117 & ABOVE, STEEL TRACK S/N 233211108 & ABOVE AND 233211100 & ABOVE .....	30-01
SEAT AND SEAT MOUNT .....	40-01	TRACK ROLLER (RUBBER TRACK S/N 23331115 & BELOW AND 23321116 & BELOW, STEEL TRACK S/N 233311107 & BELOW AND 233211099 & BELOW .....	30-01
SERVICE SCHEDULE .....	10-01	TRANSPORTING THE EXCAVATOR .....	10-01
SPARK ARRESTOR MUFFLER (If Equipped) .....	10-01	TRAVEL CONTROLS.....	40-01
STARTER .....	50-01	TRAVEL CONTROL VALVE .....	20-01
SWING CIRCLE GEAR .....	30-01	TRAVEL MOTOR .....	10-01 & 20-01
SWING FRAME .....	40-01	TROUBLESHOOTING .....	60-01
SWING MOTOR .....	20-01	TWO SPEED SWITCH.....	50-01
SWING MOTOR DRIVE CARRIER .....	20-01		
SWIVEL JOINT .....	20-01	UPPERSTRUCTURE.....	40-01
SYSTEM CHARGING AND RECLAMATION .....	70-01		
SYSTEM TROUBLESHOOTING CHART .....	70-01	X-CHANGE <sup>TM</sup> .....	40-01

# CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS .....	V
SERIAL NUMBER LOCATIONS .....	IX
DELIVERY REPORT.....	IX
BOBCAT EXCAVATOR IDENTIFICATION .....	X
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM .....	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION .....	40-01
ELECTRICAL SYSTEM AND ANALYSIS .....	50-01
ENGINE SERVICE .....	60-01
HEATING, VENTILATION, AIR CONDITIONING .....	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**UNDERCARRIAGE**

**UPPERSTRUCTURE  
& SWING SECTION**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HEATING,  
VENTILATION,  
AIR CONDITIONING**


**SPECIFICATIONS**

# FOREWORD


This manual is for the Bobcat Hydraulic excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.

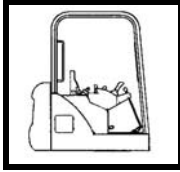


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

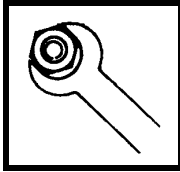

3. The seat belt must be correctly installed, functional and in good condition.

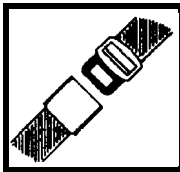


4. Inspect for loose or broken parts or connections.

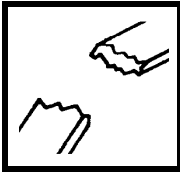


5. Machine signs must be legible and in the correct location.




6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

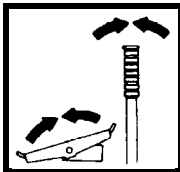


7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

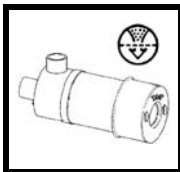


8. Check the electrical charging system.

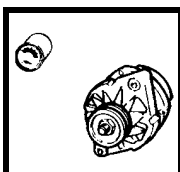


9. Safety treads must be in good condition.

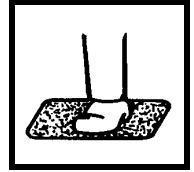


10. Check for correct function of indicator lamps (Optional on some models).

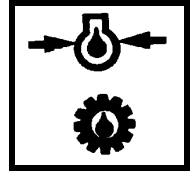


11. Check hydraulic fluid level, engine oil level and fuel supply.

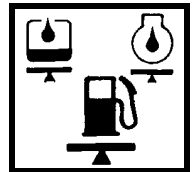


12. Inspect for fuel, oil or hydraulic fluid leaks.

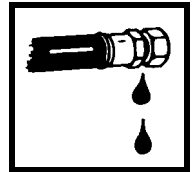


13. Lubricate the excavator.

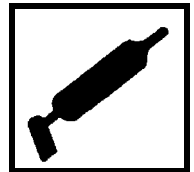

14. Check the condition of the battery and cables.

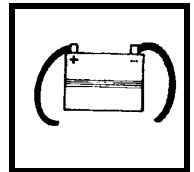

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

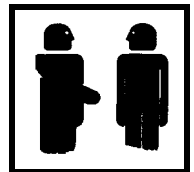

## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



## WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). This course is intended to provide rules and practices of correct operation of the Bobcat Excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). They provide information for safe and correct service procedures.
- The Bobcat Compact Excavator Safety Video is available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com).

SI EXC-0206 SM

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



## Call Before You Dig

**1-888-258-0808**

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SI EXC-0206 SM

## SAFETY INSTRUCTIONS (CONT'D)

### Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

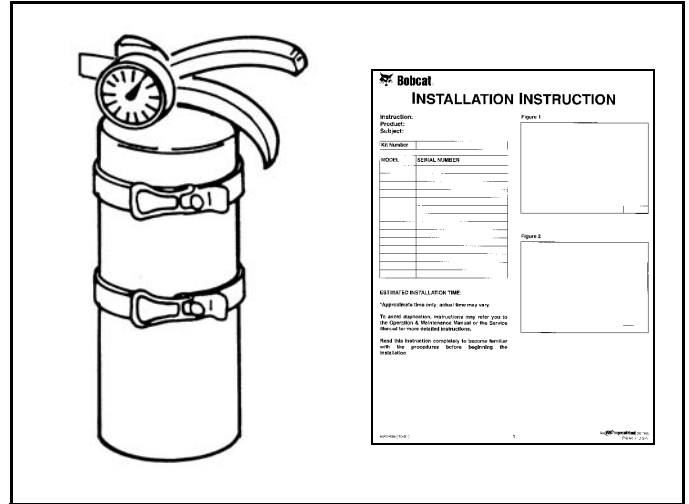

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].

## SERIAL NUMBER LOCATIONS

Always use the FULL serial number (including the first four digits) when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

### Hydraulic Excavator Serial Number


Figure 1



The excavator serial number is on the front of the machine frame, to the left of the boom [Figure 1].

### Engine Serial Number


Figure 2

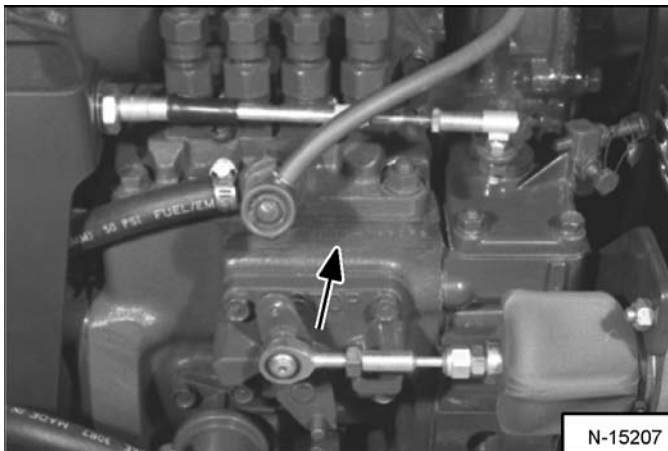

The engine serial number is located by the fuel injection pump on the engine block [Figure 2].


## DELIVERY REPORT

Figure 3

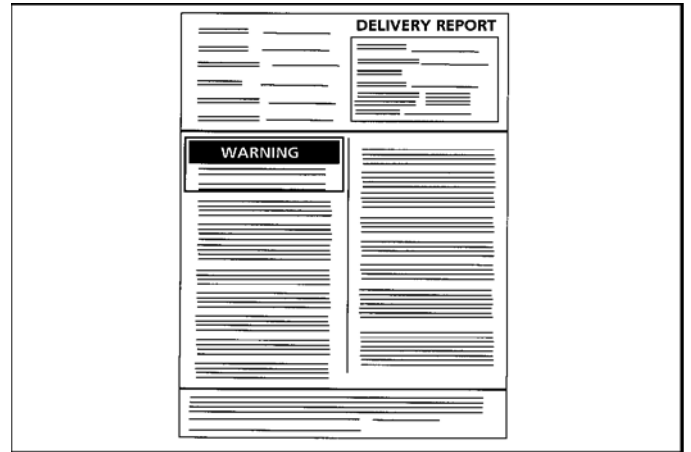

The Delivery Report items must be explained to the owner/operator by the dealer. The dealer is to fill out the form and the owner/operator signs the form to indicate his understanding [Figure 3].

**BOBCAT EXCAVATOR IDENTIFICATION**

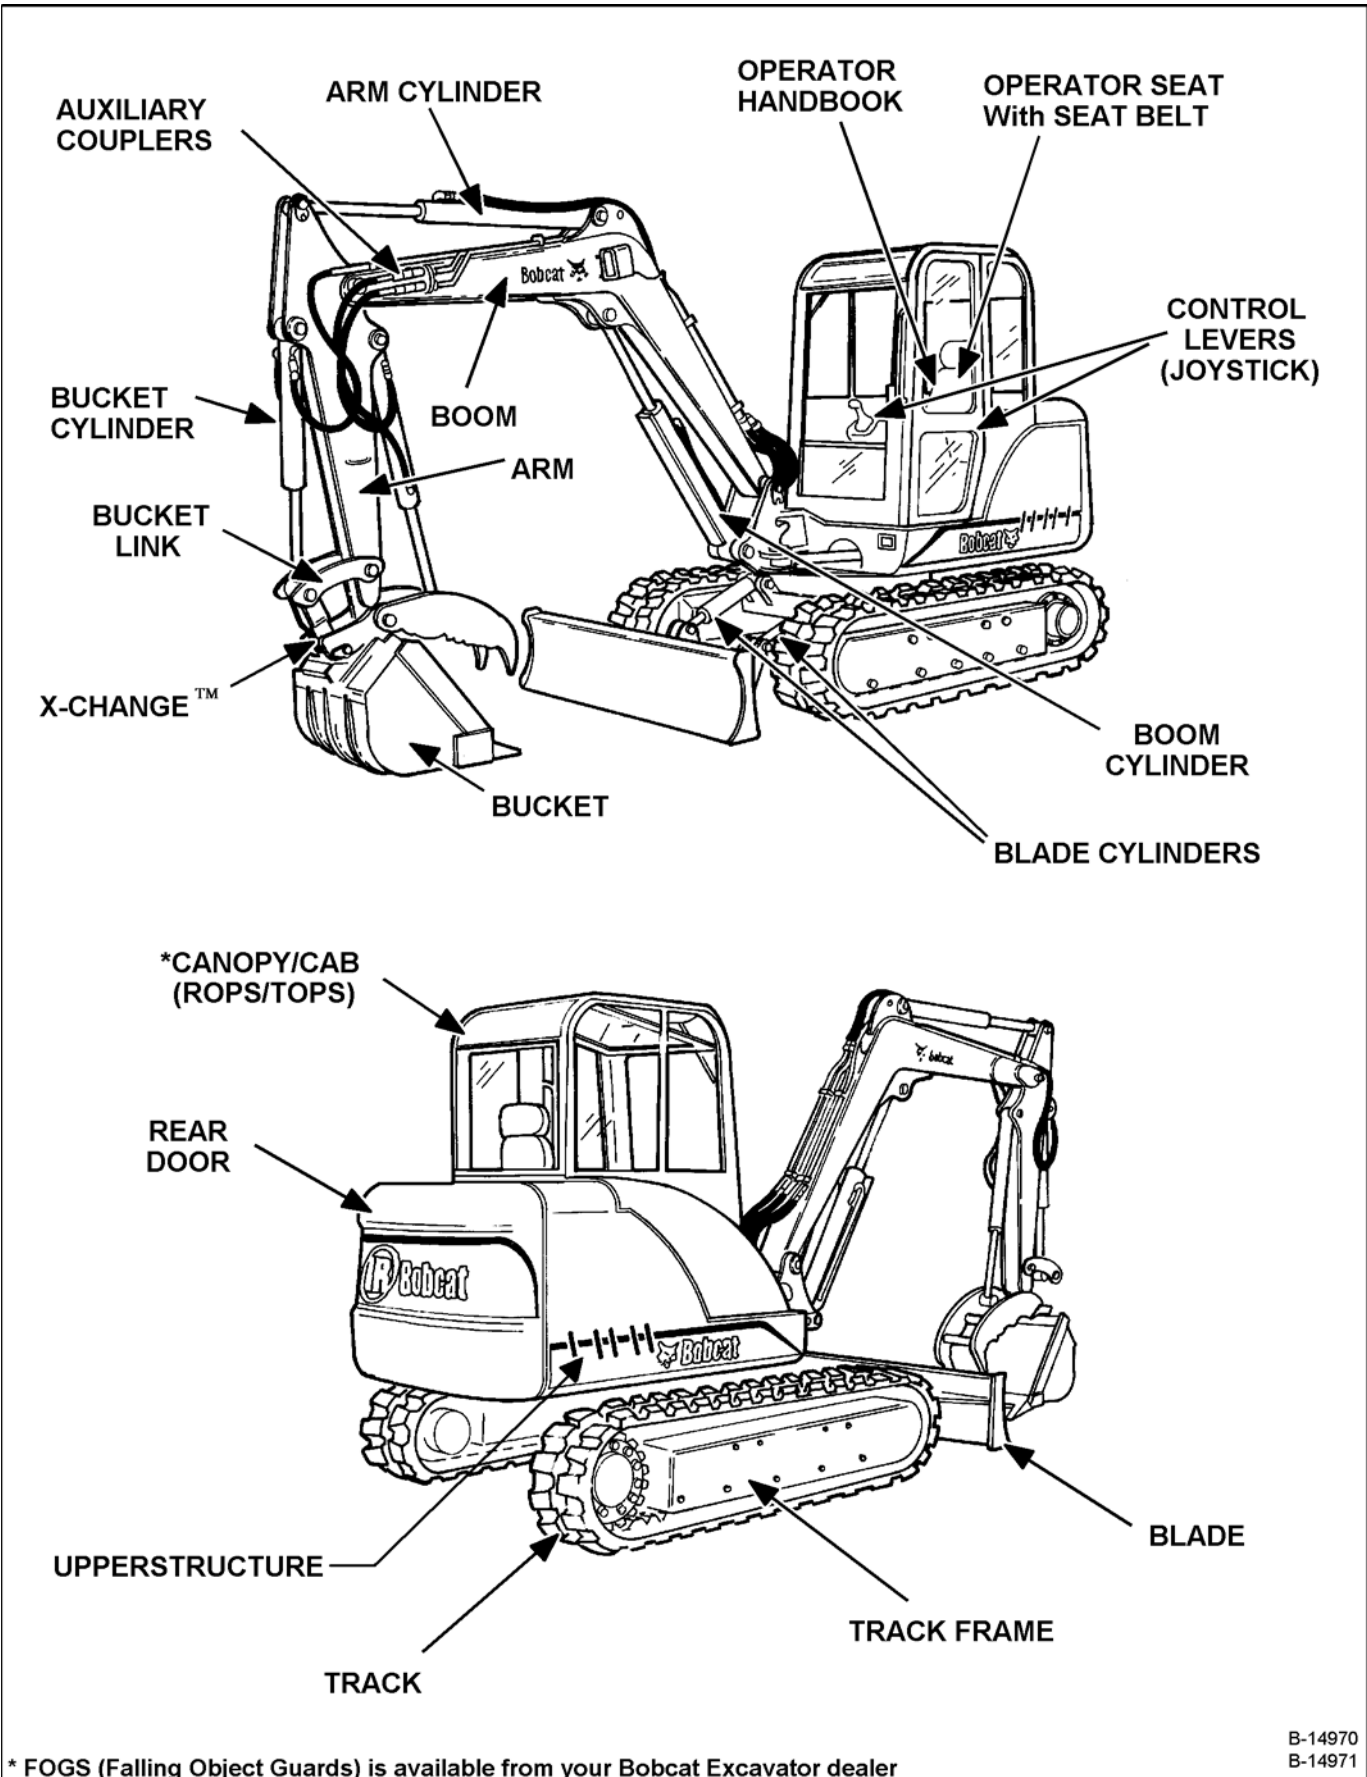

\* FOGS (Falling Object Guards) is available from your Bobcat Excavator dealer

B-14970  
B-14971

**SAFETY AND MAINTENANCE**

AIR CLEANER SERVICE ..... 10-60-1  
    Checking ..... 10-60-1  
    Replacing The Filters..... 10-60-1

COOLING SYSTEM ..... 10-70-1  
    Checking Coolant Level..... 10-70-1  
    Cleaning The Cooling System ..... 10-70-1  
    Replacing The Coolant (Early Models) ..... 10-70-2  
    Replacing The Coolant (Later Models) ..... 10-70-3

ENGINE LUBRICATION SYSTEM ..... 10-90-1  
    Checking Engine Oil (Early Models) ..... 10-90-1  
    Checking Engine Oil (Later Models) ..... 10-90-3  
    Replacing Oil And Filter (Early Models)..... 10-90-1  
    Replacing Oil And Filter (Later Models)..... 10-90-3

FUEL SYSTEM ..... 10-80-1  
    Draining The Fuel Tank ..... 10-80-3  
    Filling The Fuel Tank ..... 10-80-1  
    Fuel Filter..... 10-80-2  
    Fuel Specifications..... 10-80-1  
    Removing Air From The Fuel System ..... 10-80-3  
    Removing Water From The Fuel Filter..... 10-80-2

HEATER AIR FILTER ..... 10-61-1  
    Fresh Air Filter ..... 10-61-1  
    Recirculation Filter (Early Models Only)..... 10-61-1

HYDRAULIC SYSTEM ..... 10-100-1  
    Checking And Adding Fluid (Early Models) ..... 10-100-1  
    Checking And Adding Fluid (Later Models) ..... 10-100-2  
    Diagnostic Couplers..... 10-100-6  
    Replacing the Case Drain Filter..... 10-100-5  
    Replacing the Hydraulic Filter ..... 10-100-5  
    Replacing The Hydraulic Oil (Early Models) ..... 10-100-3  
    Replacing The Hydraulic Oil (Later Models) ..... 10-100-4

LIFTING AND BLOCKING THE EXCAVATOR ..... 10-10-1  
    Procedure ..... 10-10-1

**Continued On Next Page**

## SAFETY AND MAINTENANCE (CONT'D)

LIFTING THE EXCAVATOR .....	10-11-1
3-Point Lift Procedure .....	10-11-1
LUBRICATION OF THE EXCAVATOR .....	10-110-1
Procedure .....	10-110-1
OPERATOR CAB .....	10-20-1
Cab Door .....	10-20-1
Emergency Exit .....	10-20-1
SERVICE SCHEDULE .....	10-50-1
SPARK ARRESTOR MUFFLER (IF EQUIPPED) .....	10-130-1
Servicing .....	10-130-1
TAILGATE (S/N 233311550 ABOVE, S/N 233211443 & ABOVE) ....	10-41-1
Adjusting The Bumper .....	10-41-1
Adjusting The Striker .....	10-41-2
Opening And Closing The Tailgate .....	10-41-1
TAILGATE (S/N 233311549 & BELOW, S/N 233211442 & BELOW) ..	10-40-1
Adjusting The Bumper .....	10-40-1
Adjusting The Latch .....	10-40-1
Opening And Closing The Tailgate .....	10-40-1
TRANSPORTING THE EXCAVATOR .....	10-30-1
Procedure .....	10-30-1
TRAVEL MOTOR .....	10-120-1
Checking Oil Level .....	10-120-1
Draining The Travel Motor .....	10-120-1

## LIFTING AND BLOCKING THE EXCAVATOR

### Procedure

Always park the machine on a level surface.



Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195



### AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.


W-2142-0189

Figure 10-10-1



Raise the machine using the boom and arm [Figure 10-10-1].

Figure 10-10-2

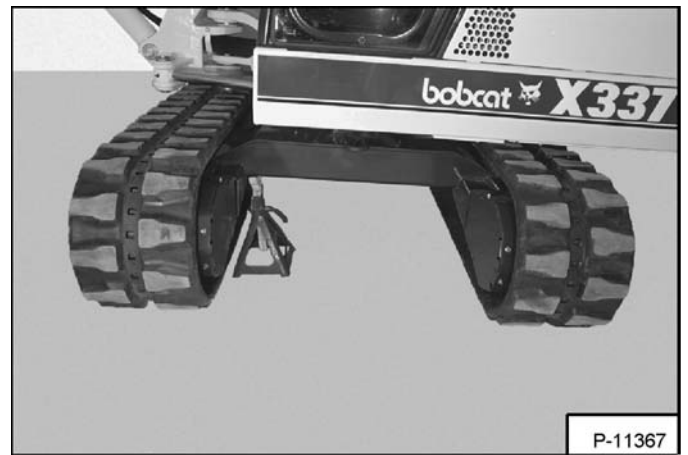

Fully raise the blade and install jackstands under the blade [Figure 10-10-1] and track frame [Figure 10-10-2].

Lower the boom until all the machine weight is on the jackstands.


Repeat the procedure for the other side.

Stop the engine.

## LIFTING THE EXCAVATOR

### 3-Point Lift Procedure

Figure 10-11-1

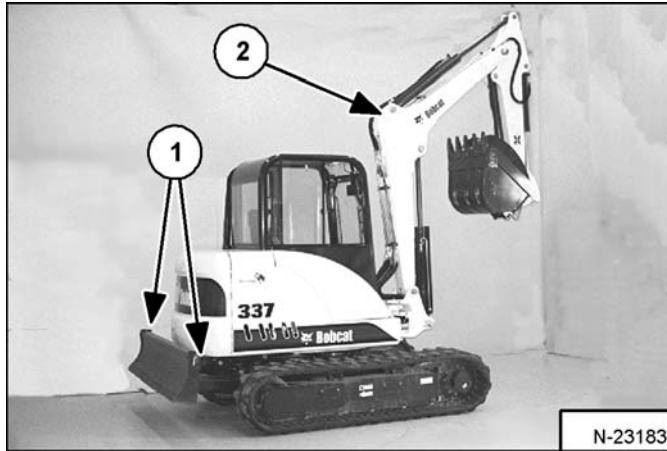

Fully extend the cylinders of the bucket, arm & boom so that the excavator is in the position as shown [Figure 10-11-1].

Raise the blade all the way.

Put all the control levers in neutral .




#### AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the swing locking lever.
- Never lift with operator on machine.

W-2202-0595

Figure 10-11-2

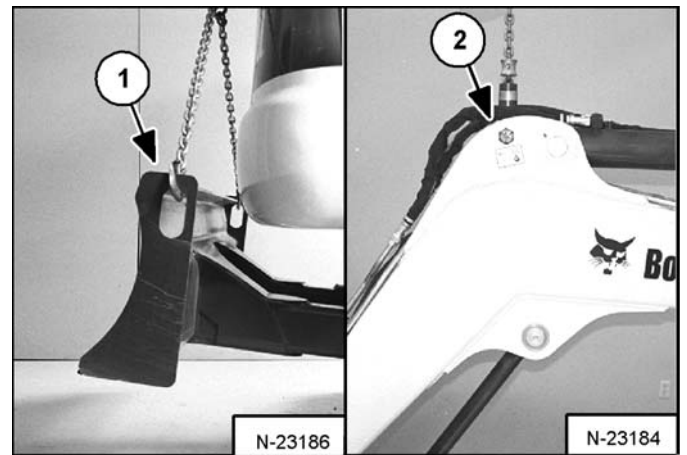

Fasten chains to the ends of the blade (Item 1) [Figure 10-11-1] & [Figure 10-11-2] and up to a lifting fixture above the canopy/cab. The lifting fixture must extend over the sides of the canopy/cab to prevent the chains from hitting the ROPS/TOPS.

Install a 1 inch (25mm) bolt and nut (Grade 5 or 8) through the holes at the top of the boom (Item 2) [Figure 10-11-1] & [Figure 10-11-2]. Fasten a chain from the bolt to the lift fixture.

## OPERATOR CAB

### Emergency Exit

The left door and right side rear window provide exits.


**Figure 10-20-1**



Slide the window to the front of the excavator and exit through the side window **[Figure 10-20-1]**.

## Cab Door

**Figure 10-20-2**

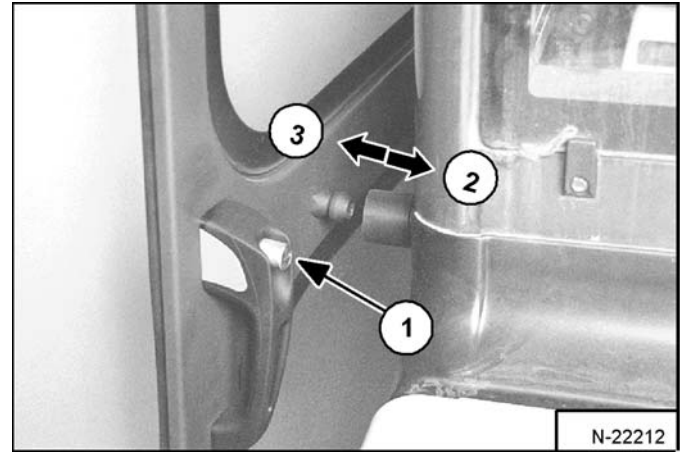

The cab door can be locked (Item 1) **[Figure 10-20-2]** with the same key as the starter switch.

Push the door all the way open (Item 2) **[Figure 10-20-2]** until the latch engages to hold the door in the open position.

Pull the door away from the cab (Item 3) **[Figure 10-20-2]** to disengage the latch and close the door.

## TRANSPORTING THE EXCAVATOR

### Procedure



Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0494

When transporting the machine, observe the rules, motor vehicle laws and vehicle limit ordinances. Use a transport and towing vehicle of adequate length and capacity.

Secure the parking brakes and block the wheels of the transport vehicle.

Align the ramps with the center of the transport vehicle. Secure the ramps to the truck bed and be sure ramp angle does not exceed 15 degrees.

Use metal loading ramps with a slip resistant surface.

Use ramps that are the correct length and width, and can support the weight of the machine.

The rear of the trailer must be blocked or supported when loading or unloading the excavator to prevent the front of the transport vehicle from raising.

Determine the direction of the track movement before moving the machine (blade forward).

Figure 10-30-1




Move the machine forward onto the transport vehicle [Figure 10-30-1].

Do not change direction of the machine while it is on the ramps.

## TRANSPORTING THE EXCAVATOR (CONT'D)

### Procedure (Cont'd)

Figure 10-30-2

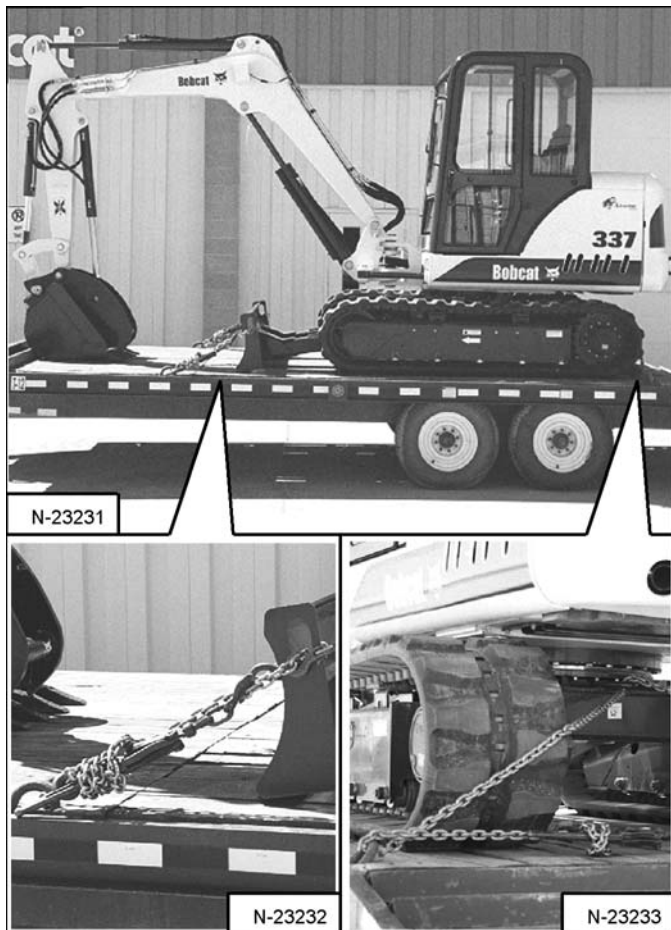

Lower the boom, arm and bucket to the transport vehicle [Figure 10-30-2].

Stop the engine and remove the key (if equipped).

Put blocks at the front and rear of the tracks.

Fasten chains to the front corners of the blade and to the tie down loop at the rear [Figure 10-30-2] to prevent it from moving when going up or down slopes, or during sudden stops.

Use chain binders to tighten the chains and then safely tie the chain binder levers to prevent loosening.

**TAILGATE (S/N 233311549 & BELOW, S/N 233211442 & BELOW)**

**Opening And Closing The Tailgate**



**AVOID INJURY**

Never service or adjust the machine when the engine is running unless instructed to do so in the manual.


W-2012-0497



Keep the rear door closed when operating the machine. Failure to do so could seriously injure a bystander.

W-2020-1285

**Figure 10-40-1**

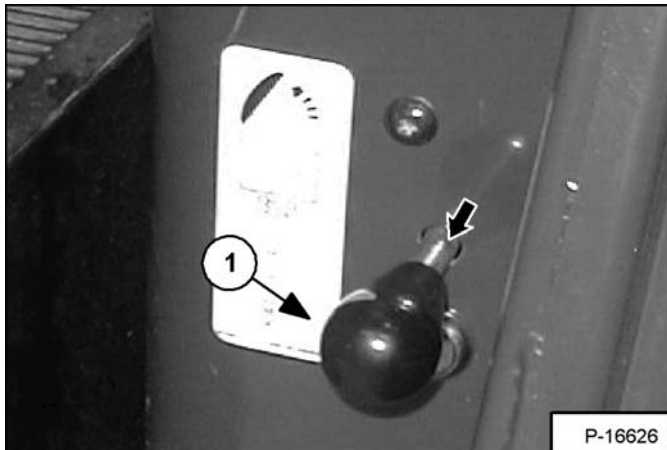


In the operator cab, pull the tailgate latch (Item 1) [Figure 10-40-1] and pull the tailgate open.

Push firmly to close the tailgate.

**Adjusting The Bumper**

**Figure 10-40-2**

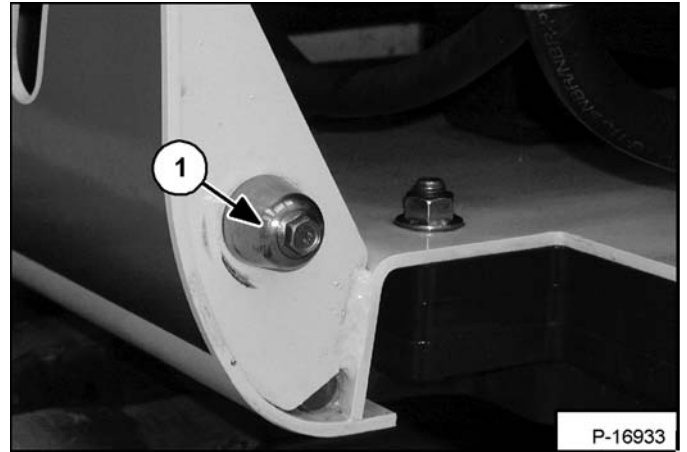


The door bumper (Item 1) [Figure 10-40-2] can be adjusted for alignment with the door.

Close the door before operating the excavator.

**Adjusting The Latch**

**Figure 10-40-3**

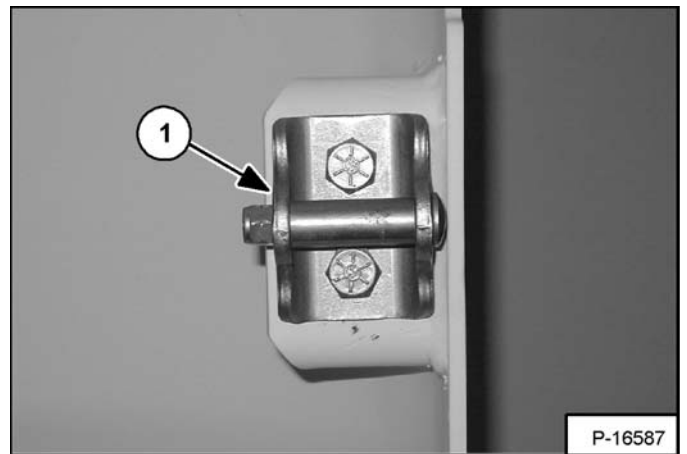


The door latch (Item 1) [Figure 10-40-3] can be adjusted in either direction for alignment with the door latch.

TAILGATE (S/N 233311549 & BELOW, S/N 233211442  
& BELOW) (CONT'D)

Adjusting The Latch (Cont'd)

Figure 10-40-4

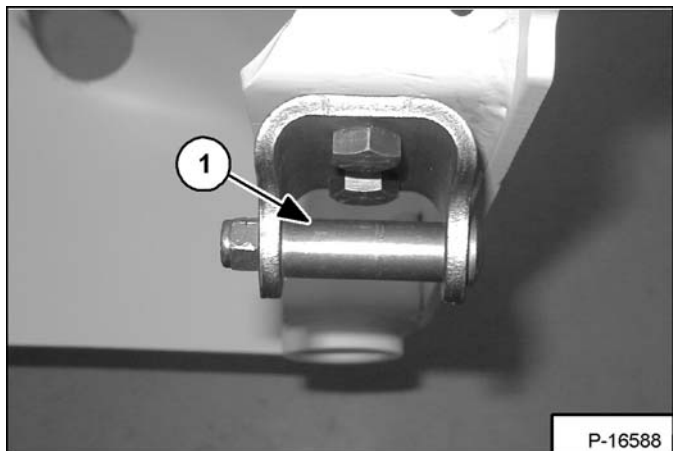

The door latch cylinder (Item 1) [Figure 10-40-4] can be adjusted by loosening the nut and moving the cylinder and tightening the nut.

Close the tailgate before operating the excavator.

**TAILGATE (S/N 233311550 ABOVE, S/N 233211443 & ABOVE)**

**Opening And Closing The Tailgate**



**AVOID INJURY**

Never service or adjust the machine when the engine is running unless instructed to do so in the manual.


W-2012-0497



Keep the rear door closed when operating the machine. Failure to do so could seriously injure a bystander.

W-2020-1285

**Figure 10-41-1**

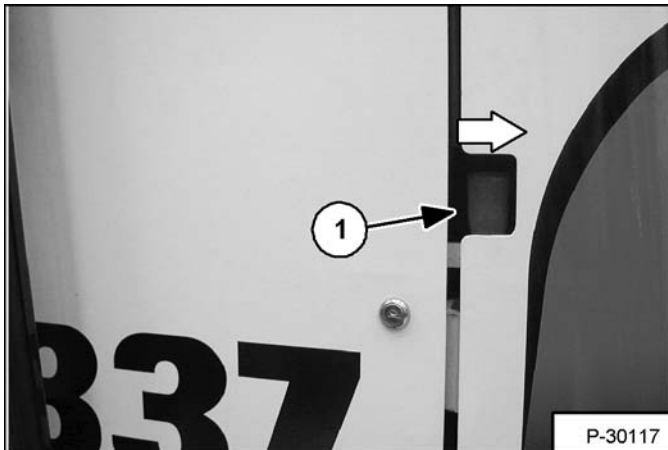


At the tailgate, pull the tailgate latch (Item 1) [Figure 10-41-1] and pull the tailgate open.

Push firmly to close the tailgate.

**Adjusting The Bumper**

**Figure 10-41-2**

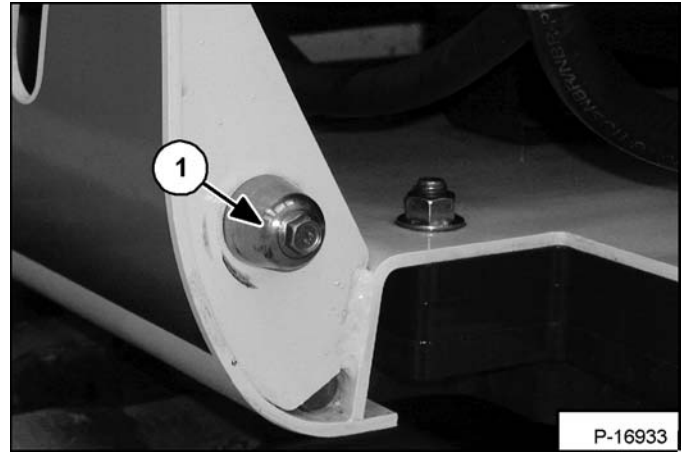


The door bumper (Item 1) [Figure 10-41-2] can be adjusted for alignment with the door.

Close the door before operating the excavator.

TAILGATE (S/N 233311550 ABOVE, S/N 233211443 & ABOVE) (CONT'D)


Adjusting The Striker

Figure 10-41-3

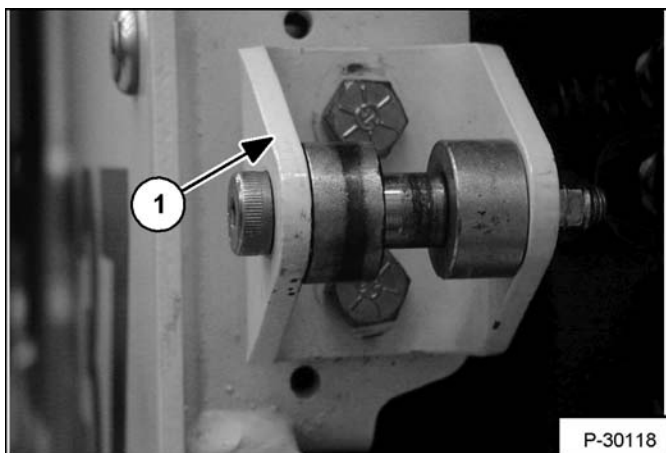

The door striker (Item 1) [Figure 10-41-3] can be adjusted in either direction for alignment with the door latch.

Figure 10-41-4

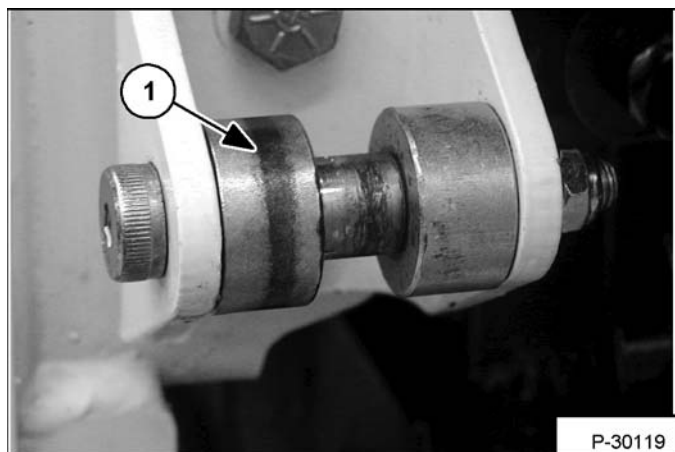

The door roller (Item 1) [Figure 10-41-4] can be removed by loosening the nut and removing the mount bolt.

Close the tailgate before operating the excavator.

## SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat excavator.



# WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

SERVICE SCHEDULE		HOURS					
ITEM	SERVICE REQUIRED	8-10	50	100	250	500	■ 1000
Engine Coolant	Check coolant level. Add premixed coolant as needed.						
Engine Oil	Check the engine oil level and add as needed.						
Hydraulic Fluid, Hoses and Tubelines, Reservoir Breather Cap	Check the hydraulic fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.						
Engine Air Filter and Air System	Check condition indicator and empty dust cup as needed. Check air system for leaks.						
Tracks	Check and adjust track tension as needed.						
Indicators and Lights	Check for correct operation of all indicators and lights.						
Operator Canopy / Cab	Check condition. Check mounting hardware.						
Seat Belt	Check condition. Check mounting hardware.						
Safety Signs and Safety Treads	Check for damaged signs (decals) and safety treads. Replace any signs or safety treads that are damaged or worn.						
Pivot Points	Grease all machinery pivot points. (21 Places)						
Cab Heater Air Filter	Clean the filter as needed.						
Swing Circle and Pinion	Grease three fittings.						
Fuel Tank & Filter	Drain water and sediment from fuel tank and fuel filter.						
Battery	Check battery, cables, connections and electrolyte level. Add distilled water as needed.						
Alternator / Fan Belt	Check condition of belt and adjust as needed.		•				
Spark Arrestor Muffler	Clean the spark chamber.						
Engine Oil and Filter	Replace oil & filter. Use CD or better grade oil and Bobcat filter.		•				
Fuel Filter	Replace fuel filter.						
Final Drive Case	Check lubricant level in both final drive cases.			◆			
Radiator, oil cooler, *A/C	Clean debris from the radiator fins.						
Hydraulic Filter	Replace the filter element.			••			
Alternator & Starter	Check the alternator and starter connections.		•				
Engine Valves	Check and adjust the engine valve clearance.						
Case Drain Filter	Replace the filter.						
Final Drive Case	Replace lubricant in both final drive cases.						
Engine Cooling System	Drain and flush the cooling system. Replace the coolant.						
Hydraulic System	Replace the hydraulic fluid and filter. Clean the Reservoir.			••			

\* If Equipped

• Also at *first 50 Hours*

◆ Replace at *first 100 hours*

•• Also at *first 100 Hours*


■ Or every 6 months

## AIR CLEANER SERVICE

### Checking

See SERVICE SCHEDULE on Page 10-50-1 for the correct service interval.

**Figure 10-60-1**

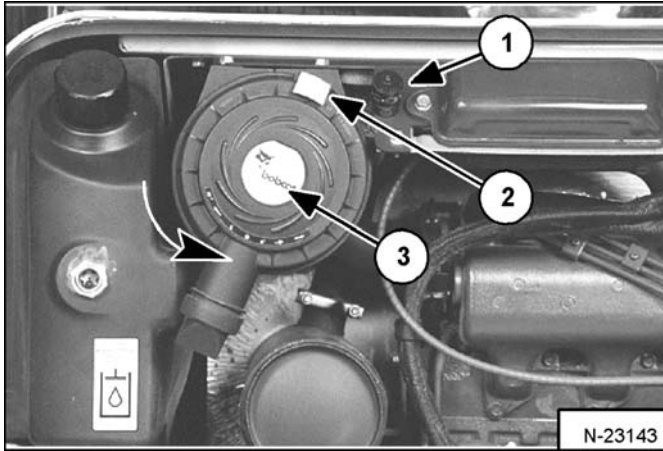

Check the condition indicator (Item 1) [Figure 10-60-1]. If the red ring shows in the condition indicator, the filter element needs to be replaced.

Replace the inner filter every third time the outer filter is replaced or as indicated.

## Replacing The Filters


### Outer Filter

Pull the locking tab (Item 2) [Figure 10-60-1].

Turn the dust cup (Item 3) [Figure 10-60-1] counterclockwise 1/8 turn.

Remove and clean the dust cup.

**Figure 10-60-2**

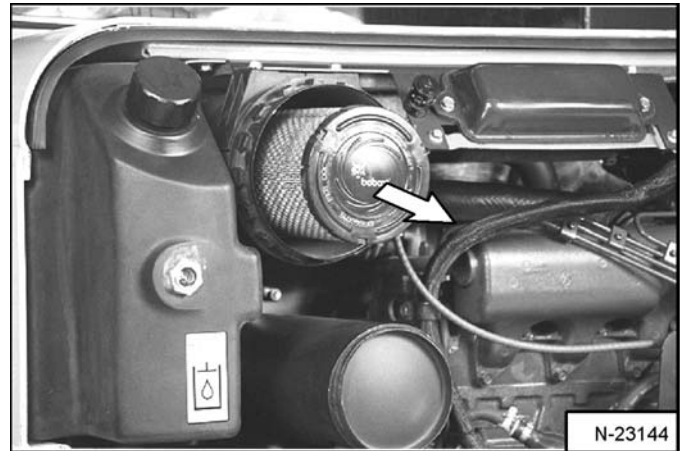

Pull the outer filter from the air cleaner housing [Figure 10-60-2].

Check the housing for damage.


Clean the housing and the seal surface. Do Not use compressed air.

Install a new element.

## AIR CLEANER SERVICE (CONT'D)

### Replacing The Filters (Cont'd)

Figure 10-60-3

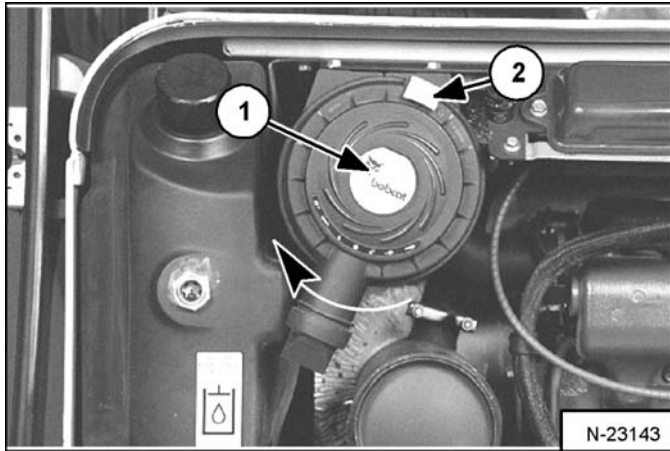

Install the dust cup (Item 1) [Figure 10-60-3] and turn clockwise 1/8 turn.

Push locking tab in (Item 2) [Figure 10-60-3].

Check the air intake hose and the air cleaner housing for damage. Make sure all connections are tight.

#### *Inner Filter*


Only replace the inner filter element under the following conditions:

- Replace the inner filter element every *third* time the outer filter is replaced.
- After the outer element has been replaced, press the button (Item 2) [Figure 10-60-3] on the top of the condition indicator and start the engine. Run at full RPM, then reduce engine speed and stop the engine. If the red ring shows in the condition indicator, replace the inner filter element.

Remove the dust cup, outer filter and inner filter.

**NOTE: Make sure all sealing surfaces are free of dirt and debris.**

Figure 10-60-4

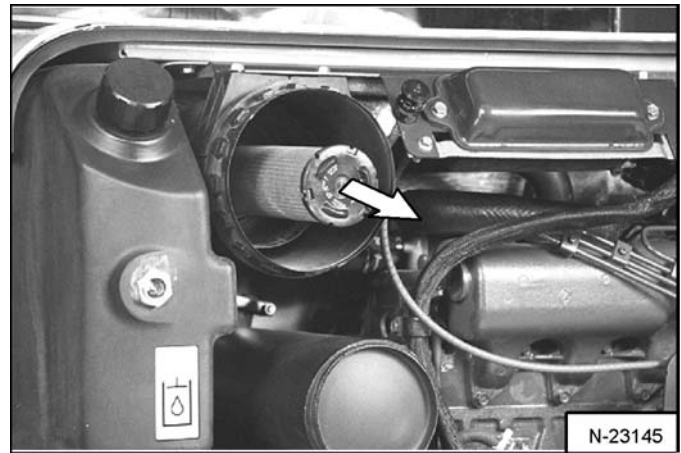

Install the new inner element [Figure 10-60-4].

Install the outer element and the dust cup [Figure 10-60-3].


Press the button on the condition indicator to reset the red ring.

## HEATER AIR FILTER

### Fresh Air Filter

Later Models

Figure 10-61-1

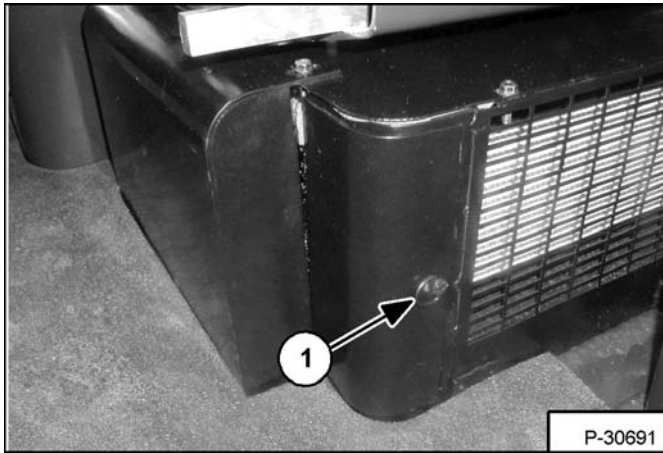


The heater filter must be cleaned regularly. The filter is located at the left of the operator seat [Figure 10-61-1].

Remove the fastener (Item 1) [Figure 10-61-1] from the front access panel.

Remove the access panel.

Figure 10-61-2

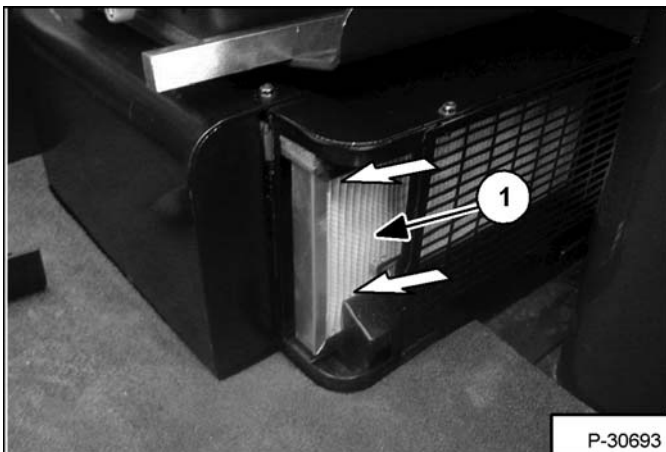


Remove the filter (Item 1) [Figure 10-61-2].

Use low air pressure to clean the filter; replace when very dirty.

Early Models


Figure 10-61-3

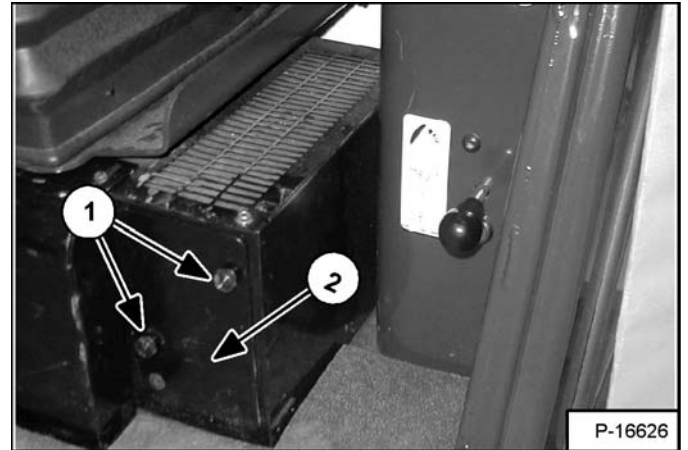

The heater filters must be cleaned regularly. The filters are located at the left of the operator seat [Figure 10-61-3].

Remove the two knobs (Item 1) and front panel (Item 2) [Figure 10-61-3].

Figure 10-61-4

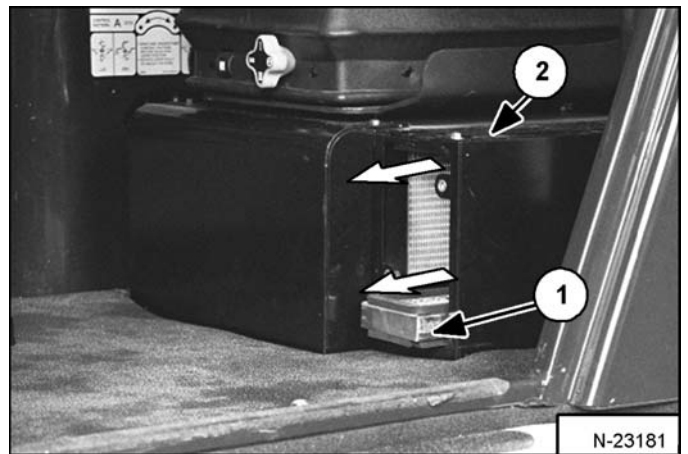

Remove the fresh air filter (Item 1) [Figure 10-61-4]. Use low air pressure to clean the filter; replace when very dirty.

### Recirculation Filter (Early Models Only)

Remove the recirculation filter (Item 2) [Figure 10-61-4]. Use air pressure to clean the filter; replace when very dirty.

Install the filters, front panel and tighten knobs.



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

## COOLING SYSTEM

Check the cooling system every day to prevent overheating, loss of performance or engine damage.

### Cleaning The Cooling System

Open the tailgate.

Use air pressure or water pressure to clean the radiator and oil cooler. Be careful not to damage fins when cleaning.

### Checking Coolant Level



**Do not remove radiator cap when the engine is hot. You can be seriously burned.**

W-2070-1285

Open the tailgate.

Figure 10-70-1


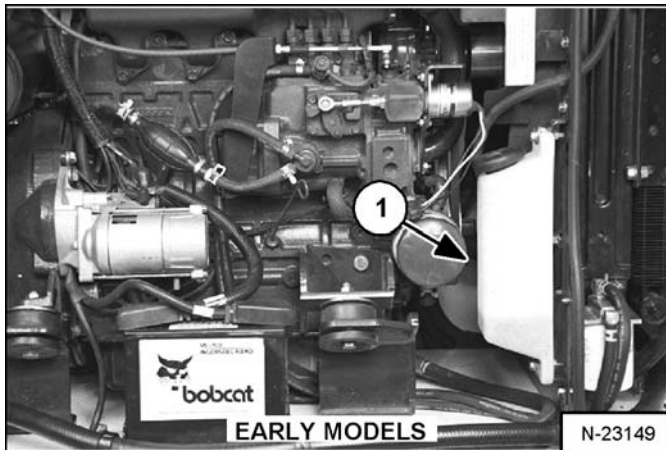


Figure 10-70-2

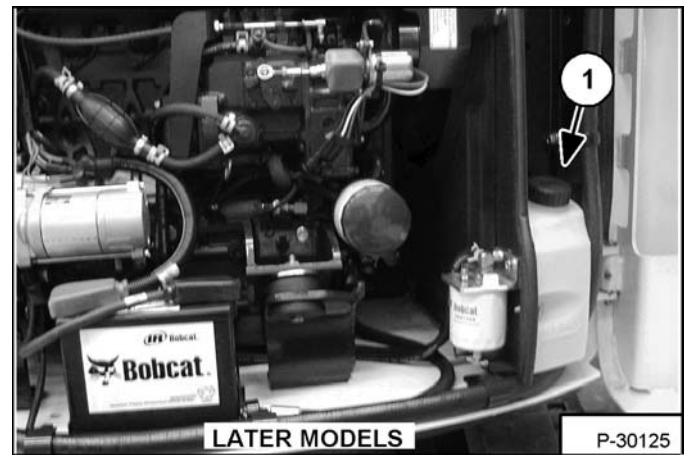

Check the coolant level in the coolant recovery tank (Item 1) [Figure 10-70-1] & [Figure 10-70-2].

The coolant level must be between the MIN and MAX marks on the coolant recovery tank when the engine is cold.

**NOTE:** The cooling system is factory filled with propylene glycol (purple color). **DO NOT** mix propylene glycol with ethylene glycol.



### AVOID ENGINE DAMAGE

Always use the correct ratio of water to anti freeze. Too much antifreeze reduces cooling system efficiency and may cause serious premature engine damage.

Too little antifreeze reduces the additives which protect the internal engine components; reduces the boiling point and freeze protection of the system.

Always add a premixed solution. Adding full strength concentrated coolant can cause serious premature engine damage.

I-2124-0497



Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material is present.
- Engine is running.
- Tools are being used.

W-2019-1285

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**