



Service Repair Manual

Models

W330B MH Excavator

[Previous Screen](#)

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00930839

Automatic Timing Advance - Remove

SMCS - 1272-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	5P-7307	Engine Turning Tool	1
B	0T-0065	Bolt	1
C	9S-9155	Spacer	1
	8S-2264	Pump Impeller Puller	2
	0T-0513	Bolt	2
	5P-1075	Hard Washer	2

Start By:

- A. Remove the front housing. Refer to Disassembly and Assembly, "Front Housing - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Follow the procedure in Steps 3 and 4 in order to time the fuel injection pump when the front cover is removed. Follow the procedure in Steps 6 and 7 in order to time the fuel injection pump when the front cover is installed.

Note: The No. 1 piston should be at the top center position on the compression stroke at the start of all timing procedures.

Note: The engine is seen from the flywheel end when the direction of the crankshaft rotation is given.

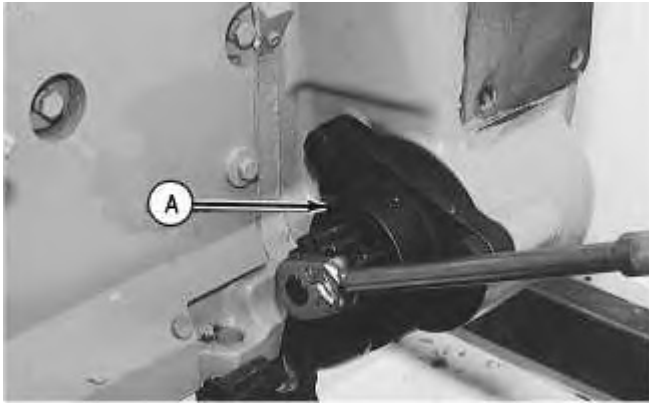


Illustration 1

g00474593

2. Remove the electric starting motor and install Tool (A) .

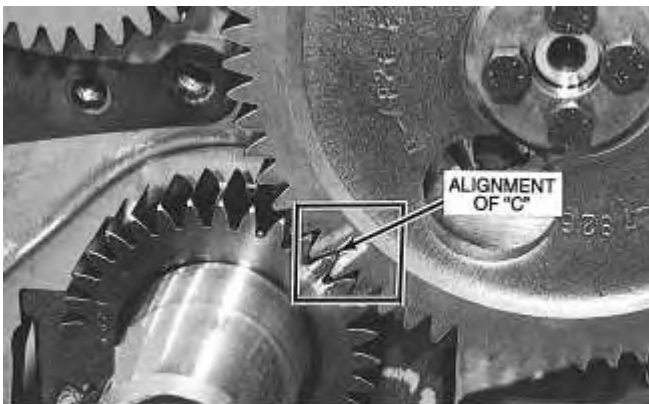


Illustration 2

g00474592

3. Turn the crankshaft counterclockwise until the "C" on the crankshaft gear and the "C" on the camshaft gear are in alignment.
-

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

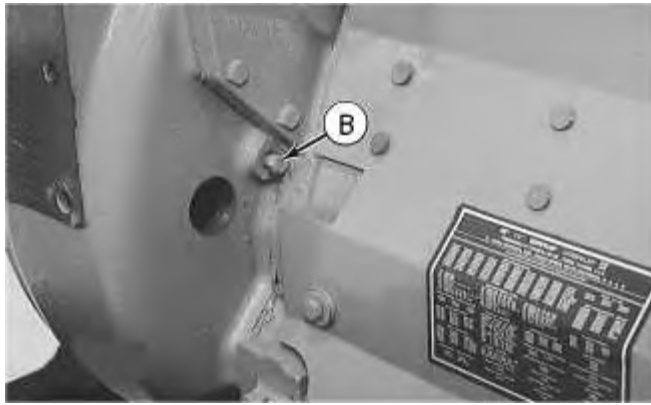


Illustration 3

g00474594

4. Remove two plugs and install Tool (B) in the flywheel housing. The large plug hole is for viewing.
5. To find the top center compression stroke for the No. 1 piston, use Tool (A) in order to turn the flywheel clockwise for approximately 30 degrees. This procedure should be used to remove all of the end play from the timing gears.
6. Use Tool (A) in order to turn the flywheel counterclockwise in the direction of the engine rotation until Tool (B) can be installed in the flywheel. The piston is at the top center position.

Note: If you go past the bolt hole, you must start the procedure again.

Note: Remove the breather assembly from the valve mechanism cover. The piston is at the top center position on the compression stroke when the inlet valve is closed and the exhaust valve is closed for the No. 1 cylinder. You must be able to move the rocker arms up and down with your hand.

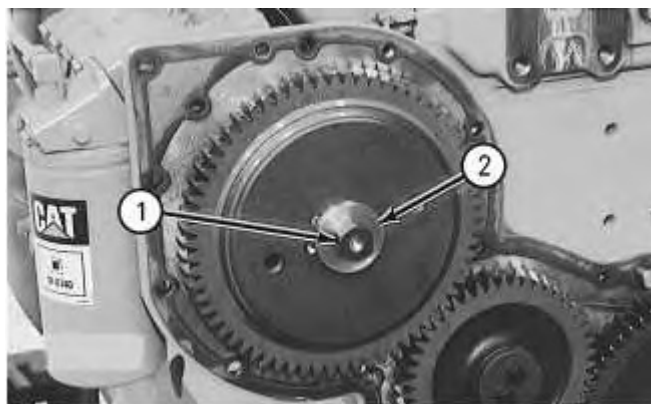


Illustration 4

g00474595

7. Remove bolt (1) and washer (2) that secures the automatic timing advance.

NOTICE

The automatic timing advance must have support during removal in order to help prevent damage to components.

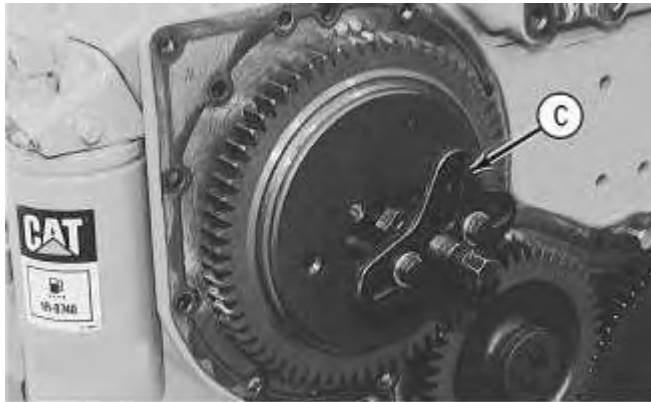


Illustration 5

g00474596

8. Install bolt (1) and leave a 6.35 mm (.250 inch) gap. Install Tool (C), as shown. Tighten the stud in order to loosen the fuel pump drive gear from the taper on the fuel injection pump camshaft.
9. Remove Tool (C) and bolt (1). Remove the automatic timing advance.

[Previous Screen](#)

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00935438

Automatic Timing Advance - Disassemble

SMCS - 1272-015

Disassembly Procedure

Start By:

- A. Remove the automatic timing advance unit. Refer to Disassembly and Assembly, "Automatic Timing Advance - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

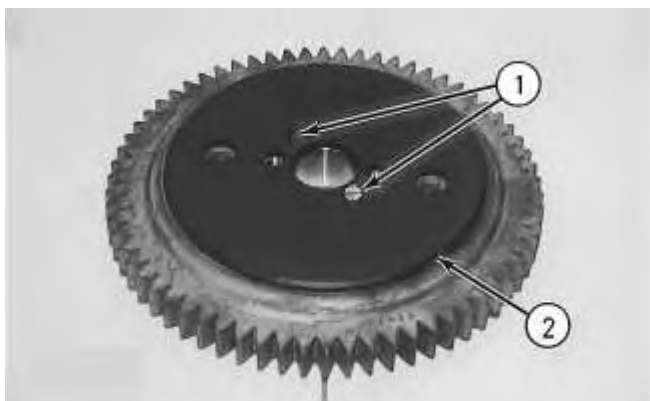


Illustration 1

g00476292

1. Remove two screws (1) and plate (2) .
-

NOTICE

The weights are held in position with two springs for each weight that is under compression. Carefully remove the weights and the springs in order to help prevent possible injury.

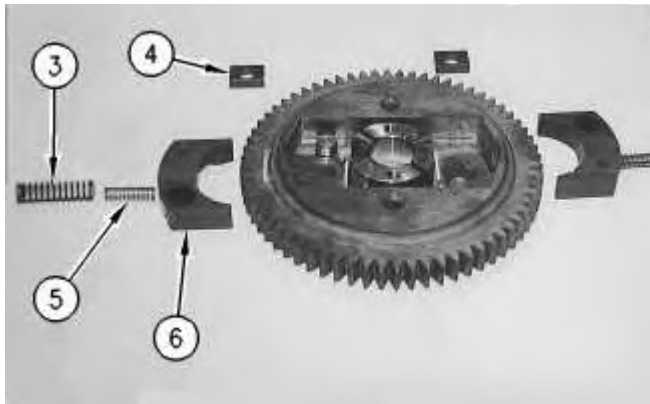


Illustration 2

g00476293

2. Remove springs (3) and (5), weight (6) and slide (4) from each side of the assembly.
-

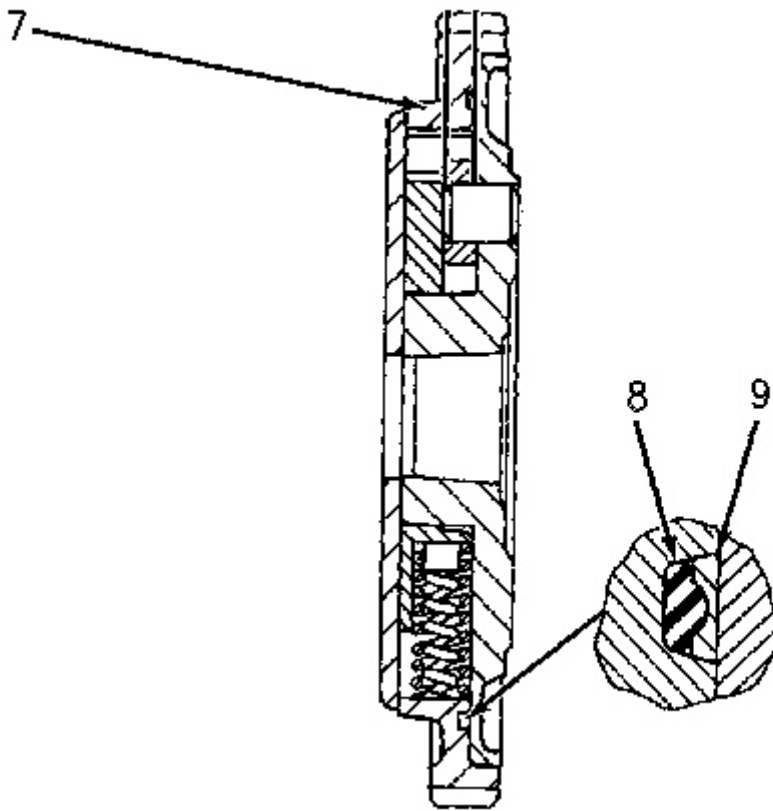


Illustration 3

g00476294

3. If necessary, remove gear (7). Remove seals (8) and (9) .

[Previous Screen](#)

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00935599

Automatic Timing Advance - Assemble

SMCS - 1272-016

Assembly Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

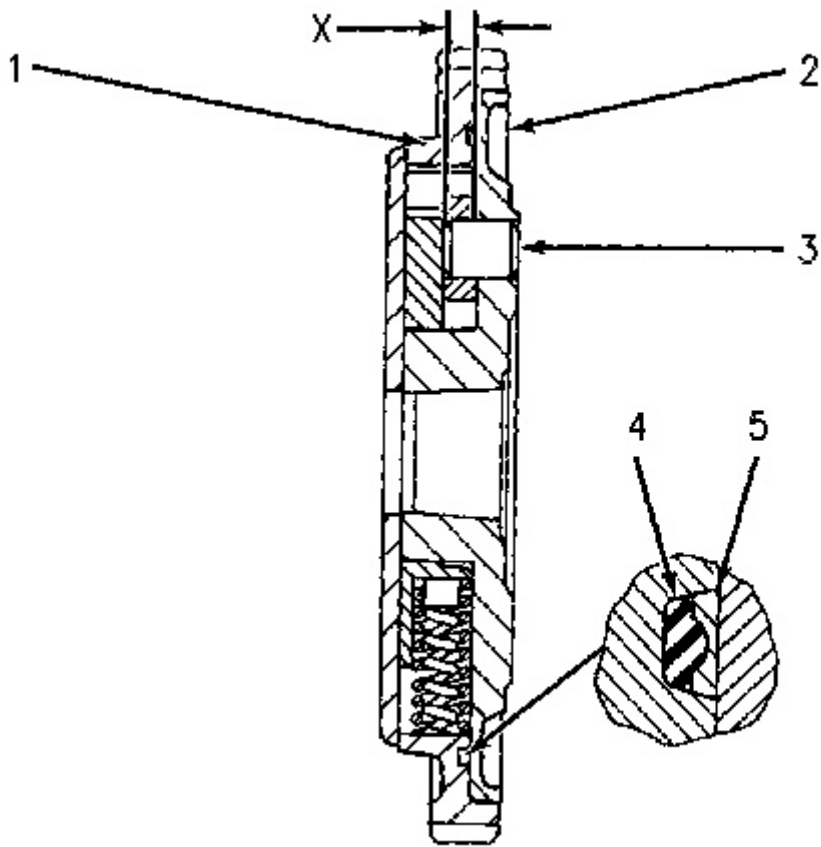


Illustration 1

g00476382

1. If dowels (3) were removed from the gear hub, installation dimension (X) is 9.00 ± 0.50 mm ($.354 \pm .020$ inch).
2. Install seals (4) and (5) .
3. Put gear (1) in position on hub assembly (2) .

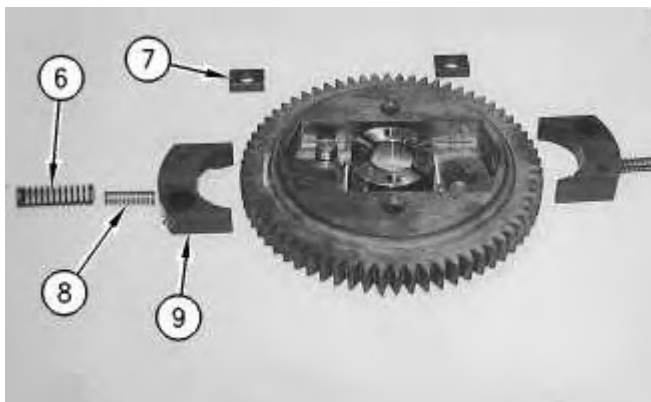


Illustration 2

g00476383

4. Install slide (7), weight (9) and springs (6) and (8) on each side of the assembly.

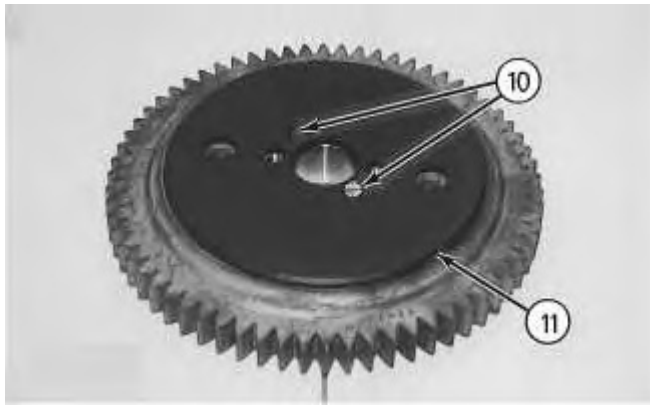


Illustration 3

g00476385

5. Install plate (11) with two screws (10) .

End By: Install the automatic timing advance unit. Refer to Disassembly and Assembly, "Automatic Timing Advance - Install".

[Previous Screen](#)

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00935398

Automatic Timing Advance - Install

SMCS - 1272-012

Installation Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	6V-4186	Fuel Pump Timing Pin	1
B	0L-2070	Bolt	1
C	5P-7307	Engine Turning Tool	1
D	4C-9874	Spanner Wrench	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.



Illustration 1

g00476281

1. Install washer (1) and bolt (2). Ensure that the cover of the fuel pump housing is removed. Turn the fuel pump camshaft in the direction of the engine rotation until Tool (A) can be installed in the notch of the camshaft.
2. Install Tool (A) and (B) into position. Install the weight assembly for the timing advance on the fuel injection pump camshaft.



Illustration 2

g00476286

3. Use Tool (D) on the automatic timing advance and maintain a constant torque of 68 N·m (50 lb ft). Tighten the bolt that fastens the automatic timing advance to the fuel pump camshaft to a torque of 270 ± 25 N·m (200 ± 18 lb ft).
4. Remove Tools (A), (B), (C) and (D). Install the starting motor.

End By: Install the front housing. Refer to Disassembly and Assembly, "Front Housing - Install".

Previous Screen

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

**Disassembly and Assembly
3304B and 3306B Engines for Caterpillar Built Machines**

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i07103919

Fuel Injection Pump Housing and Governor - Remove

SMCS - 1286-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	8S-2264	Pump Impeller Puller	1
	8B-7560	Step Plate	1
	0T-0513	Bolt	2
	5P-1075	Hard Washer	2

Start By:

- a. Remove the fuel injection lines. Refer to Disassembly and Assembly, "Fuel Injection Lines - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

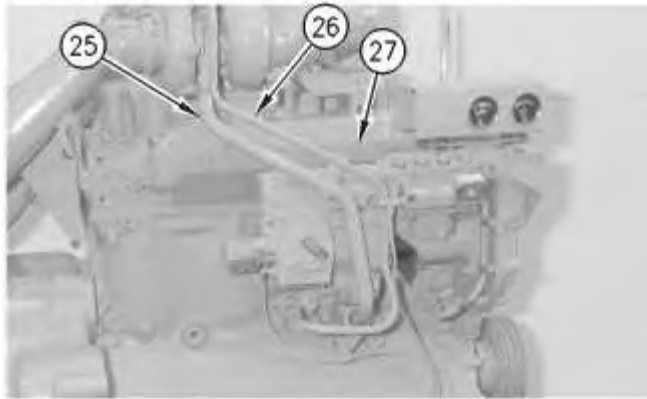


Illustration 1
3304B Engine

g00589938

1. On the 3304B engine, remove oil supply line (26), oil drain line (25), and heat shield (27). Inspect the O-ring seal around oil drain line (25). Replace the O-ring seal if the O-ring seal is damaged. Remove the gaskets and the screen from the top of the turbocharger.

Note: The following illustrations are of a 3306B engine.



Illustration 2

g00452289

2. Remove six nuts (1) and the washers and remove cover (2).

Note: Separate nut (1) and the mounting stud, if the nut and the mounting stud come out of the housing together. Apply thread sealant to the mounting studs and reinstall the mounting studs to a depth of 19.0 ± 0.8 mm (0.74 ± 0.03 inch).

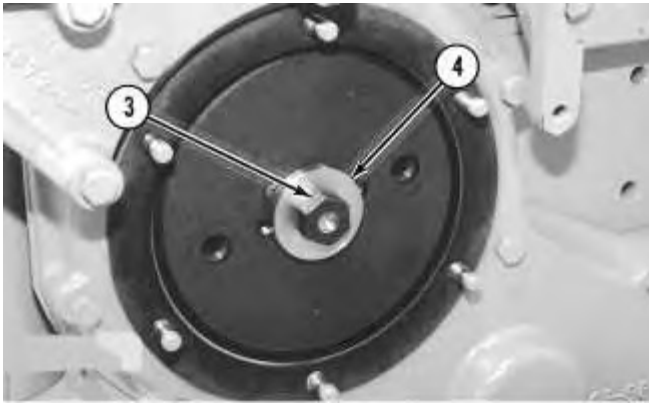


Illustration 3

g00452292

3. Remove center bolt (3) and spacer (4).

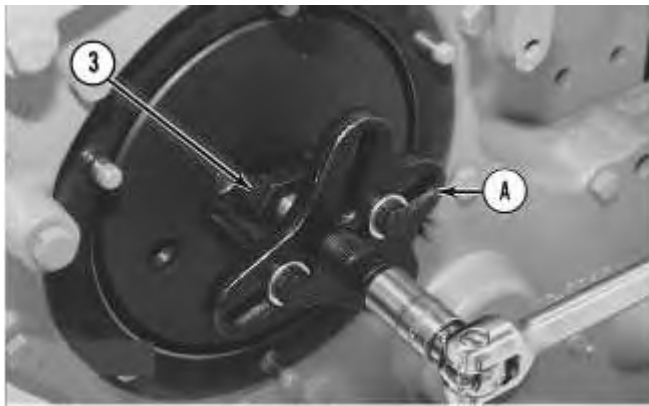


Illustration 4

g00452293

4. Install center bolt (3) and leave a gap of 6.4 mm (.25 inch). Install Tool (A), as shown. Tighten the stud to loosen the fuel pump drive gear from the taper on the fuel injection pump camshaft.
5. Remove Tool (A) and bolt (3).

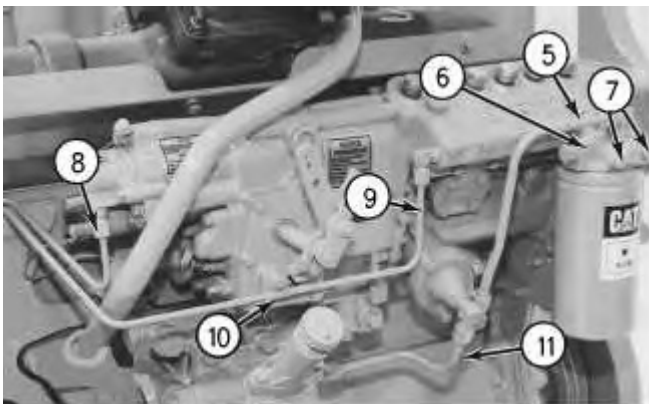


Illustration 5

g00452301

- Remove tube assemblies (5) and (11). Disconnect one end of tube assemblies (8) and (9). Disconnect clamp (10). Remove two bolts (7) and the washers and remove filter base (6) with the filter and the gasket.

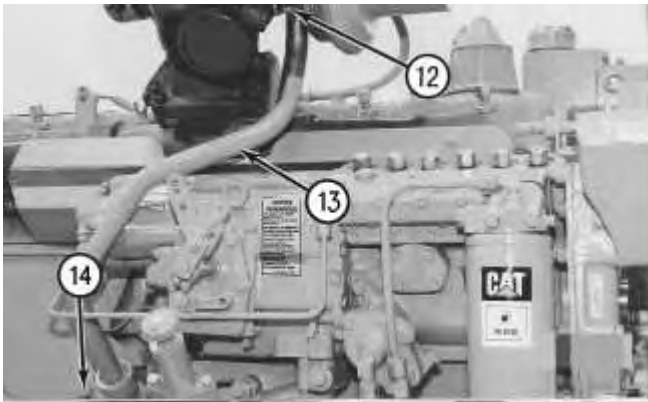


Illustration 6

g00452302

- Remove two bolts (12), the washers and the gasket. Remove two bolts (14) and the gasket. Remove tube assembly (13).

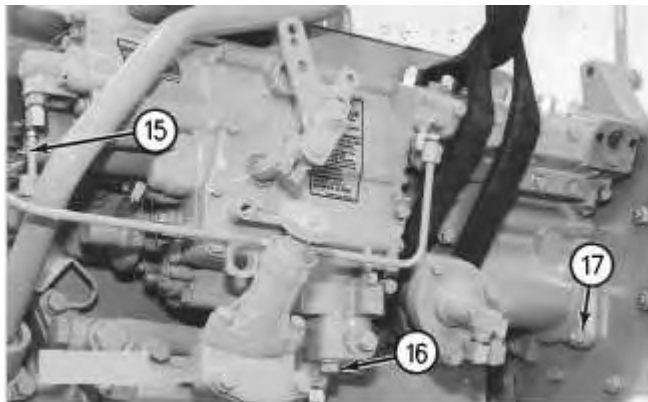


Illustration 7

g00452343

- Use a lifting sling and a hoist to secure the fuel injection pump housing and the governor.

Note: Remove the heat shield (not shown) if equipped.

- Disconnect solenoid ground (15). Remove three nuts (17). Remove two bolts (16) and the washers. Remove the fuel injection pump housing and the governor from the engine. To safely remove the fuel injection pump housing and the governor, use two technicians or a suitable lifting device. The weight of the 3304B fuel injection pump housing and governor is 24 kg (53 lb). The weight of the 3306B fuel injection pump housing and governor is 32 Kg (70 lb).

- Remove the O-ring seals from the fuel injection pump housing and the governor.

Previous Screen

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

**Disassembly and Assembly
3304B and 3306B Engines for Caterpillar Built Machines**

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i01139602

Fuel Injection Pump Housing - Disassemble

SMCS - 1253-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-1860	Retaining Ring Pliers	1

Start By:

- A. Disassemble the governor. Refer to Disassembly and Assembly, "Governor - Disassemble".
- B. Remove the fuel injection pumps. Refer to Disassembly and Assembly, "Fuel Injection Pump - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

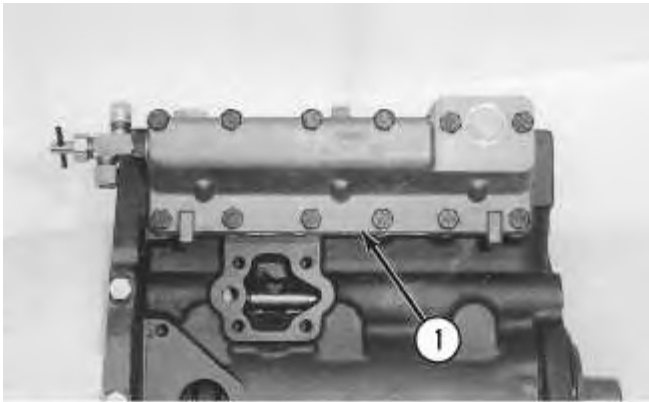


Illustration 1

g00456860

1. Remove cover (1) and the gasket.



Illustration 2

g00456923

2. Remove fuel rack (2) from the fuel injection pump housing.

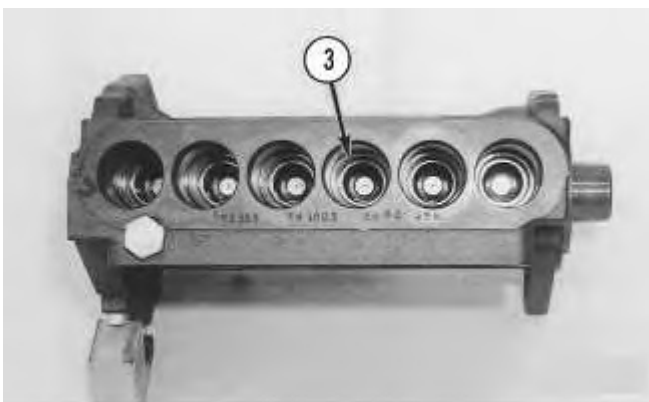


Illustration 3

g00456924

Note: If the original lifters are being reused in the fuel injection pump housing, place identification marks on the lifters in order to identify the locations.

3. Remove lifters (3) from the fuel injection pump housing.

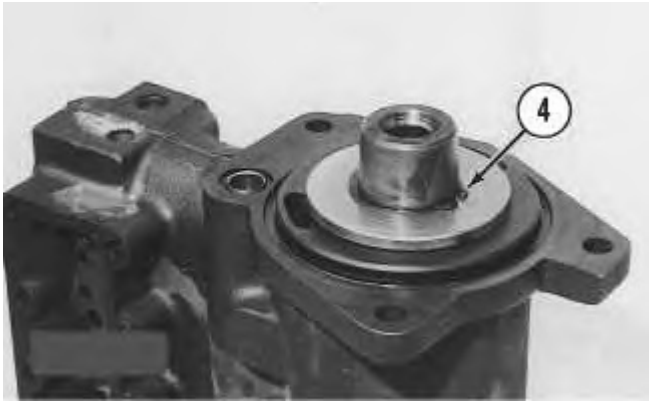


Illustration 4

g00456925

4. Position the fuel injection pump housing on wood blocks, as shown. Use Tool (A) in order to remove snap ring (4) .

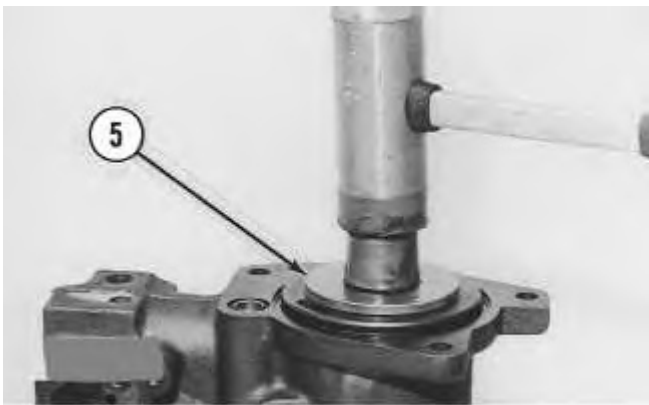


Illustration 5

g00456926

5. Use a soft hammer to push the camshaft toward the governor end of the fuel injection pump housing in order to loosen washer (5). Remove washer (5) .
-

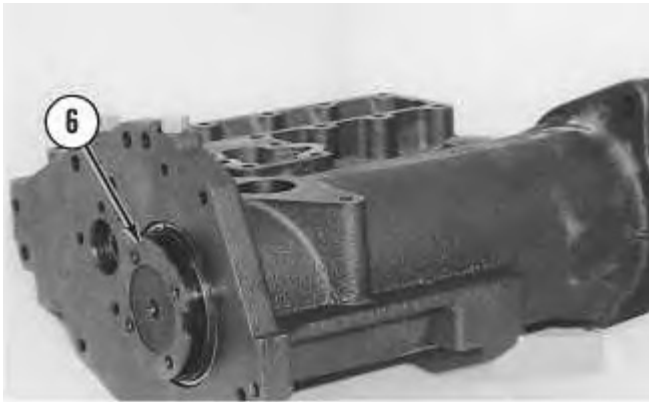


Illustration 6

g00456927

6. Remove camshaft (6) .

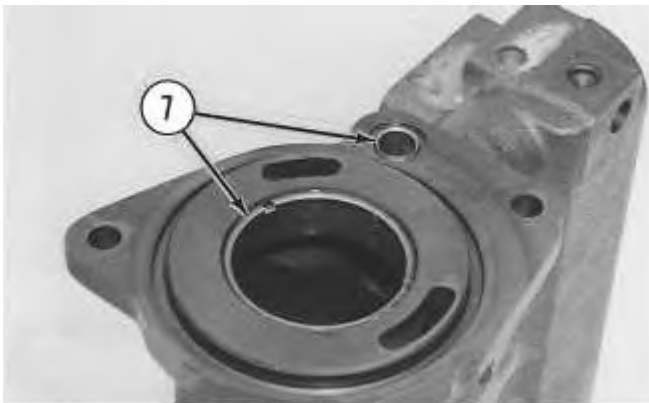


Illustration 7

g00456928

7. Remove bearings (7) from the drive end of the fuel injection pump housing.

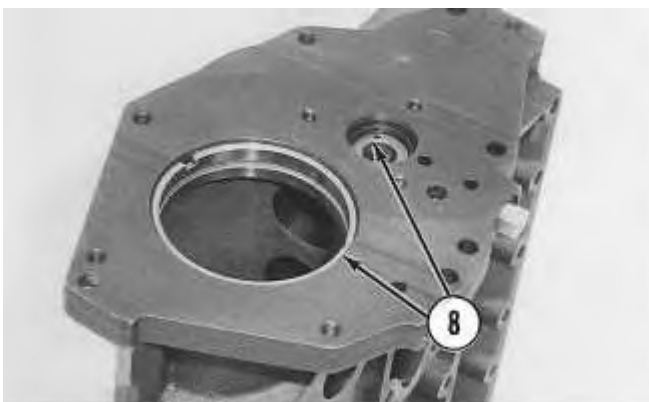


Illustration 8

g00456930

8. Remove bearings (8) from the governor end of the fuel injection pump housing.

[Previous Screen](#)

Product: WHEELED EXCAVATOR

Model: W330B WHEELED EXCAVATOR AME

Configuration: W330B MH Excavator AME00001-UP (MACHINE) POWERED BY 3306 Engine

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i01138035

Fuel Injection Pump Housing - Assemble

SMCS - 1253-016

Assembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-1860	Retaining Ring Pliers	1
B	1P-0510	Driver Group	1
C	6V-2016	Plate	1
	0S-1594	Bolt	2
	6V-4818	Driver	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Note: Put clean engine oil on all parts before assembly. Ensure that all of the oil passages are clear.

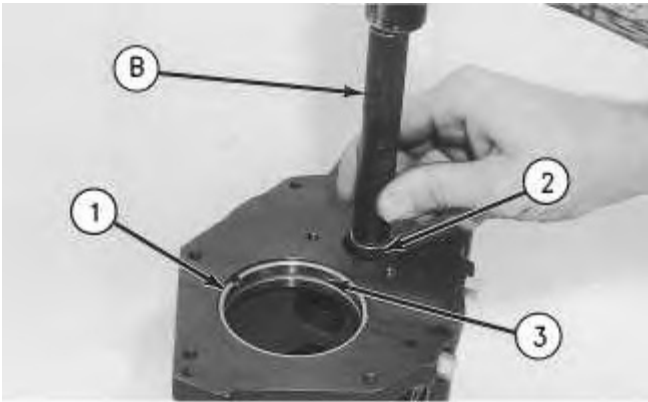


Illustration 1

g00457491

1. Use Tool (B) in order to install large bearing (1) in the governor end of the fuel injection pump housing. Bearing joint (3) should be facing toward the top of the fuel injection pump housing. Install the bearing so the bearing is 0.25 ± 0.20 mm ($.010 \pm .008$ inch) below the surface of the fuel injection pump housing.
2. Use Tool (B) in order to install small bearing (2) in the governor end of the fuel injection pump so that Tool (B) is 7.16 ± 0.13 mm ($.282 \pm .005$ inch) below the surface of the fuel injection pump housing.



Illustration 2

g00457492

3. Use Tool (B) in order to install large bearing (4) in the drive end of the fuel injection pump housing. The bearing joint should be facing toward the top of the fuel injection pump housing. Install the bearing so the bearing is 1.00 ± 0.25 mm ($.039 \pm .010$ inch) below the surface of the fuel injection pump housing.

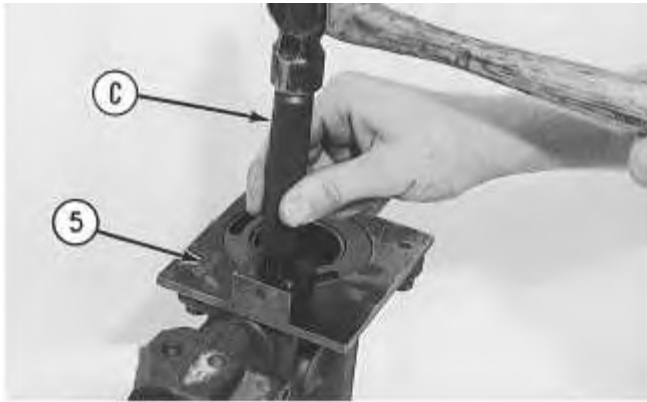


Illustration 3

g00457493

4. Install the plate of Tool (C) on the drive end of the fuel injection pump in order to install small bearing (5) for the rack. Use clean grease in order to hold the new driver for the rack bearing of Tool (C). Install the driver and the bearing in the plate. Ensure that the groove in the driver is aligned with the pin in the plate and use a hammer to push the bearing into position. The bearing will be installed to the correct depth when the shoulder of the driver is against the plate.
5. Remove Tool (C) from the fuel injection pump housing. The fuel rack bearing must be installed so that the fuel rack bearing is 0.25 ± 0.25 mm ($.010 \pm .010$ inch) below the surface of the housing.

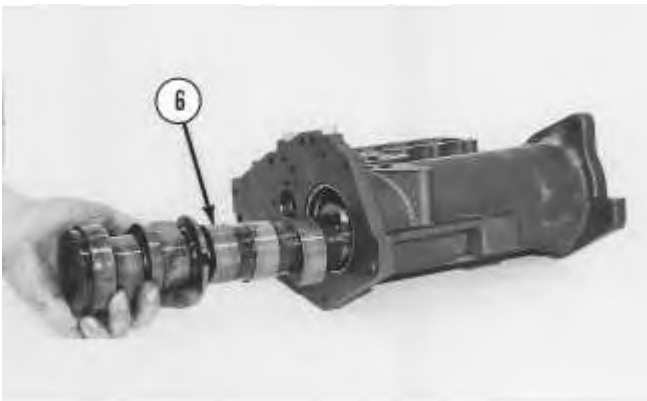


Illustration 4

g00457494

6. Install camshaft (6) .



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

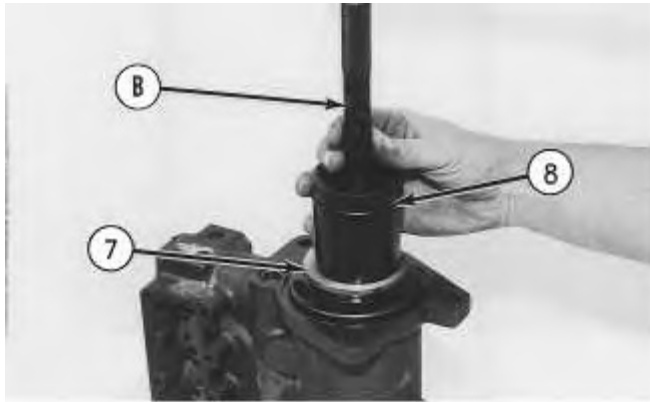


Illustration 5

g00458729

7. Put the fuel injection pump housing upright, as shown. Place a wood block under the camshaft.
8. Put washer (7) over the end of the camshaft. Use Tool (B) and spacer (8) in order to push the washer against the seat on the camshaft. Spacer (8) has an inside diameter of 38.1 mm (1.50 inch) and a length of 31.75 mm (1.250 inch). The camshaft must have an end play of 0.18 ± 0.08 mm ($.007 \pm .003$ inch) when the washer is pushed against the shoulder of the camshaft.

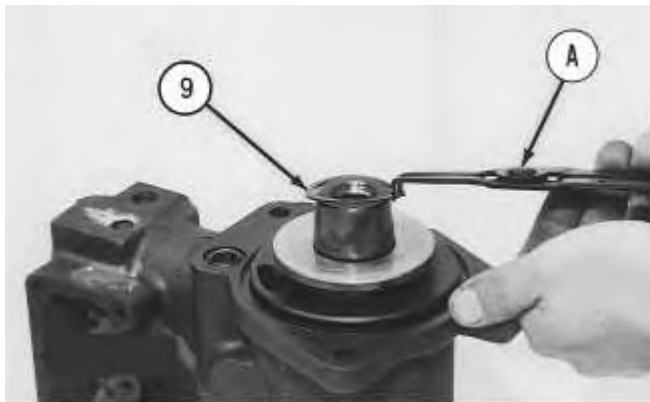


Illustration 6

g00457495

9. Use Tool (A) in order to install snap ring (9) .

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>