



Harley-Davidson, Inc.

SERVICE MANUAL

FL / FX models 1200 / 1340cc 4-Speed
1978 1/2 to 1984

OFFICIAL FACTORY MANUAL



**1978½ TO 1984
FL/FX
1200/1340cc
4-SPEED

SERVICE
MANUAL**

*The information in this manual applies to the
1978½ and later FL/FX 1200/1340cc 4-Speed
models manufactured after January 1, 1978*

©COPYRIGHT 1983
HARLEY-DAVIDSON, INC.
ALL RIGHTS RESERVED
PART NO. 99482—84

PRODUCT 1

CHASSIS 2

ENGINE 3

FUEL SYSTEM 4

**ELECTRIC
STARTER** 5

DRIVE 6

TRANSMISSION 7

ELECTRICAL 8



FOREWORD

This service and repair manual has been prepared with two purposes in mind. First, it will acquaint the reader with the construction of the Harley-Davidson product and assist him in performing basic maintenance and repair. Secondly, it will introduce to the professional Harley-Davidson mechanic the latest field-tested and factory-approved major repair methods. We sincerely believe that this manual will make your association with Harley-Davidson products more pleasant and profitable.

HOW TO USE YOUR SERVICE MANUAL

Your Service Manual is arranged for quick, easy reference. This manual is divided into numbered sections. Sections are then divided into subjects. Use this manual as follows:

1. Check the TABLE OF CONTENTS located in the front of each section to find subject desired.
2. Page number is listed across from subject. Page number consists of section number and page number.
3. Information is presented in a definite order as follows:

Adjustments
Removal
Disassembly
Cleaning, Inspection and Repair
Assembly
Installation

In figure legends, the number following a name of a part indicates the quantity necessary for one complete assembly.

NOTE

All information for servicing a part should be read before repair work is started to avoid needless disassembly.

PREPARATION FOR SERVICE

Proper preparation is very important for efficient service work. A clean work area at the start of each job will allow you to perform the repair as easily and quickly as possible, and reduce the incidence of misplaced tools and parts. A motorcycle that is excessively dirty should be cleaned before work starts. Cleaning will occasionally uncover trouble sources. Tools, instruments and parts needed for the job should be gathered before work is started. Interrupting a job to locate tools or parts is a needless delay. Special tools required for a job are listed at the end of Section 1.

WARNING

Gasoline is extremely flammable and highly explosive under certain conditions. Always stop engine and do not smoke or allow open flame or sparks when refueling or servicing the fuel system.

SERVICE BULLETINS

In addition to the information given in this Service Manual, Service Bulletins are issued to Harley-Davidson Dealers from time to time, which cover interim engineering changes and supplementary information. Service Bulletins should be consulted for complete information on the models covered by this manual.

USE GENUINE REPLACEMENT PARTS

WARNING

When replacement parts are required, use only genuine Harley-Davidson parts or parts with equivalent characteristics including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or passenger.

To ensure a satisfactory and lasting repair job, follow the manual instructions carefully and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON is more than three quarters of a century of designing, research, manufacturing, testing and inspecting experience.

This is your insurance that the parts you are using will fit right, operate properly and last longer. When you use genuine Harley-Davidson parts, you use the best.

PRODUCT REFERENCES

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be used in place of the one mentioned.

All tools mentioned in this SERVICE MANUAL with HD or J preceding the part number must be ordered through:

Kent-Moore Tool Division
29874 Little Mack
Roseville, Michigan 48066

Loctite Products

The Loctite products listed are designed to increase the reliability of fasteners and to aid in minor repairs.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

If you have any further questions, please call Loctite Corp. at 1-203-246-1223.

WARNING

Follow the directions listed on all Loctite products. Read all labels, warnings and cautions carefully before using.

Application	Product
Lock fender braces, master cylinder bolts, brake anchors, exhaust flanges and general body hardware.	Lock N' Seal® Adhesive
Locking crank pin and flywheel nuts	Retaining Compound RC/620
Secure upper and lower fork assemblies, shock absorber mounts, fittings, axle nuts, shift lever screws, cylinder head and crankcase studs, and handle bar clamps.	Stud N' Bearing Mount Adhesive
Lock adjustment screws and assembled parts. Secure foot rests and kick starters.	Wick N' Lock® Adhesive
Retain brake pedal bushings, main shaft sprockets, counter shafts, oil seals, drive train, linkage, clutch hub and sprocket assemblies.	Retaining Compound No. 601
Bond brake pedal and kick starter pads. Secure loose hand grips. Repair loose windshield moldings, and other rubber, vinyl and plastic parts.	SuperBonder® Adhesive
Seal threaded fuel line fittings, hydraulic brake line fittings and engine plugs.	Pipe Sealant with Teflon*
Make emergency gaskets on-the-spot. Seal crankcase cover, cylinder blocks to crankcase, fuel and oil pumps, and rocker arm covers.	Gasket Eliminator® Sealant
Prevent galling, seizing and corrosion on oil drain plugs, spark plugs, front fork and shock assemblies, swing arm, pivot shaft and axles.	Anti-Seize Lubricant
Dissolve grease, dirt and oil from parts quickly and safely. Prepare mating surfaces for Loctite products.	Cleaning Solvent

* Reg. TM DuPont Corp.

® Reg. TM Loctite Corp.

CONTENTS

All photographs and illustrations may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Harley-Davidson Motor Co., Inc. reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

WARNINGS AND CAUTIONS

Statements in this manual preceded by the words **WARNING** or **CAUTION** and printed in bold face are very important.

WARNING

Means there is the possibility of personal injury to yourself or others.

CAUTION

Means there is the possibility of damage to the vehicle.

We recommend you take special notice of these items.

WARNING

Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this Service Manual are effective methods for performing service operations. Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended.

It is important to note that some warnings against the use of specific service methods which could damage the motorcycle or render it unsafe are stated in this Service Manual. However, please remember that these warnings are not all inclusive. Since Harley-Davidson could not possibly know, evaluate and advise the service trade of all possible ways in which service might be done or of the possible hazardous consequences of each way, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized by the service methods selected.

TABLE OF CONTENTS

SECTION 1 - PRODUCT

	Page No.
Service	1-1
Servicing a New Motorcycle	1-1
Check At First 500 Miles	1-1
Safe Operating Maintenance	1-1
Regular Service Intervals	1-2
Storage	1-9
Removal From Storage	1-9
Fluid Requirements	1-9
Metric Conversion	1-11
Torque Requirements	1-12

Troubleshooting	1-13
Engine	1-13
Lubrication System	1-14
Electrical System	1-14
Carburetor	1-14
Transmission	1-14
Clutch	1-14
Brake	1-15
Handling	1-15
Tools	1-17

SECTION 2 - CHASSIS

Specifications	2-1
Dimensions	2-1
Vehicle Weight	2-1
Capacities	2-1
Front Fork	2-1
Adjustments	2-1
Torques	2-1
Brake Disc Size	2-1
Tire Data	2-1
Vehicle Identification Number — 1978 1/2-1980	2-3
Vehicle Identification Number — 1981 and Later	2-3

Wheels	2-5
Front Wheel — FL Models	2-5
Front Wheel — FX Models	2-8
Front Wheel — 1984 FXST/FXWG/FXE Models	2-11
Rear Wheel — All FL/FX Models	2-13
Lacing Wheels — 16 Inch	2-17
Lacing Wheels — 19 Inch	2-18
Lacing Wheels — 21 Inch	2-20
Truing Laced Wheel	2-21
Checking Cast Rim Runout	2-22
Tires	2-22

Brakes	2-29
General	2-29
Adjustments	2-29

Front Brake Master Cylinder — 1981 and Earlier	2-30
Front Brake Master Cylinder — 1982 and Later	2-31
Rear Brake Master Cylinder — 1978 1/2 - Early 1979	2-34
Rear Brake Master Cylinder Late 1979-1983 FL/FXE and Late 1979-1982 FX	2-35
Rear Master Cylinder 1983 Models (Except FL/FXE)	2-36
Front Caliper — FL	2-36
Front Caliper — FX	2-40
Front Caliper — 1984 - FX	2-42
Rear Caliper 1978 1/2 - 1980 FL/FX Models	2-45
Rear Caliper 1981-1984 FL Models	2-46
1981-1982 FX Models, 1983 FXE	2-47
Rear Brake Caliper — 1983 FX/FLHS (Except FXE)	2-49
Brake Discs	2-51
Bleeding The Hydraulic Brake System	2-51
Stoplight Switch	2-52

Front Forks — FL Models	2-53
General	2-53
Adjustments	2-53
Changing The Fork Oil	2-53
Front Fork	2-54
Non-Adjustable Fork Stem And Bracket	2-55
Adjustable Fork Stem And Bracket	2-57

Front Forks — FX Models	2-59
General	2-59
Changing The Fork Oil	2-59
Front Forks — FX Models (Except FXWG & FXST)	2-59
Fork Stem And Bracket Assembly FX Models (Except FXWG/FXST and FXDG)	2-62
Front Fork — FXWG and FXST	2-64
Fork Stem And Bracket Assembly — FXWG/FXST	2-67

Frame And Rear Swing Arm	2-69
Rear Swing Arm — FL/FX (Except FXST)	2-69
Rear Swing Arm — FXST	2-69

Rear Shock Absorber	2-73
Adjustment	2-73
FXST Swing Arm Shock Dampening	2-73
Removal	2-73
Disassembly FL/FX (Except FXST)	2-73
Cleaning, Inspection And Repair — FL/FX (Except FXST)	2-73
Assembly — FL/FX (Except FXST)	2-74
Installation — FL/FX (Except FXST)	2-74
Removal — FXST	2-74
Disassembly — FXST	2-74
Installation — FXST	2-74

Handlebar Controls And Instruments	2-77
Throttle Control — 1978½-1980	2-77
Throttle Control — 1981 and Later	2-78
Clutch Hand Control	2-84
Speedometer/Tachometer	2-85
Handlebar Switches	2-86

Seats	2-87
Solo Saddle	2-87
Comfort Flex Seat	2-88
Frame Mounted Seat	2-94

Fiberglass And Fenders	2-95
Fairing And Windshield	
FL Models	2-95
Saddlebags — FL Models	2-96
Tour-Pak — FL Models (Early)	2-96
Tour-Pak — FL Models (Late)	2-96
Front Fender Replacement	
FL Models	2-97
Front Fender Replacement	
FX Models (1983 and Earlier)	2-97
Front Fender Replacement — FX 1984 Models	2-98
Rear Fender Replacement	
FL Models	2-98
Rear Fender Replacement	
FX Models	2-100

SECTION 3 - ENGINE FL/FX (Except FXST)

Specifications	3-1
-----------------------------	-----

General Information	3-5
Description	3-5
Gasoline	3-5
Lubrication	3-5
Repair and Diagnostic Procedure	3-10
Stripping Motorcycle For Engine Repair	3-12

Cylinder Head	3-15
Removing	3-15
Disassembling	3-15
Cleaning and Inspection	3-15
Repairing Rocker Arms and Bushings	3-17
Reconditioning or Replacing Valve Seats	3-18
Grinding Valve Faces and Seats	3-19
Lapping Valve Faces and Seats	3-19
Assembling Cylinder Head	3-20
Installing and Adjusting Push Rods	3-20
Checking Push Rod Adjustment	3-21

Cylinder and Piston	3-23
Disassembling Cylinder and Piston	3-23
Cleaning and Inspection	3-23
Refinishing Cylinders	3-24
Connecting Rod Bushing	3-26
Twisted Connecting Rods	3-27
Assembling Cylinder and Piston	3-27

Gearcase	3-29
Oil Pump	3-29
Valve Tappets and Guides	3-30
Gearcase Cover and Timing Gears	3-33

Crankcase	3-39
General	3-39
Flywheel End Play Check	3-39
Disassembling Crankcase	3-39
Flywheels	3-41
Assembling Crankcase	3-48

FXST

Specifications	V3-1
Description	V3-3
Gasoline	V3-3
Lubrication	V3-3
Diagnostic and Repair Procedures	V3-8
Stripping Motorcycle for Engine Repair	V3-10

Cylinder Head	V3-13
Removal	V3-13
Disassembly	V3-15
Cleaning and Inspection	V3-16
Repairing Rocker Arms and Bushings	V3-16
Replacing Valve Guides	V3-17
Grinding Valve Faces and Seats	V3-18
Replacing Valve Seats	V3-19
Lapping Valve Faces and Seats	V3-19
Assembling Cylinder Head	V3-19
Installing Cylinder Head	V3-20
Installing and Checking Push Rod Length	V3-20

Cylinder and Piston	V3-23
Removal Cylinder and Piston	V3-23
Cleaning and Inspection	V3-23
Refinishing Cylinder	V3-24
Straightening Connecting Rods	V3-26
Assembling Cylinder and Piston	V3-26

Gearcase	V3-27
Oil Pump	V3-27
Valve Tappets and Guides	V3-28
Gearcase Cover and Timing Gears	V3-29

Crankcase	V3-35
General	V3-35
Flywheel End Play Check	V3-35
Disassembly Crankcase	V3-35
Installing Cylinder Studs	V3-36
Flywheels	V3-37
Assembling Crankcase	V3-44

SECTION 4 - FUEL SYSTEM

Specifications	4-1
Jet Sizes	4-1
Fuel Tank Capacity	4-1
Torques	4-1

Carburetor	4-3
General	4-3
Operation	4-4
Adjustments	4-7
Troubleshooting	4-9
Removal	4-11
Disassembly	4-11
Assembly	4-11
Installation	4-12

Air Cleaner	4-15
General	4-15
Servicing Air Cleaner — FL/FX (Except FXST)	4-15
Removal	4-16
Installation	4-16

Servicing Air Cleaner — FXST	4-16
Removal	4-17
Installation	4-17

Fuel Supply Valve	4-19
General	4-19
Removal	4-19
Cleaning, Inspection and Repair	4-19
Installation	4-19

Fuel Tank	4-21
General	4-21
Removal	4-21
Cleaning, Inspection and Repair	4-22
Installation	4-22

SECTION 5 - ELECTRIC STARTER

General Information	5-1
Specifications	5-1
Description	5-1
Troubleshooting	5-1
Starter Relay	5-1

Starter Motor - 1978½ to 1982 FL, FLH, FLH-80 And 1979 to 1981 Classic	5-3
Starter Draw Test	5-3
Removal	5-3
Disassembly	5-3
Cleaning, Inspection and Repair	5-3
Assembly	5-5
Installation	5-6

Starter Motor - 1978½ to 1984 FX, 1982 Classics And 1983-1984 FL Models	5-7
Starter Draw Test	5-7
Removal	5-7
Disassembly	5-7
Cleaning, Inspection and Repair	5-7
Assembly	5-9
Installation	5-10

Solenoid	5-11
General	5-11
Testing the Solenoid	5-11
Removal	5-11
Disassembly	5-12
Cleaning, Inspection and Repair	5-12
Assembly	5-12
Installation	5-12

Starter Shaft And Gear Housing (1984 and Earlier All Models Except FXB/FXSB/FXDG)	5-15
Removal	5-15
Cleaning, Inspection and Repair	5-15
Installation	5-15

Starter Shaft And Gear Housing (FXB/FXSB/FXDG) 1982 FLHC, 1983-1984 FLH Models And 1984 FXWG	5-19
Removal	5-19
Cleaning, Inspection and Repair	5-19
Installation	5-19

SECTION 6 - DRIVE

Specifications	6-1
Chains	6-1
Belts	6-1
Clutch	6-1
Lubricants	6-1
Sprockets	6-1
Primary Case	6-1
Torques	6-1

Chains And Sprockets	6-3
Primary Chain	6-3
General	6-3
Adjustment	6-3
Disassembly	6-3
Cleaning, Inspection and Repair	6-4
Sprocket alignment dry clutch	6-4
Sprocket alignment wet clutch	6-4
Assembly	6-6

Secondary Chain And Sprockets	6-6
Adjustment	6-6
Lubrication	6-7
Removing and Installing	6-8

Transmission Sprocket	6-8
Removal	6-8
Cleaning, Inspection and Repair	6-8
Installation	6-8

Belts And Sprockets	6-11
Primary Belt	6-11
General	6-11
Adjustment (1980 and Early 1981)	6-11
Adjustment (Late 1980 and Later)	6-11
Disassembly and Assembly	6-11
Sprocket Alignment	6-12

Secondary Drive Belt and Sprocket	6-14
Adjustment and Alignment	6-14
Removal and Installation	6-15

Transmission Sprocket	6-15
Removal	6-15
Cleaning, Inspection and Repair	6-15
Installation	6-15

Dry Clutch	6-17
General	6-17
Adjustments	6-17
Disassembly	6-17
Cleaning, Inspection and Repair	6-18
Assembly	6-20

Wet Clutch	6-23
General	6-23
Adjustments	6-23
Disassembly	6-25
Cleaning, Inspection and Repair	6-25
Assembly	6-26

Primary Chain/Belt Case	6-29
General	6-29
Disassembly	6-29
Cleaning, Inspection and Repair	6-29
Assembly	6-29

SECTION 7 - ENGINE

Specifications	7-1
Mainshaft Main Drive Gear	7-1
Mainshaft	7-1
Countershaft	7-1
Shifter Cam (1978 1/2 - Early 1979)	7-1
Torques	7-1
Lubricants	7-1
Service Wear Limits	7-1

General Information	7-3
Description	7-3
Adjustments	7-3

Shifter Assembly	7-5
Shifter Cover - Drum Shifter 1978 1/2 - Early 1979	7-5
Shifter Cover - Plate Shifter Later 1979 And Later	7-9

Shifter Forks	7-13
Adjustment	7-13
Disassembly	7-14
Cleaning, Inspection and Repair	7-15
Assembly	7-15

Transmission Case	7-17
Removal	7-17
Cleaning, Inspection and Repair	7-18
Installation	7-18
Replacing the Main Drive Gear Bearing Spacer Oil Seal	7-18
Side Cover - Electric Start	7-19
Side Cover - Kick Start	7-20
Starter Clutch - Kick Start Models Only	7-21
Countershaft	7-23
Mainshaft and Main Drive Gear	7-25

SECTION 8 - ELECTRICAL

Specifications	8-1
-----------------------------	-----

Ignition System 1979 And Earlier	8-3
Ignition Timer	8-3
Troubleshooting	8-4
Adjusting Sensor Air Gap	8-4
Checking Advance Timing With Strobe Timing Light	8-5
Setting Retarded Timing With Circuit Tester	8-5
Disassembling And Assembling	8-7

Ignition System 1980 And Later	8-9
Description	8-9
Troubleshooting	8-10
Checking Advance Timining With Inductive Timing Light	8-11
Vacuum Operated FXST Electric Switch (V.O.E.S.)	8-11
Setting Retarded Timing	8-12
Removing Ignition Components	8-12
Inspecting And Replacing Parts	8-13
Installing Ignition Components	8-14

Spark Plugs	8-15
General	8-15
Inspecting Spark Plugs	8-15
Setting Spark Plugs	8-15
Installing Spark Plugs	8-15

Ignition Coil	8-17
Description	8-17
Troubleshooting	8-17
Replacing Spark Plug Cables	8-17

Ignition-Light Switch	8-19
General	8-19
Disassembling Ignition-Light Switch FL/FLHS/FXWG	8-19
Cleaning, Inspection And Repair	8-20
Assembling Ignition-Light Switch	8-20

Charging System	8-21
General	8-21
Troubleshooting	8-21
Disassembling Alternator	8-23
Cleaning, Inspection And Repair	8-23
Assembling Alternator	8-23
Replacing The Regulator	8-23

Battery	8-25
General	8-25
Battery Care	8-25
Testing The Battery	8-25
Charging The Battery	8-26

Lights	8-27
Headlamp (1978 $\frac{1}{2}$ -1980 FL)	8-27
Headlamp (1981 and Later FL)	8-27
Headlamp - FX Models	8-28
Headlamp Adjustment	8-28
Passing Lamps	8-29
Turn Signals	8-29

Horn	8-31
-------------------	------

Wiring Diagrams

SUBJECT**PAGE NO.**

1. Service	1-1
2. Troubleshooting	1-13
3. Tools	1-17

PRODUCT

SERVICE

SERVICING A NEW MOTORCYCLE

WARNING

For the rider's personal welfare, all the listed service and maintenance recommendations should be followed, because they may affect the safe operation of the motorcycle.

Service Operations to be performed before delivery to customer are specified in the Motorcycle Set-Up Manual, Part No. 99946-84. Also, the important instructions included with each new motorcycle.

The performance of new motorcycle initial service is required to keep warranty in force, and to ensure proper emissions systems operation.

After a new motorcycle has been driven its first 500 miles and again at approximately 2500 miles, a Harley-Davidson dealer should perform the following initial service operations.

CHECK AT FIRST 500 MILES

1. Change engine oil.
2. Replace oil filter.
3. Clean tappet oil screen.
4. Clean primary chain housing magnetic drain plug.*
5. Inspect air cleaner and service as required.
6. Check and adjust chains/belts.
7. Check battery electrolyte level. Check and clean connections.
8. Check rear brake pedal adjustment and free play.
9. Inspect brake pad linings and discs for wear.
10. Check brake fluid level and condition.
11. Check clutch adjustment.
12. Inspect fuel valve, lines and fittings for leaks.
13. Inspect oil lines and brake system for leaks.
14. Oil the following: front brake handlever, throttle control cables, choke control cable, clutch control cable and handlever, seat suspension bushings*, seat post roller and bolt.*

15. Grease the following: foot shift lever bearings*, seat bar bearings*, seat post*, rear fork pivot bearings.
16. Check tightness of all fasteners.
17. Check tire pressure and inspect tread.
18. Check engine low and fast idle speed adjustment.
19. Check operation of throttle and choke controls.
20. Check operation of all electrical equipment and switches.
21. Check wheel spoke tightness.*
22. Lubricate rear chain if required.*
23. Check primary case vacuum.*
24. Change transmission oil and clean magnetic drain plug.
25. Clean fuel tank filter screen.*
26. Check front and rear fork bearing adjustment.
27. Road test.

* If applicable to equipment.

SAFE OPERATING MAINTENANCE

Good maintenance means a safe machine. A careful check of certain equipment must be made after periods of storage and frequently between the regular service intervals to determine if additional maintenance is necessary.

The following items should be checked:

1. Tires for correct pressure, abrasions or cuts.
2. Chain/belt for proper tension and lubrication.
3. Brakes, steering and throttle for responsiveness.
4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Also, check brake pads and discs for wear.
5. Cables for fraying or crimping and free operation.
6. Engine oil and transmission fluid levels.
7. Wheel spoke tightness, if applicable.
8. Headlight, taillight and directional light operation.

REGULAR SERVICE INTERVALS

IMPORTANT

The following chart outlines recommended Maintenance and Lubrication intervals after performance of service on a new motorcycle and the initial break-in period.

To prevent over-greasing, use hand grease gun on all grease fittings.

Regular Maintenance intervals — FL/FX

SERVICE TO BE PERFORMED	MILEAGE INTERVALS						
	Every 300	First 500	Every 2500	Every 5000	Every 7500	Every 10,000	Every Spring or Fall
Change engine oil		X	X	X	X	X	X
Replace oil filter		X	X	X	X	X	X
Check tappet oil screen		X	X	X	X	X	
Clean primary housing magnetic drain plug*		X	X	X	X	X	
Inspect air cleaner and service as required		X	X	X	X	X	
Check and adjust chains/belts		X	X	X	X	X	
Check battery electrolyte level; check and clean connections		X	X	X	X	X	X
Check rear brake pedal adjustment and free play		X	X	X	X	X	
Check brake pad linings and discs for wear		X	X	X	X	X	
Check brake fluid level and condition		X	X	X	X	X	X
Check clutch adjustment		X	X	X	X	X	
Inspect fuel valve, lines and fittings for leaks		X	X	X	X	X	
Inspect oil lines and brake system for leaks		X	X	X	X	X	
Oil the following: front brake handlever, throttle control cables, choke control cable, clutch control cable and handlever, seat suspension bushings*, seat post roller and bolt*		X	X	X	X	X	
Check tightness of all fasteners. (Except head bolts)		X	X	X	X	X	
Check tire pressure and inspect tread		X	X	X	X	X	X
Check engine low and fast idle speed adjustment		X	X	X	X	X	
Check operation of throttle and choke controls		X	X	X	X	X	
Check operation of all electrical equipment and switches		X	X	X	X	X	
Check wheel spoke tightness*		X	X	X	X	X	
Lubricate rear chain if required*	X	X	X	X	X	X	
Check ignition timing and vacuum hose			X	X	X	X	
Check condition of spark plugs and replace if necessary			X	X			
Replace spark plugs				X		X	
Check transmission oil level			X		X		
Change transmission oil		X		X		X	X
Check primary case vacuum*		X					
Clean fuel tank filter screen		X	X	X	X	X	
Check front and rear fork bearing adjustment		X		X		X	
Check condition of rear shock absorber rubber bushing				X		X	
Lubricate the following: foot shift lever bearing*, seat bar bearings*, seat post*, rear fork pivot bearings		X	X	X	X	X	
Lubricate throttle control grip sleeve and speedometer cable				X		X	
Change front fork oil				X		X	X
Repack wheel bearings with grease						X	X
Lubricate the belt drive compensating sprocket rubber dampers with Harley-Davidson POLY-OIL® *						X	
Road test		X	X	X	X	X	
Date Completed:							

*If applicable to equipment




Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>


If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

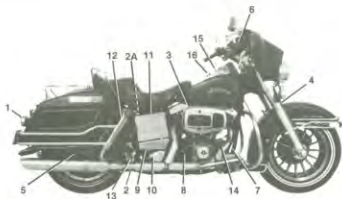


- | | | |
|---------------------------------|----------------------------------|-----------------------------------|
| 1. Tail/stop lamp | 6. Brake master cylinder | 12. Hydraulic shock absorber |
| 2. Oil filter | 7. Engine serial number | 13. Adjustable passenger footrest |
| 2A. Oil filter — 1982 & earlier | 8. Oil pump and pressure switch | 14. Brake pedal |
| 3. Carburetor air cleaner | 9. Starter motor and relay | 15. Choke knob |
| 4. Hydraulic fork | 10. Transmission oil filler plug | 16. Ignition-light switch |
| 5. Rear chain/belt adjuster | 11. Battery | |

Figure 1-1. FLH Right Side View

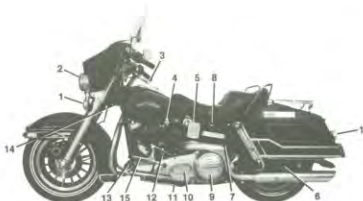


- | | | |
|--------------------------|------------------------------------|---------------------------------|
| 1. Turn signal lamps | 6. Rear sprocket and chain/belt | 11. Jiffy stand |
| 2. Headlamp | 7. Oil tank drain plug | 12. Timing inspection hole plug |
| 3. Carburetor choke knob | 8. Oil tank fill plug and dipstick | 13. Rectifier, regulator module |
| 4. Gas tank valve | 9. Clutch inspection cover | 14. Steering lock |
| 5. Ignition coil | 10. Front chain inspection cover | 15. Shifter |

Figure 1-2. FLH Left Side View

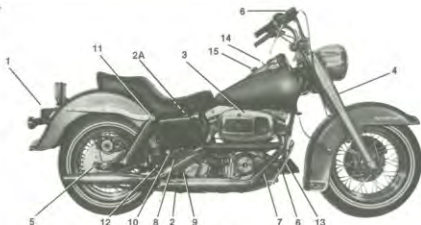

- | | | |
|---------------------------------|---------------------------------|---------------------------|
| 1. Tail/stop lamp | 6. Brake master cylinder | 12. Passenger footrest |
| 2. Oil filter | 7. Engine serial number | 13. Brake pedal |
| 2A. Oil filter — 1982 & earlier | 8. Starter motor and relay | 14. Choke knob |
| 3. Carburetor air cleaner | 9. Transmission oil filler plug | 15. Ignition-light switch |
| 4. Hydraulic fork | 10. Battery | |
| 5. Rear belt adjuster | 11. Hydraulic shock absorber | |

Figure 1-3. FLHS Right Side View

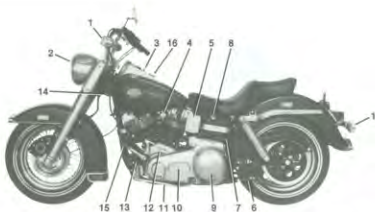

- | | | |
|--------------------------|------------------------------------|---------------------------------|
| 1. Turn signal lamps | 8. Oil tank fill plug and dipstick | 12. Timing inspection hole plug |
| 2. Headlamp | 9. Clutch inspection cover | 13. Rectifier/regulator module |
| 3. Carburetor choke knob | 10. Front chain inspection cover | 14. Steering lock |
| 4. Gas tank valve | 11. Jiffy stand | 15. Shifter |
| 5. Ignition coil | | 16. Ignition/light switch |
| 6. Rear belt | | |
| 7. Oil tank drain plug | | |

Figure 1-4. FLHS Left Side View

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>