
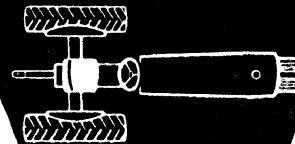


# SERVICE MANUAL

## CASE<sup>®</sup> WHEEL TRACTORS

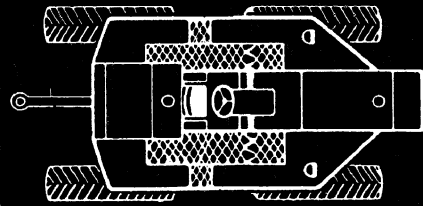

# 1200 TRACTION KING Table of Contents

## I-SPECIFICATIONS

Section	Form No.
C-Specifications . . . . .	9-75232
F-Electrical . . . . .	9-75201
Wiring Diagrams . . . . .	9-76561

## II-ENGINE

K-Cylinder Head (Diesel). . . . .	9-75102
3K-Turbocharger . . . . .	9-75241
M-Assemblies Contained in Engine Block . . . . .	9-75221

## III-FUEL SYSTEM

I-Injectors, Pump, Powrcel . . . . .	9-75421
--------------------------------------	---------

## IV-HYDRAULIC SYSTEM

A-Portable Cylinders, Couplings. . . . .	9-75321
D-Three-Point Hitch. . . . .	9-75971
DD-Hydraulic Valve . . . . .	9-76511
J-Hydraulic Pump . . . . .	9-75171

## V-STEERING

O-Steering System . . . . .	9-75193
<i>P- powersteering pump &amp; Reservoir</i> . . . . .	9-75181
Steering Pump - Refer to Group VI, Section S Transmission . . . . .	9-75163

## VI-TRANSMISSION

S-Transmission . . . . .	9-75163
SS-Traction Clutch . . . . .	9-75251
3S-Power Take-Off . . . . .	9-75262

## VII-BRAKES

W-"H" Series Brakes . . . . .	9-75151
3W-Hydrovac Brakes . . . . .	9-75121

**OVER**

**1200 TRACTION KING (Continued)  
Table of Contents**

**VIII-PLANETS, AXLES, AND DIFF.**

<b>Section</b>	<b>Form No.</b>
U-Planetaries and Axles . . . . .	9-75141
U-Supp.#1. - Planetaries and Axles . . . . .	9-75141
T-Differentials and Drive Shafts . . . . .	9-75131

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# **WIRING DIAGRAMS**




**Serial Number 9800221 and After**



**Prior to Serial Number 9800221**


# WIRING DIAGRAM SERIAL NUMBER 9800221 AND AFTER

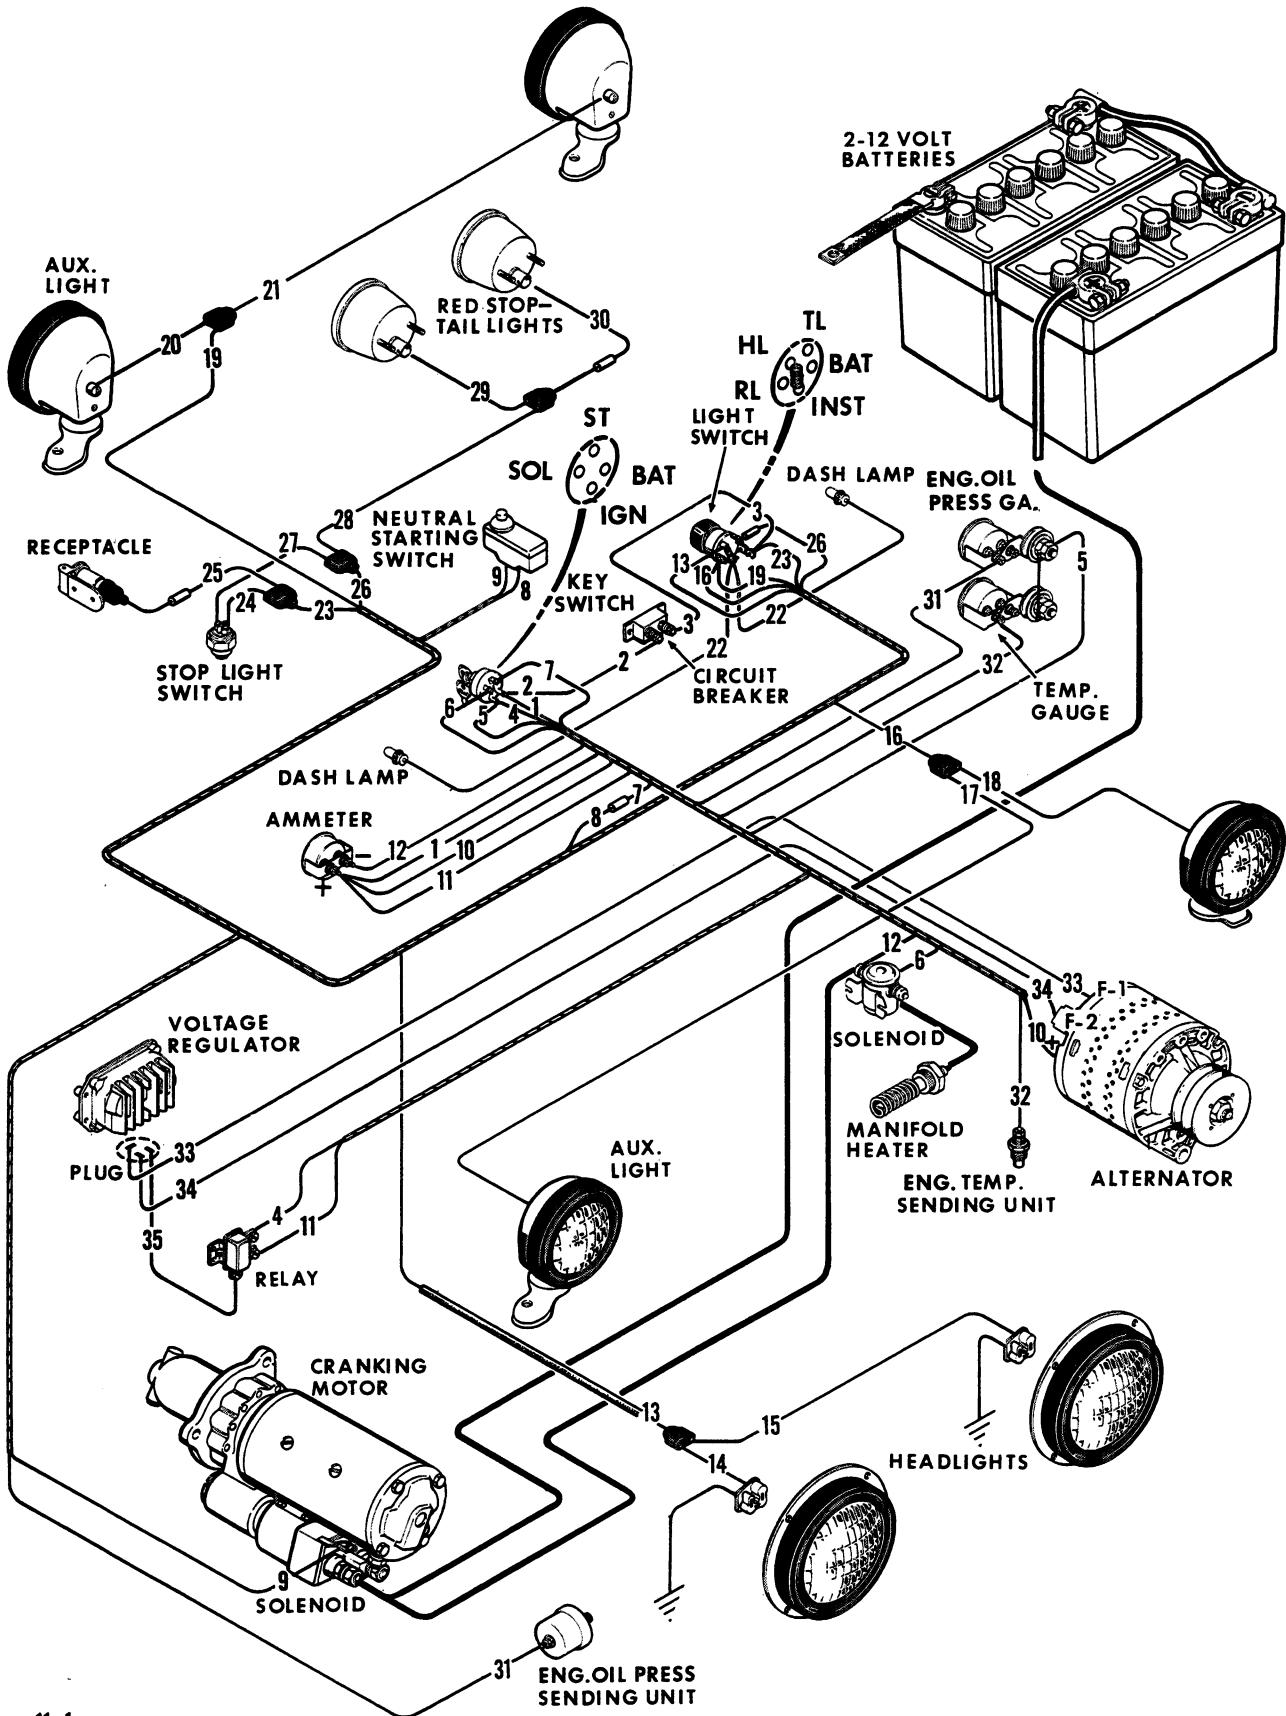

## WIRING CODE

From	To	Color
1. Key Switch "Bat"	Ammeter "+"	Orange
2. Key Switch "Bat"	Circuit Breaker "B"	Black
3. Circuit Breaker "Aux."	Light Switch "Bat"	Black
4. Key Switch "IGN"	Field Relay	Purple
5. Key Switch "IGN"	Oil Pres. Gauge Resistor	Purple
6. Key Switch "SOL"	Heater Solenoid	Yellow W/Black
7. Key Switch "ST"	Connector	White
8. Connector	Neutral Start Switch	White
9. Neutral Start Switch	Cranking Motor Solenoid	White
10. Ammeter "+"	Alternator "+"	Orange
11. Ammeter "+"	Field Relay	Orange
12. Ammeter "-"	Heater Solenoid	Red
13. Light Switch "HL"	Front Light Conn.	Pink
14. Front Light Conn.	R.H. Front Light	Black
15. Front Light Conn.	L.H. Front Light	Black
16. Light Switch "RL"	Front Aux. Light Conn.	Dark Blue
17. Front Aux. Light Conn.	R.H. Front Aux. Light	White
18. Front Aux. Light Conn.	L.H. Front Aux. Light	White
19. Light Switch "RL"	Rear Aux. Light Conn.	Dark Blue
20. Rear Aux. Light Conn.	R.H. Rear Aux. Light	White
21. Rear Aux. Light Conn.	L.H. Rear Aux. Light	Black
22. Light Switch "INST"	Panel Lights	Black
23. Light Switch "B"	Rec. & Stop Light Switch Conn.	Red
24. Rec. & Stop Light Switch Conn.	Stop Light Switch	Red
25. Rec. & Stop Light Switch Conn.	Receptacle	Red
26. Light Switch "T" Resistor	Tail Light Conn.	Yellow
27. Tail Light Conn.	Stop Light Switch	Red
28. Tail Light Conn.	Tail Light Conn.	Yellow
29. Tail Light Conn.	R.H. Tail Light	Black
30. Tail Light Conn.	L.H. Tail Light	Yellow
31. Eng. Oil Press. Gauge	Eng. Oil Press. Sending Unit	Brown
32. Coolant Temp. Gauge	Coolant Temp. Sending Unit	Blue
33. Regulator Plug	Alternator F-1	Blue
34. Regulator Plug	Alternator F-2	Black
35. Regulator Plug	Field Relay	Red

# WIRING DIAGRAM PRIOR TO SERIAL NUMBER 9800221

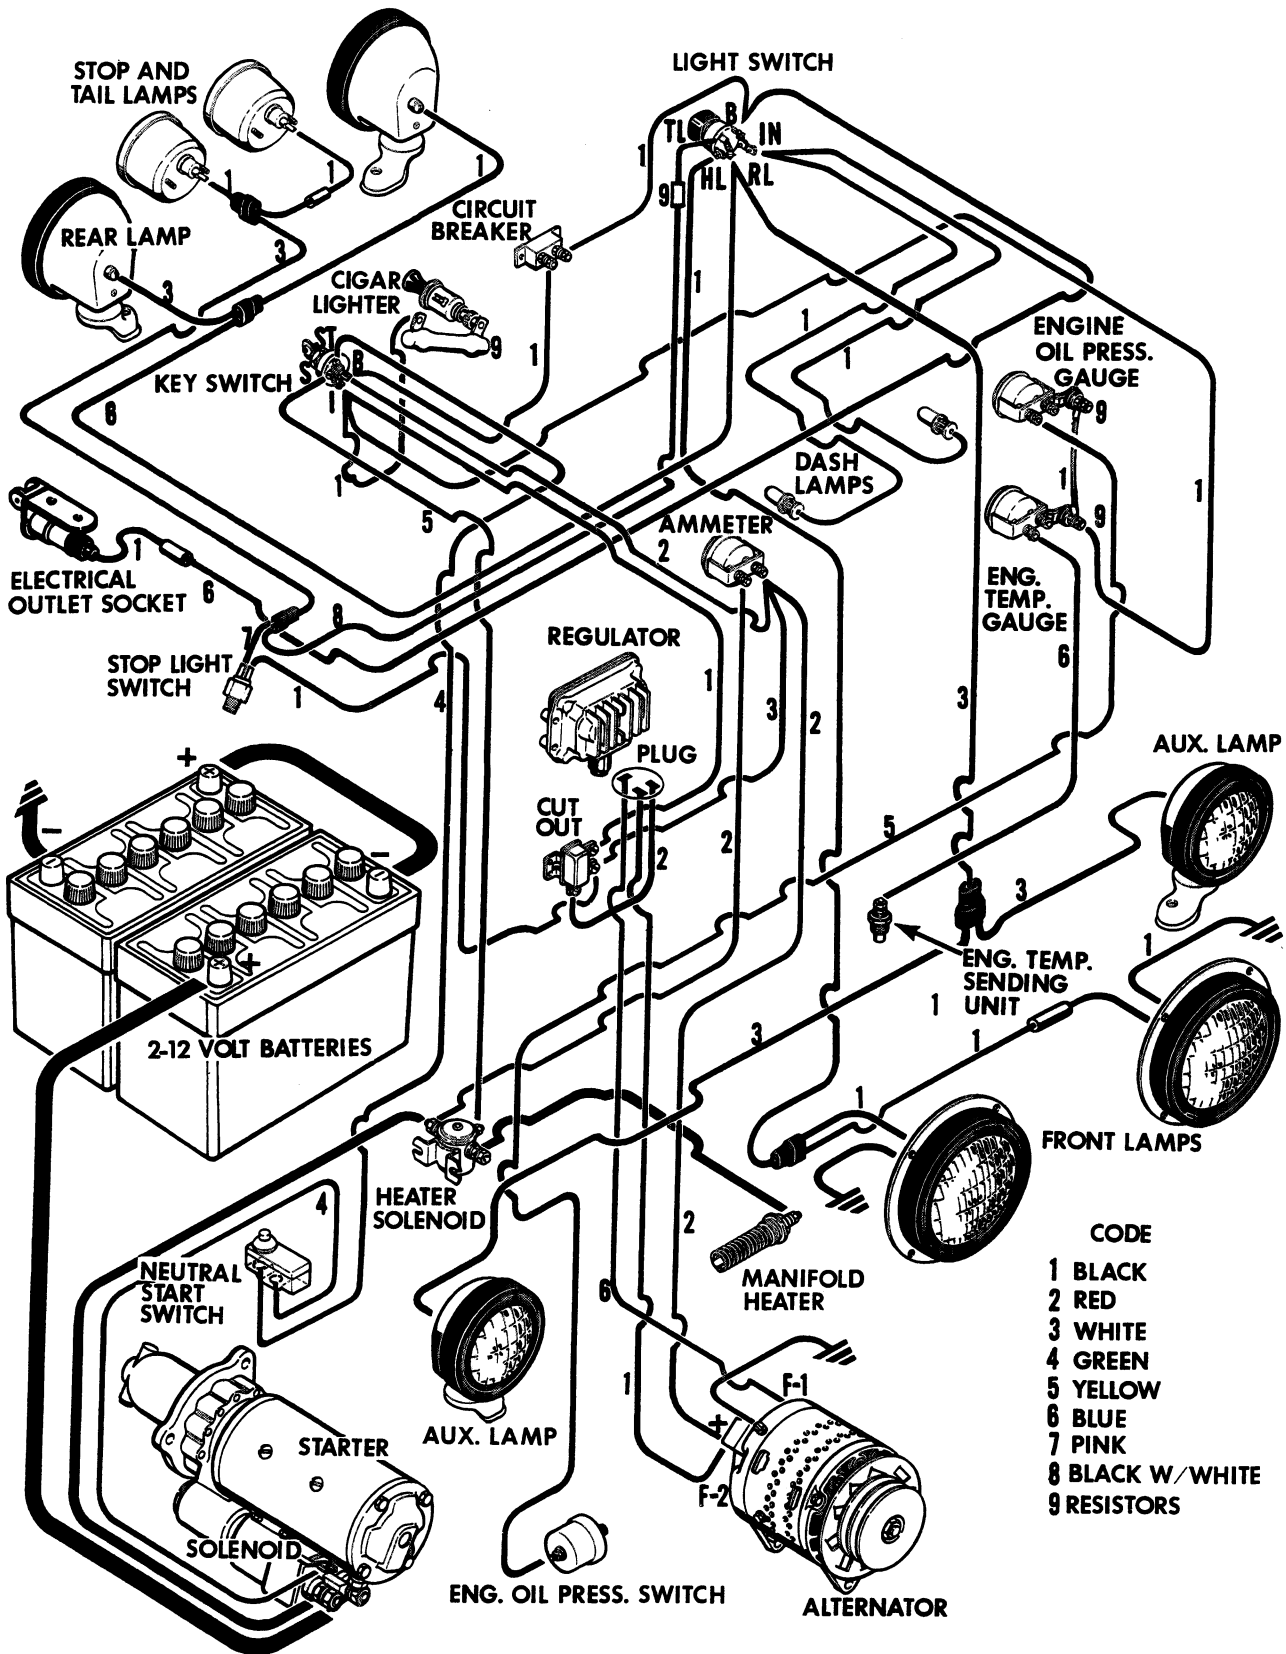

**NOTE:** The J. I. Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

**SECTION**

**C**

**SPECIFICATIONS FOR**

**CASE A451**

**TURBOCHARGED ENGINE**

**AND**

**1200 TRACTION KING**

# diesel engines

C-2

## A451 ENGINE SPECIFICATIONS

Type -----CASE Full Diesel, 6 Cylinder 4 Stroke Cycle Valve-in-Head Engine.

Cylinder Heads ----- Multiple Cylinder Heads can be removed individually for Servicing(2 cylinders per head).

Firing Order ----- 1-5-3-6-2-4

Bore  
A451 ----- 4-3/8 Inches

Stroke ----- 5 Inches

Piston Displacement  
A451 ----- 451 Cubic Inches

Compression Ratio ----- 15 to 1

Oil Filter, Crankcase-----Replaceable Full Flow Element Type.

Method of Starting Diesel Engine ----- Engine Starts on Diesel Fuel (Electric Starting Motor).

Exhaust Valve Rotators ----- Positive Type

### Maximum Compression Pressures ENGINE WARMED UP TO OPERATING TEMP. AND RUNNING AT 1600 RPM

Altitude	Sea Level	1000 ft.	2000 ft.	3000 ft.	4000 ft.	5000 ft.
Compression Pressure	480 PSI	455 PSI	435 PSI	415 PSI	395 PSI	375 PSI
Allowable Variance Between Cylinders - 25 Pounds Pressure at 1600 RPM						

### CYLINDER SLEEVES

Type -----Replaceable Wet Type:Two Rubber O-Ring Seals carried on each sleeve.

Inside Diameter of Sleeve Bore  
A451----- 4.375 to 4.376 Inches. Replace Sleeve when inside Diameter below Top Ring Ridge Exceeds 4.383 Inches.

Piston Clearance in Sleeve (At Skirt)  
A451 ----- .004 to .005 Inches

Cylinder Sleeve Out-of-Round ----- Max. .002 Inch

### PISTON AND PISTON PINS

Piston Material  
A451 ----- Aluminum

Piston Weight (Less Pin)  
A451 ----- 3.937 to 3.939 Pounds

Diameter of Piston at Top of Skirt (Below Oil Ring)  
A451 ----- 4.3635 to 4.3665 Inches

Diameter of Piston at Bottom of Skirt  
A451 ----- 4.3665 to 4.3675 Inches

Piston Pins ----- Full Floating Type:Held in Position with Snap Rings in Piston. Replaceable Bronze Bushing in Connecting Rod.

Piston Pin Length  
A451 ----- 3.670 to 3.675 Inches

Piston Pin Diameter  
A451 ----- 1.4994 to 1.4995 Inches

Piston Pin Fit in Piston  
A451 ----- .0000 to .0003

Piston Pin Fit in Connecting Rod Bushing  
A451 ----- .0005 to .0010 Inch

### PISTON RINGS

Rings Per Piston ----- 4- (3 Compression and 1 Oil).

Compression Rings

Width of Ring (All 3)----- .0930 to .0935 Inch

Ring End Gap(All 3) when Compressed in 4.375 Inch Cylinder A451 ----- .013 to .025 Inch

Side Clearance in Groove of 1st (Top)Ring  
A451 ----- .0045 to .0060 Inch

Side Clearance in Groove of 2nd and 3rd Ring----- .0025 to .004 Inch

Oil Ring ----- To install Replacement Ring, Follow Instructions Packed with Rings.

Width of Rings (Original Equipment)  
A451 ----- .2470 to .2490 Inch

Replacement Ring ----- .2441 to .2474 Inch

Side Clearance in Groove(Original Equipment)  
A451----- .0025 to .0085 Inch

Replacement Ring  
A451----- .0025 to .0085 Inch

### CONNECTING RODS

Connecting Rod Bushing ----- Replaceable Bronze Bushing Replacement Bushing must be Reamed.  
A451 ----- Use 1.5004 to 1.5008 Reamer

Piston Pin Hole Diameter in Rod (Without Bushing)  
A451-----1.686 to 1.688 Inches

Inside Diameter of Piston Pin Bushing in Rod  
1.5004 to 1.5008 Inches.Install New Bushing if inside Diameter Exceeds 1.504 Inches.

Connecting Rod Bearing ----- Replaceable, Precision, Steel Backed Copper Lead Alloy Liners.

Connecting Rod Capscrews -----Self Locking Type, No. Lock Wires Required May be used More Than Once.

Connecting Rod Length (Center to Center Between Pin Hole and Bearing Journal Hole)--- 10.499 to 10.501 Inches

Bearing Liner Width ----- 1-5/8 Inch

Diameter of Crankshaft Journal Hole in Rod(Without Liner)----- 2.9005 to 2.9010 Inches

Inside Diameter of Bearing Liner(Standard Liner in place in Rod and Capscrews Tight)----- 2.7503 to 2.7518 Inches

Diameter of Crankshaft Rod Journal ----- 2.748 to 2.749

Clearance Between Rod Bearing and Crankshaft Journal ----- .0013 to .0038 Inch; Install New Bearing Liners When Clearance Exceeds .006 Inch.

Undersize Bearing Liners Available for Service ----- .002,.010,.020,.030 Inch

Allowable Connecting Rod Bearing End Play ----- .005 to .012 Inch

### CRANKSHAFT AND MAIN BEARINGS

Crankshaft ----- Balanced; Drilled to Provide Pressure Lubrication to Main and Connecting Rod Bearings .

Type Main Bearings ----- Replaceable, Precision, Steel Backed Copper - Lead Alloy Liners.

Bearing Capscrews ----- Self Locking Type, No Lock Wires Required May Be Used More Than Once.

Bearing Taking End Thrust ----- 5th(Two Replaceable Bronze Thrust Washers.)

Crankshaft End Play(Measured at No. 5 Main Bearing) ----- .004 to .012 Inch;Install New Thrust Washers if End Play Exceeds .020 Inch.

Oversize Thrust Washers for End Play Available for Service ----- .006 Inch

Connecting Rod Bearing Journal Diameter----- 2.748 to 2.749 Inches

Main Bearing Journal Diameter ----- 2.998 to 2.999 Inches

Crankshaft Main and Connecting Rod Journal Bearings out of Round ----- Maximum .001 Inch



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

Maximum Allowable Taper on  
Crankshaft Rod Journal ----- .002 Inch

Inside Diameter of Main Bearing Liners  
(In Place and Capscrews Tight) ----- 3.0006 to 3.0026 Inches

Clearance Between Main  
Bearing Liner and Journal ----- .0016 to .0046 Inch; Install  
New Bearing Liner when Clearance Exceeds  
.0065 Inches.

Width of 1st, 3rd 5th and 7th  
Main Bearing Liners ----- 2-7/32 Inches

Width of 2nd, 4th and 6th Main  
Bearing Liners ----- 1-5/32 Inches

Width Between Crankshaft Main Bearing Cheeks

A. 3rd, 7th ----- 2.620 to 2.630 Inches

B. 2nd, 4th and 6th ----- 1.5575 to 1.5675 Inches

C. 5th ----- 2.624 to 2.626 Inches

Width Between Crankshaft Rod  
Bearing Journal Cheeks ----- 1.9975 to 2.0025 Inches

Undersize Main Bearing Liners  
Available for Service ----- .002, .010, .020, .030 Inch

Crankshaft Main Bearing  
Journals Should Be  
2.988-2.989 Inches for .010 Inch Undersize Bearing  
2.978-2.979 Inches for .020 Inch Undersize Bearing  
2.968-2.969 Inches for .030 Inch Undersize Bearing

Undersize Connecting Rod Bearing  
Shells Available for Service ----- .002, .010, .020, .030 Inch

Connecting Rod Crankshaft Journals Should  
Be Ground to ----- 2.738-2.739 Inches for .010 Inch Undersize Bearing  
2.728-2.729 Inches for .020 Inch Undersize Bearing  
2.718-2.719 Inches for .030 Inch Undersize Bearing

#### CAMSHAFT AND BUSHINGS

Number of Bearing Surfaces on Camshaft ----- 5

Type Bushing ----- Replaceable, Precision, Steel Backed Babbitt

Bushing Lubrication ----- Pressure Lubricated from Oil Pump; Cam-  
shaft Drilled to Provide Pressure Lubrication to  
Valve Rocker Arm Assembly, and to Timing  
Gear Train.

Diameter of Camshaft at Each Bearing Surface  
A451 ----- 2.246 to 2.247 Inches

Inside Diameter of Each Bushing  
(Measured when in Place in Block)  
A451 ----- 2.2484 to 2.5414 Inches

No. 1 (Front) Bushing Length ----- 1-21/32 Inches

No. 2, 3 and 4 Bushing Lengths ----- 1-7/16 Inches

No. 5 Bushing Length (w/ cup type Camshaft plug) ----- 1-5/32 Inches

Camshaft End Play ----- Automatically Taken Up by Spring  
Loaded Thrust Button in Front End of Cam-  
shaft. Camshaft Washer Provided Between  
Drive Gear and Front Bearing.

Camshaft Washer

Outside Diameter ----- 3.240 to 3.260 Inches

Inside Diameter  
A451 ----- 2.250 to 2.260 Inches

Thickness ----- .1225 to .1275 Inch

#### VALVE PUSH ROD LIFTERS

Type ----- Mushroom Type

Outside Diameter of End that Projects into Block

A451 ----- .8097 to .8102 Inch

Diameter of Bore in Block for Lifter ----- .8115 to .8130 Inch

Oversize Lifter Available for Service ----- .010 In. Oversize Lifter

Bore in Block Must Be Reamed to ----- .8215 to .8225 Inch for .010 Inch  
Oversize Lifter.

## VALVES

C-3

### Valve Tappet Clearance

\*A451 ----- .020 In., Engine Hot (Both Intake and Exhaust)

\*Hot Settings Are Made At Low Idle After The Engine Has Operated At  
Thermostat Control Temperature For At Least Fifteen Minutes.

### Exhaust Valves

Angle of Valve Face ----- 44 Degrees

Valve Length ----- 6.382 Inches

Maximum Valve Face Runout ----- .002 Inch as Determined with a Dial  
Indicator.

Diameter of Valve Stem --- .4000 to .401 Inch. Install New Valve if there  
is More than .002 Inch Difference in Diameter  
at any Point on Stem.

Diameter of Valve Head ----- 1.750 Inches

Inside Diameter of Valve Guide ----- .4045 to .4055 Inch (After Assem-  
bly).

Valve Stem Clearance in Guide ----- .0035 to .0055 Inch

### Exhaust Valve Seat Insert

Seat Angle ----- 45 Degrees

Seat Contact Width ----- .073 to .084 Inch

Insert Height ----- .312 to .317 Inch

Outside Diameter of Insert  
A451 ----- 1.722 to 1.723 Inches

Inside Diameter of Insert  
A451 ----- 1.401 to 1.411 Inches

Maximum Allowable Seat Runout ----- .002 Inch as Determined  
with a Dial Indicator

### Intake Valves

Angle of Valve Face ----- 44 Degrees

Valve Length ----- 7.368 Inches

Maximum Valve Face Runout ----- .002 Inch as Determined  
with a Dial Indicator.

Diameter of Valve Stem ----- .402 to .403 Inch Install New Valve  
if there is More than .002 Inch Difference in  
Diameter at any Point on Stem.

Diameter of Valve Head ----- 1.875 Inches

Inside Diameter of Valve Guide --- .4045 to .4055 Inch. (After Assembly)

Stem Clearance in Guide ----- .0015 to .0035 Inch

### Intake Valve Seat

Seat Angle ----- 45 Degrees

Seat Contact Width  
A451 ----- .070 to .086 Inch

Maximum Allowable  
Seat Runout ----- .002 Inch as  
Determined with a Dial Indicator

### Exhaust Valve Guides

Length ----- 3-7/32 Inches

Outside Diameter ----- .7510 to .7515 Inch

Inside Diameter ----- .4045 to .4055 Inch. (After Assembly)

Valve Stem Clearance in Guide ----- .0035 to .0055 Inch

Distance Above Head Guide Must Protrude --- 1-1/16 Inches, Press Fit

### Intake Valve Guides

Length ----- 4-3/8 Inches

Outside Diameter ----- .7510 to .7515 Inch

Inside Diameter ----- .4045 to .4055 Inch (After Assembly)

Valve Stem Clearance in Guide ----- .0015 to .0035 Inch

**C-4**

Distance Above Head  
Guide Must Protrude ----- 1-1/16 Inches, Press Fit

**VALVE SPRINGS**

Free Length ----- Approximately 2.438 Inches

Spring Pressure at Compressed Height of  
1-31/64 Inches (Valve Open)----- 102 Pounds; Install New Spring if  
Pressure is Less than 92 Pounds.

Spring Pressure at Compressed Height of  
1-15/16 Inches(Valve Closed)---45 Pounds; Install New Spring if Pres-  
sure is Less than 41 Pounds.

**ROCKER ARM ASSEMBLY**

Rocker Arm Bushing ----- Replaceable Precision Bronze Bushing

Number of Bushings ----- 12

Lubrication ----- Pressure Lubricated; Crankcase Oil to  
Rocker Arms Metered By Camshaft.

Oil Holes in Rocker Arm Shaft -----Oil Holes must Face Push Rod  
Side of Engine Only. Shaft Cannot Be Rotated.

Positioning of Exhaust  
Valve Rocker Arms ----- Spacer Washers Position Exhaust Valve  
Rocker Arm and Eliminate End Play without Binding.

Outside Diameter of  
Rocker Arm Shaft ----- .872 to .873 Inch

Inside Diameter of Rocker  
Arm Bushing (Installed)----- .8745 to .8755 Inch

Rocker Arm Shaft Spring

Spring Pressure at Compressed Height of  
1-9/16 Inches ----- 10 Pounds; Install  
New Spring If Pressure is Less than 8-1/2 Pounds

**OIL PUMP**

Type ----- Positive Displacement, Gear Type Pump;  
Driven Off Camshaft.

Pressure Relief Valve -----Maintains 40 to 45 Pounds Full Pres-  
sure(Oil Warm,Engine Operating at Full Gov-  
erned Speed)Relief Valve is Adjustable.

**WATER PUMP AND THERMOSTAT**

Type of System -----Pressurized Thermostat Controlled  
By-Pass Type; Forced Circulation(Pump)

Type Pump ----- Impeller Vane Type

Radiator ----- Heavy Duty Fin and Tube Type

Temperature Control ----- By-Pass Type Thermostat

**FUEL SYSTEM**

Injection Pump -----Robert Bosch,Type PES Multiple Plunger Pump

Direction of Pump Rotation ----- Counter-Clockwise

Pump Mounting----- Right Hand Side of Engine

Pump Drive ----- Gear Driven from Camshaft Gear at Camshaft Speed

Injection Pump Drive Lubrication ----- Pressure Lubricated From  
Front Camshaft Bearing.

Injection Pump Drive Shaft Diameter ----- 1.3700 to 1.3705 Inches

Normal Clearance Between  
Drive Shaft and Bushings ----- .001 to .002 Inch

Number of Drive  
Shaft Bushings -----2- These Bushings are Not Re-  
placeable. A Replacement Drive Housing with  
Bushings in Place Aligned and Fine Bored is Provided.

Injection Pump Drive  
Shaft End Play ----- Automatically Taken Up By a Spring  
Loaded Thrust Button on Front End of Drive Shaft.  
Thrust Washers Provided Between Front Drive Gear  
and Drive Shaft Housing.

**Thrust Washer**

Outside Diameter ----- 2.085 to 2.105 Inches

Inside Diameter ----- 1.3725 to 1.3825 Inches

Thickness ----- .1225 to .1275 Inch

Timing Marks on Engine----- Timing Marks Located on Crankshaft  
Pulley Flange(0 through 5 and 20 through 35  
Degrees Before Top Dead Center). Pointer  
Located on Timing Gear Cover.

Fuel Injectors ----- Robert Bosch Pintle Type;Opening Pressure  
2350 Pounds Per Square Inch

Governor ----- Mechanical Variable Speed Fly-Weight Centrifugal  
Type; Integral Part of Injection Pump.

**Fuel Filters**

Fuel Tank Breather Air Filter -----Located in Fuel Tank Filler Cap

Fuel Tank Water Trap ----- Located in Base of Fuel Tank

1st Stage Fuel Filter ----- Replaceable Element Type

2nd Stage Fuel Filter ----- Replaceable Element Type

Final Fuel Filter ----- Replaceable Sealed "Can"Type Filter.

**TIGHTENING TORQUE SPECIFICATIONS**

Engine	Torque in Ft. Lbs.	Size	Threads per In.	Type
Camshaft Nut -----	125	1-1/8	12	NF*
Connecting Rod Bearing Capscrews-----	95 to 105	1/2	20	NF
Crankshaft Pulley Bolt-----	100	5/8	18	NF
Cylinder Head Cover (Valve Cover)Stud Nuts----	5 Max.	7/16	20	NF
Cylinder Head Stud Nuts---	120 to 125	9/16	18	NF
Cylinder Head Bolts (Grade 8)-----	145 to 150	9/16	18	NF
Engine to Flywheel Housing- Dust Cover and Capscrews-----	80	1/2	20	NF
	50	1/2	13	NC**
Flywheel to Crankshaft Capscrews-----	100	5/8 9/16	18 18	NF NF
Crankshaft Rear Oil Seal Retainer Capscrews-----	25	3/8	16	NC
Engine Mount-----	200	3/4(spring mounted)	10	NC
<b>Injectors, Diesel Fuel</b>				
Clamp Stud Nuts, Injector to Cylinder Head (Diesel)-----	14 to 17	3/8	24	NF
Injector Nozzle Cap Nut (Diesel)-----	50 to 55			
Powrcel Clamp Screws (Diesel)-----	100	1-1/8	16	NC
Mainbearing Capscrews--	145 to 155	5/8	11	NC
<b>Manifolds</b>				
Manifold Clamp Stud Nuts-----	25	7/16	20	NF
Water Manifold Hold Down Capscrews-----	15	5/16	18	NC
Oil Filter Mounting Capscrews -----	25	3/8	16	NC
Oil Pan Capscrews-----	10	3/8	16	NC
Oil Pump Cover Capscrews-----	25	1/4	20	NC

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**