

2555 Cotton Picker
Service Manual 7-88071
Table of Contents

Description	PC Code	Section No.	Form No.
General		Tab 1	
Standard Torque Specifications	5	1001	8-71602
Fluid and Lubricants	4	1010	7-63272
Loctite Product Chart	2		8-98902
Engines		Tab 2	
See 6TA 830 Service Manual			
Fuel System		Tab 3	
See 6TA 830 Service Manual			
Electrical		Tab 4	
How It Works	135	4000	7-88350
Wiring Schematics and Troubleshooting 2555 Cotton Picker Prior To JJC0157150	58	4002	7-68401
Electrical Schematic (see pocket at rear of manual)			7-68420
Wiring Schematics and Troubleshooting 2555 Cotton Picker P.I.N. JJC0157150 and After	56	4002	7-87420
Electrical Schematic (see pocket at rear of manual)			7-87051
Steering		Tab 5	
Steering Axle And Line	16	5003	8-99061
Steering Hand Pump	14	5020	7-62571
Steering Cylinder	12	5030	8-62441
Rear Drive Axle Service	26	5040	7-67370
Power Train		Tab 6	
Foot-N-Inch Valve	4	6015	7-63830
Hydrostatic Drive Pump Service	14	6018	7-64341
Hydrostatic Drive Motor Service	10	6030	7-64121
Transmission Service	40	6040	7-63351
Drum Drive	16	6051	8-82772
Final Drives	14	6060	7-63491
Cable Adjustment	6	6080	7-89540
Brakes		Tab 7	
Brake Assemblies	13	7010	7-62541
Master Brake Valve	13	7020	7-62550

Reprinted

Description	PC Code	Section No.	Form No.
Hydraulic		Tab 8	
How It Works	128	8000	7-88360
Hydraulic Schematic and Troubleshooting	32	8002	7-68391
Hydraulic Schematic (see pocket at rear of manual)			7-68410
Hydraulic Oil Filter	4	8030	7-63291
Hydraulic Pump and Compensator - Overhaul	34	8040	8-62480
Hydraulic Gear Pump	10	8045	7-86310
Hydraulic Manifold Valve	6	8051	8-99022
Hydraulic Valves, Cylinders and Motor	44	8060	8-62182
Auger Drive Motor	8	8070	7-67730
Chassis		Tab 9	
Air Conditioning Troubleshooting - Visual and Operating	22	9010	7-86210
Air Conditioning System - Gauges and Testing	24	9020	7-63310
Air Conditioner System Service	12	9030	7-85540
Air Conditioning Components Service	30	9040	7-63331
Air Suspension Seat	10	9065	7-60911
Fan Assembly	22	9070	8-62222
Pressure Moistener System	10	9075	7-64011
Basket Assembly Service	28	9077	7-85900
Picker Drum Removal and Installation	8	9081	8-99191
Picker Drum Service	54	9091	6-11951
Picker Bar and Spindle Lubrication System	6	9092	8-98611
Drum Gearboxes and Input Drive Shaft	12	9093	8-99101

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1001

GENERAL TORQUE SPECIFICATIONS

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>


TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE	3
TORQUE SPECIFICATIONS - METRIC HARDWARE	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	6

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983


Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827


NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE


Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

Grade 10.9 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

Grade 12.9 Bolts, Nuts, and Studs

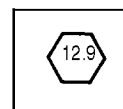

Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
37 Degree Flare Fitting			
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
Straight Threads with O-ring			
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

Split Flange Mounting Bolts		
Size	Pound- Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound- Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	Thread Size	Pound-Inches	Newton metres
O-ring Face Seal End					O-ring Boss End Fitting or Lock Nut		
-4	1/4 inch 6.4 mm	9/16-18	120 to 144	14 to 16	7/16-20	204 to 240	23 to 27
-6	3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound-Inches	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	1-1/16-12	85 to 90	115 to 122
					1-3/16-12	95 to 100	129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

Section 1010

FLUIDS AND LUBRICANTS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Rac 7-63272

© 1995 Case Corporation
Printed in U.S.A.
May, 2001

1010

TABLE OF CONTENTS

ENGINE	3
COOLING SYSTEM	3
FUEL SYSTEM	3
TRANSMISSION	3
FINAL DRIVE	3
HYDRAULIC RESERVOIR	3
CHASSIS DRIVE GEAR BOX	3
DRUM DRIVE GEAR BOX	3
AIR CONDITIONING REFRIGERANT CAPACITY	4
PICKER BAR AUTOMATIC LUBRICATION SYSTEM	4

ENGINE

Oil Type CASE No. 1 Engine Oil
 Oil Capacity - Without Filter Change 20 U.S. Quarts (19 Litres)
 Oil Capacity - With Filter Change 22 U.S. Quarts (21 Litres)

NOTE: *DO NOT put Performance Additives or other oil additive products in the engine crankcase.*

COOLING SYSTEM

Coolant Type 50 Percent Mixture of Water and Ethylene Glycol Solution
 Coolant Capacity 35 U.S. Quarts (33.1 Litres)

IMPORTANT: *Use only heavy duty low silicate coolant. Automotive antifreeze purchased at local supply store outlets most likely is not low silicate and must not be used in Case engines.*

FUEL SYSTEM

Fuel Type ASTM D975 Grade 2-D Number 2 Diesel Fuel
 Fuel Capacity 150 U.S. Gallons (567 Litres)

TRANSMISSION

Oil Type CASE HY-TRAN® ULTRA
 Oil Capacity 15 U.S. Quarts (14 Litres)

NOTE: *If brakes are removed from the transmission for service, an additional 1 U.S. Quart (0.95 Liter) per brake assembly must be added to the transmission.*

FINAL DRIVE

Oil Type CASE HY-TRAN® ULTRA
 Oil Capacity 7.5 U.S. Quarts (7.3 Litres)

HYDRAULIC RESERVOIR

Oil Type CASE HY-TRAN® ULTRA
 Reservoir Capacity 10 U.S. Gallons (38 Litres)
 System Capacity 18 U.S. Gallons (68 Litres)

CHASSIS GEAR BOX - RIGHT AND LEFT

Oil Type CASE 135H EP 85W 140 Gear Lubricant
 Oil Capacity (Each Gear Box) 1 1/2 U.S. Quarts (1.4 Litres)

DRUM TOP GEAR BOX

Oil Type CASE 135H EP 85W 140 Gear Lubricant
 Oil Capacity (Each Gear Box) 1 1/2 U.S. Quart (1.4 Litres)

AIR CONDITIONING REFRIGERANT CAPACITY

Air Conditioning System Refrigerant Capacity 4.41 lbs (2.00 kg)
Refrigerant Type HFC-134A

PICKER BAR AUTOMATIC LUBRICATION SYSTEM

Oil Type Picker Bar and Spindle Lubricant - PN 407515R1
Reservoir Capacity..... 60 U.S. Gallons (227 Litres)

IMPORTANT: *DO NOT substitute any other lubricant for this application. Improper lubrication will cause damage to the parts.*

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 4000

HOW IT WORKS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

Rac 7-88350

© 1997 Case Corporation
Printed in U.S.A.
December, 1997

4000

TABLE OF CONTENTS

XXX 3

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 4002


4002

WIRING SCHEMATICS AND TROUBLESHOOTING 2555 Cotton Picker Prior To JJC0157150

TABLE OF CONTENTS

SPECIAL TOOLS	3
FUSE AND RELAY IDENTIFICATION	4
Cab Fuse Panel	4
Relays	5
Headliner Fuse Panel	6
COTTON PICKER	7
INSTRUMENTATION AND CONTROLS	21
ELECTRICAL SYSTEM DIAGNOSTIC TESTER	22
DRUM LIFT AND TILT PROXIMITY SWITCH TESTING	23
MANIFOLD VALVE SOLENOID LOCATIONS	24
ELECTRICAL COMPONENT LOCATIONS	25
H.V.A.C. ELECTRICAL COMPONENT LOCATIONS	27
ENGINE HARNESS AND COMPONENT LOCATION	28
CRANKING MOTOR (STARTER) AND POWER DISTRIBUTION	29
DRUM SERVICE CONTROLS OPERATION AND TROUBLESHOOTING	32
COMPACTOR/AUGER OPERATION AND TROUBLESHOOTING	46
LIGHTING SYSTEM LAYOUT	50
COTTON MONITOR SENSORS AND SCHEMATIC	52
FUNCTIONAL CHECK PROCEDURE FOR OPERATOR PRESENCE SYSTEM	54
TROUBLESHOOTING PROCEDURE FOR THE OPERATOR PRESENCE SYSTEM	55
TESTING EMITTER AND DETECTOR CONVEYOR CHOKE SENSORS	58

SPECIAL TOOLS

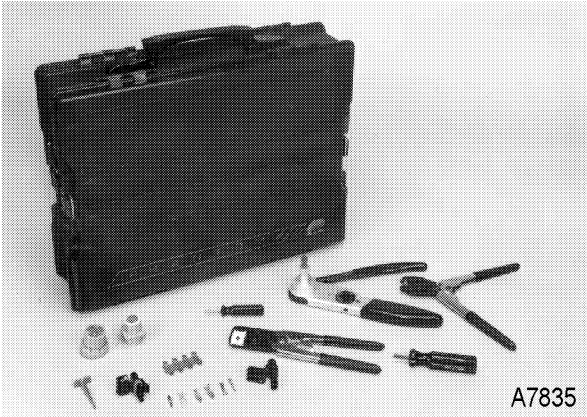


A7835

Electrical Connector and Terminal Repair Kit AJ11400004. See the Parts Merchandiser Catalog for ordering information and identification of components.



A9206


Digital Multimeter CAS-1559.

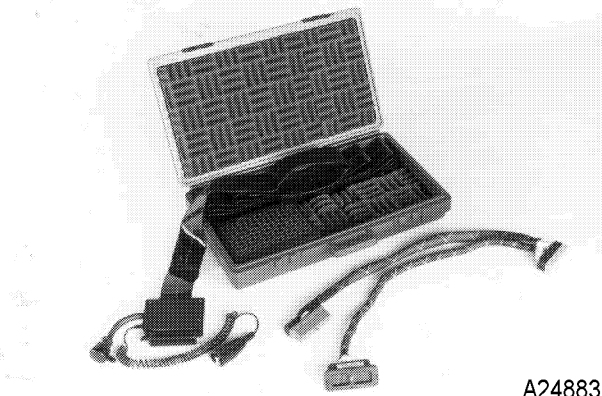


A24883

Electrical Systems Diagnostics Tester CAS-2110, shown with Adapter Harness CAS-2384. (See Page 4002-18)

FUSE AND RELAY IDENTIFICATION Cab Fuse Panel

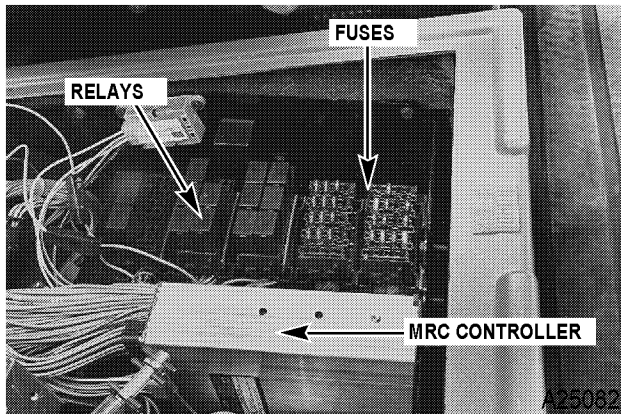

The cab fuse panel is located below the right hand console.
Remove the cover to access the cab fuse panel.

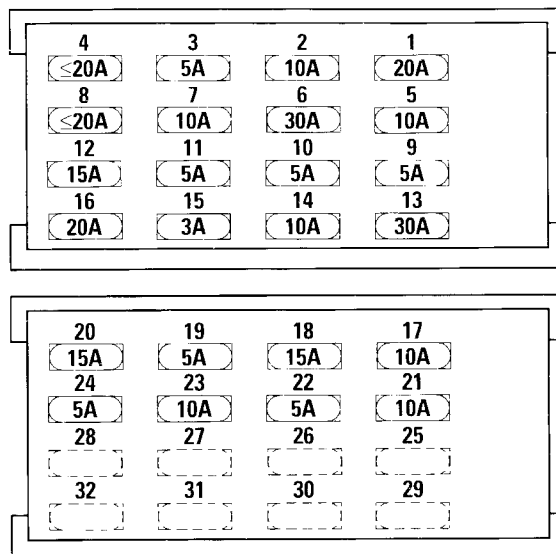

RB96K035

- | | |
|---|---|
| 1. Flasher | 17. Fan And Basket Fire Unload |
| 2. Lighter/Horn/Dome Light | 18. Pressurizer Fan Motor/Auger Interlock |
| 3. Door Switch (Dome Lights)/Radio Memory/
Instrumentation | 19. Compactor switch |
| 4. Auxiliary Power Connector (B+) | 20. Basket/Drum Switch |
| 5. Park Brake | 21. OPS Module/Seat & Trans Neut Sw./MRC Controller |
| 6. Air Seat | 22. OPS Module |
| 7. Radio/Service Lights | 23. Moistener Pump |
| 8. Auxiliary Power Connector (Accessory B+) | 24. Lube Pump Solenoid |
| 9. Instrumentation (Switched) | 25. Open |
| 10. Cotton Monitor | 26. Open |
| 11. Drum Tilt Proximity Switches | 27. Open |
| 12. H.V.A.C. Controller | 28. Open |
| 13. H.V.A.C. Blower Motor | 29. Open |
| 14. Ether Start Switch | 30. Open |
| 15. Hydro Neutral Switch | 31. Open |
| 16. Turn Signal | 32. Open |



Suggest:

If the above button click is invalid.


Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

Relays

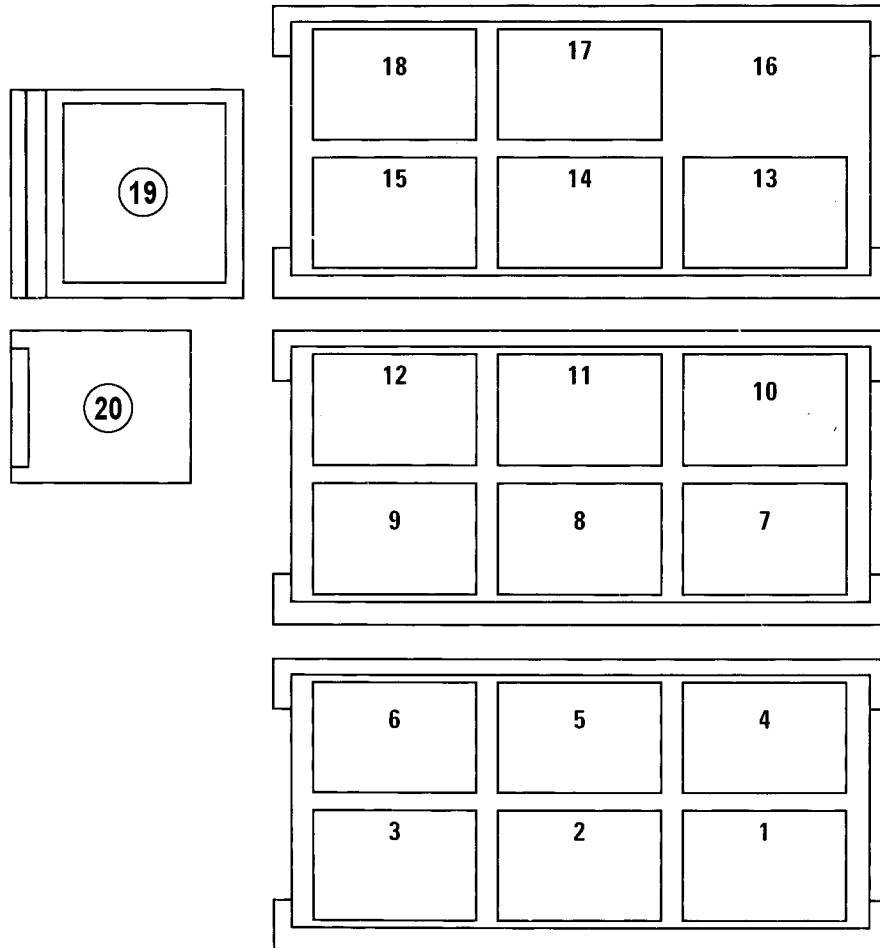

RB96K034

- | | |
|---------------------------|-------------------------------|
| 1. Left Lower Enable | 11. 4 - Wheel Drive |
| 2. Right Lower Enable | 12. A.C. Warning Light |
| 3. Drum Tilt Lower Enable | 13. Accessory B+ |
| 4. Auger Cutoff | 14. Engine Oil Pressure No. 1 |
| 5. Auger Latch | 15. Engine Oil Pressure No. 2 |
| 6. Auger Enable | 16. Open |
| 7. Tilt/Lower | 17. O.P.S. Reset |
| 8. Tilt/Raise | 18. Start Enable |
| 9. Left Auto | 19. Cab Power Relay |
| 10. Right Auto | 20. Flasher |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>