

750 Grain Drills

**John Deere Des Moines Works
OMN200486 Issue J7
(This manual replaces OMN200486 K6)**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.


WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

Identification Views


10 FT. SINGLE BOX DRILL

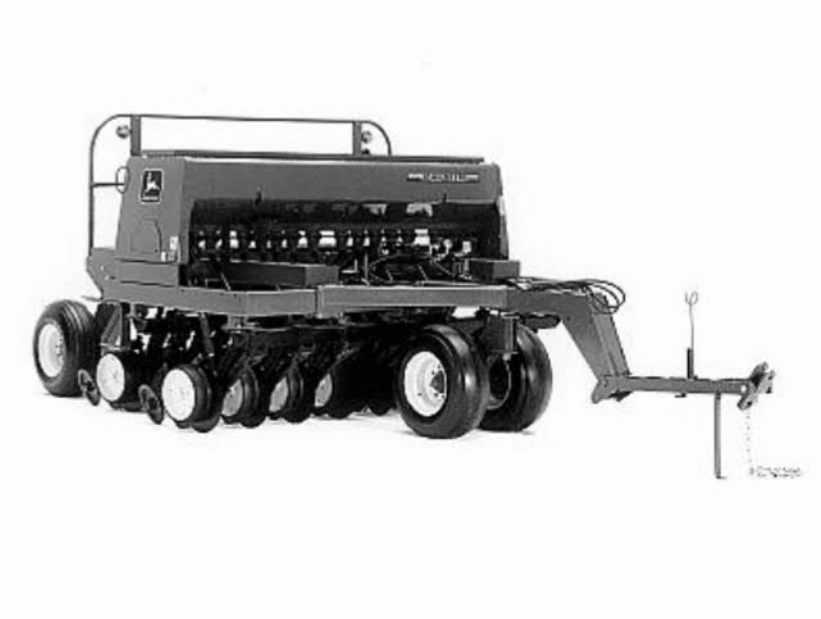

N46934 -UN-29JUN95

NX,7500MA,A2 -19-01OCT96

15 FT. SINGLE BOX DRILL

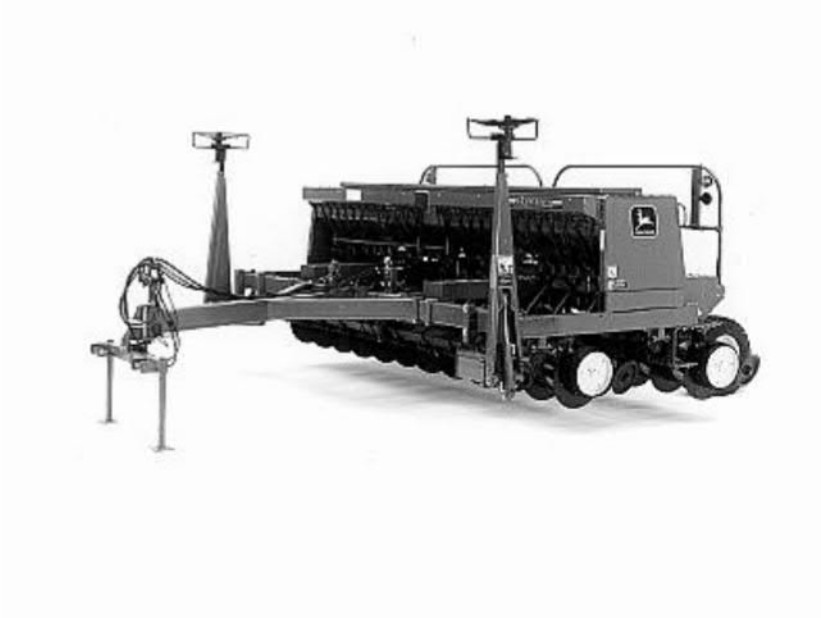

N46933 -UN-29JUN95

NX,7500MA,A3 -19-01OCT96

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.


Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Identification Views

15 FT. DRILL WITH SEPARATE PLACEMENT BOX

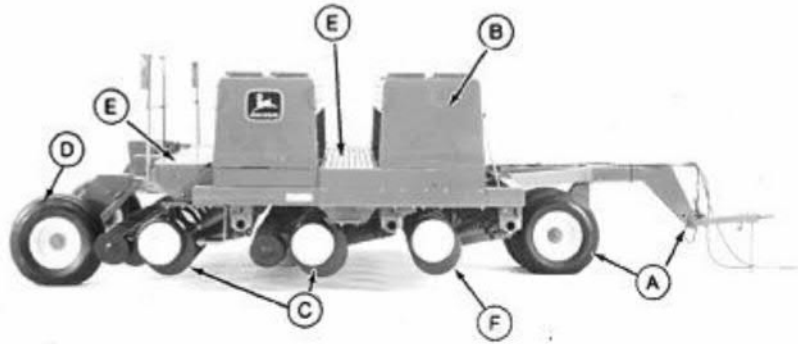

N42129AI -UN-23SEP92

A—Caster Wheel Hitch
B—Separate Fertilizer Box


C—Seed Opener
D—Support Wheel

E—Platform

F—Separate Fertilizer Opener

NX,7500MA,A4 -19-01OCT96

20 FT. COMBINATION BOX DRILL

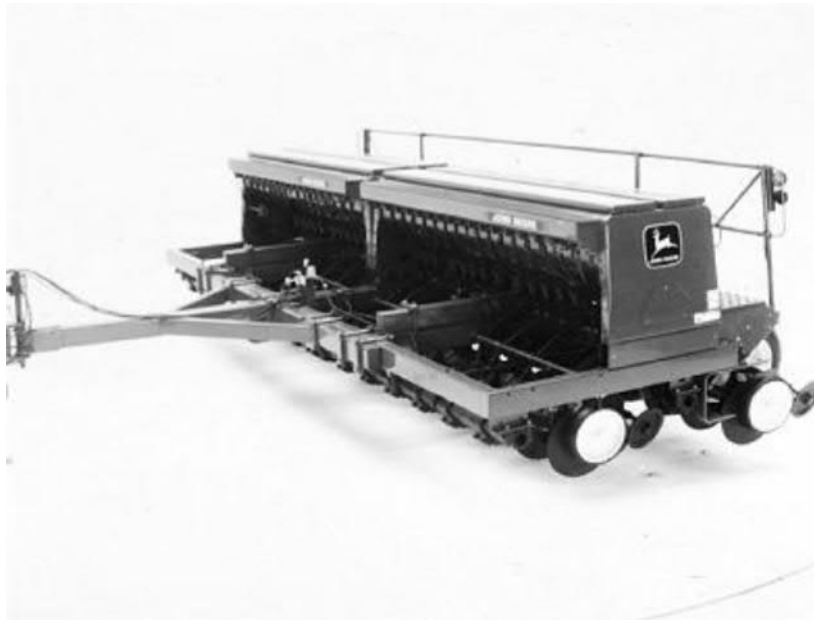

N42142PW -UN-23NOV93

NX,7500MA,A5 -19-01OCT96

Contents

	Page		Page
Safety	05-1	Checking	
Safety Signs	10-1	Grain Feed Shaft	20-13
Preparing the Tractor		Grass Seed Feed Shaft	20-13
Setting Rockshaft Selector—2-Point Hitch	15-1	Using Half-Speed Drive Attachment	20-14
Link Lengths	15-1	Understanding Rate Charts	20-14
Positioning Sway Blocks	15-2	Rate Charts	
Installing Drawbar Support		7.5 In. Row Spacing	20-15
Regular Hitch	15-2	10 In. Row Spacing (10 and 15 Ft. Drills)	20-16
Wide-Swing, Regular Hitch	15-3	7.5 In. Spaced Grass Seed Attachment ...	20-17
6000 Series Tractors	15-4	10 In. Spaced Grass Seed Attachment ...	20-18
7000 Series Tractors	15-4	Grains and Grasses	
Safety Chain	15-5	Determine Rate Setting	20-19
Adjusting Metering Valves		Standard Densities	20-20
55, 60 and 7000 Series Tractors	15-6	Using Pounds of Seed Per Acre Chart	20-21
8000 Series Tractors	15-6	Using Mixtures—Grains and Grasses	20-23
Lever Lock Clip		Setting Shifter	
Using on 55—60 Series Tractors	15-7	Grain	20-23
Installing on 55—60 Series Tractors	15-7	Grass Seed	20-24
Setting Flow Rate and Detent Time		Fertilizer Rate Charts	20-24
7000 Series Tractors	15-9	Determining Rate Setting—Fertilizer	20-25
Check COMPUTER TRAK™ MONITOR	15-9	Fertilizer Density Chart	20-26
Preparing the Machine		Setting Fertilizer Feed Shaft Speed	20-26
Supplemental Information	20-1	Fertilizer Drive Settings	20-27
Checking		Using Density Meter	20-27
and Lubricating 750 Grain Drills	20-2	Performing Accurate Rate Checks	20-28
Tire Air Pressure	20-3	Rate Checks	
Wheel Bolts and Bearings	20-3	Method 1	20-29
Tightening Hardware	20-4	Method 2	20-30
Leveling Drill—Simple Hitch	20-4	Feed Stops	
Installing Frame Quick-Tatch™ Weights	20-5	Grass Seed	20-31
Understanding Combination		Fertilizer Feed	20-31
Grain/Fertilizer Box Configurations	20-5	Grain—Fluted Feeds	20-31
Changing Combination Box Partition		Opener	
To Grain Only Position	20-6	Adjustment Tool	20-32
To 40% Grain/60% Fertilizer Position	20-10	Components and Adjustments	20-33
Setting Feed Cups	20-11	Lock-Up Rockshafts and Openers	20-34
Resetting Feed Cups	20-12	Adjusting	
		Gauge Wheel and Seeding Depth	20-35
		Press and Closing Wheel Down Force ...	20-36

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200486 J7-19-01OCT97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1995 Deere & Company

Contents

	Page		Page
Positioning		Adjusting Opener Down-Pressure	
Closing Wheels	20-37	John Deere 8000 Series Row-Crop	
Seed Boots	20-38	Tractors w/Closed Center Hyd.	
Checking Opener Adjustments	20-39	Systems	35-6
Attaching and Detaching		John Deere 55—60 Series and	
Attaching		Four-Wheel Drive Tractors	35-7
Drawn Drills	25-1	Tractors With Open Center Hydraulic	
Two-Point Hitch to Tractor With Quick		Systems	35-8
Coupler	25-2	Preparing to Operate Drill in Field	35-9
Two-Point Hitch to Tractor Without		Engage	
Quick Coupler	25-2	Drive—10 and 15 Ft.	35-10
Moving Storage Stand to Transport		Drive—20 Ft.	35-10
Position	25-3	Operating	
Attaching		In Wet Conditions	35-10
Hydraulic Hoses	25-4	Row Markers (If Equipped)	35-11
Warning Light Plug	25-5	Setting Marker Arm Length	
Opening and Closing Opener Lock-Up		10 Ft. Drill	35-12
Valve	25-5	15 Ft. Drill	35-13
Checking Rockshaft/Opener Control		Operating Seed Monitor (Attachment)	35-14
Operation	25-5		
Detaching Drill From Tractor	25-7	Attachments	
Transporting		Grass Seed Attachment	40-1
Attach Safety Chains—Drawn Drills	30-1	Marker Arm Attachment	40-1
Using		Front Rank Lock-Up Valve	40-1
Warning Lights	30-2	Grain Agitator	40-2
Safety Items	30-3	Half-Speed Drive	40-2
Moving Storage Stand to Transport		Attach Half-Speed Drive	40-2
Position	30-4	Lubrication and Maintenance	
Locking Up		Lubricating and Maintaining Machine	
Openers	30-4	Safely	45-1
Markers	30-5	Grease	45-1
Disengage		Gear Case Oil	45-2
Drive—10 and 15 Ft.	30-5	Alternative and Synthetic Lubricants	45-2
Drive—20 Ft.	30-5	Lubricant Storage	45-3
Transporting the Machine	30-6	Lubricate at Beginning and End of	
Keep Riders Off Machine	30-6	Season	45-3
Operating the Machine		Lubrication Symbol	45-3
Keep Riders Off Machine	35-1	Lock-Up Rockshafts and Openers	45-4
Follow Safe Operating Procedures	35-1	Lubricate	
Guidelines for Use	35-2	Fertilizer Feed Shaft Bearings	45-4
Understanding Active Hydraulic Opener		Drive Clutch	45-4
Down-Pressure System	35-3	Drive Wheel Disconnect	45-5
Locking SCV Lever for Active		Rockshaft Bearings	45-5
Down-Pressure Operation	35-5	Opener Disk Hubs	45-5
		Caster Wheel Pivot	45-5
		Two-point Hitch	45-6
		Grass Seed Drive Shaft	45-6
		Wheel Bearings	45-6
		Drive Wheel Hub	45-7

Continued on next page

Contents

	Page		Page
Checking Fertilizer Gear Case Oil Annually . . .	45-7		
Troubleshooting			
Openers	50-1	Opener Specifications	65-3
Delivery System	50-3	Machine Capacities	65-4
Opener Down Pressure System	50-5	Serial Number	65-4
		Declaration of Conformity	65-5
Service		Crime Prevention Tips	70-1
Using Safe Service Procedures	55-1	Index	
Lock-Up Rockshafts and Openers	55-1		
Replacing Ground Engaging Tools	55-2		
Keep Service Area Clean	55-2		
Service Tires Safely	55-3		
Bolt and Cap Screw Torque Values			
Metric	55-4		
Unified Inch	55-5		
Checking Wheel Bolts and Bearings	55-6		
Checking Tire Pressure	55-6		
Prevent Hydraulic System Contamination	55-7		
Removing Hydraulic Cylinders	55-8		
Installing and Bleeding Hydraulic			
Cylinders	55-9		
Reset Feed Cups	55-10		
Replacing Fertilizer Feed Wheels	55-11		
Repair Closing Wheel Assembly	55-12		
Repair Press Wheel Assembly	55-14		
Repair Gauge Wheel Assembly	55-16		
Replace Disk Blades and Bearings	55-18		
Timing Gauge Wheel Arm to Adjustment			
Plate	55-20		
Measure Seed Boot Wear	55-21		
Replace Seed Deflectors and Boots	55-22		
Replace Opener Arm Pivot Bushings	55-24		
Checking Acremeter Accuracy	55-25		
Using Alternate Opener Pattern	55-25		
15 Ft.	55-26		
20 Ft.	55-27		
Replacing Warning Light Bulbs	55-28		
Storage			
Preparing for Storage	60-1		
Removing From Storage	60-2		
Cleaning			
Grain Box	60-2		
Fertilizer Box	60-2		
Using Machine Covers	60-4		
Specifications			
Tractor Recommendations	65-1		
Transport Weights	65-1		
Machine Dimensions	65-2		

Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

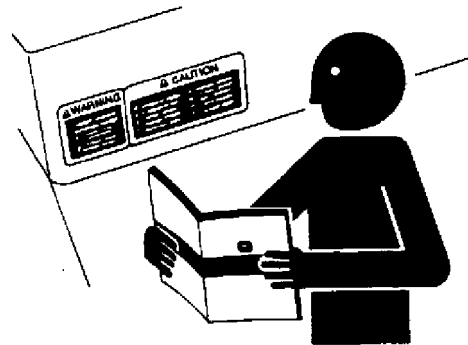

DX,READ -19-03MAR93

TS201 -UN-23AUG88




OPERATE SAFELY

Operate machine from tractor seat only.

Do not operate close to a ditch or creek.

Slow down when turning or traveling over rough ground.

Shut off tractor and shift to "Park" or set brakes when leaving tractor. Remove key when leaving tractor unattended.

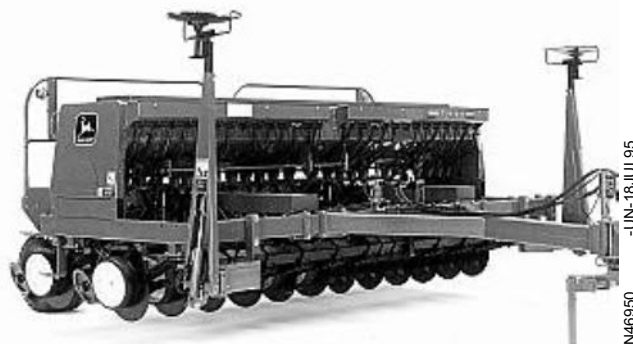

NX,750OMC,A1 -19-01OCT96

N46950 -UN-18JUL95

CHARGE ROW MARKER HYDRAULIC SYSTEM

Falling row markers can cause personal injury. Be sure cylinders and attaching hoses are fully charged with oil before operating. Failure to do so will allow markers to fall rapidly.

ALWAYS stay clear of markers when raising or lowering.



NX,750OMC,A2 -19-01OCT96

N39213 -UN-22SEP88

KEEP RIDERS OFF MACHINE

Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



NX,750OMC,A3 -19-01OCT96


N43834 -UN-20SEP91

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

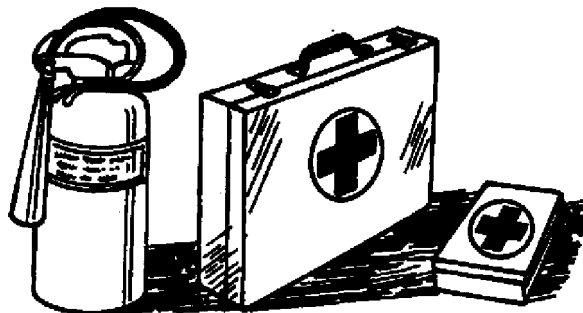

DX,FIRE2 -19-03MAR93


T5291 -UN-23AUG88



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

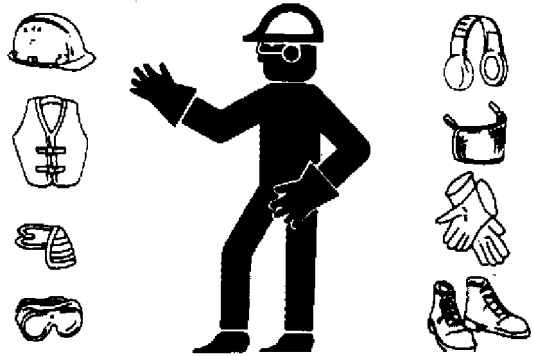

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG68


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

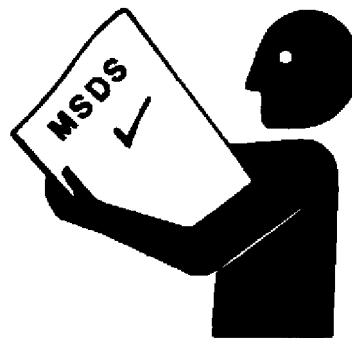

DX,MSDS,NA -19-03MAR93


TS1132 -UN-26NOV90



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

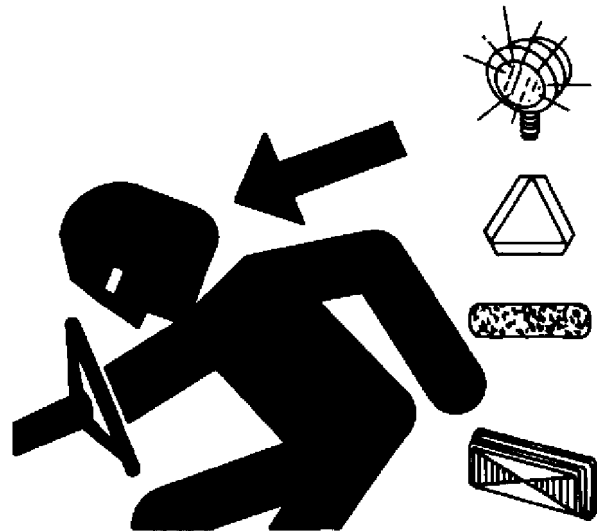

DX,FLASH -19-12SEP95


TSS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

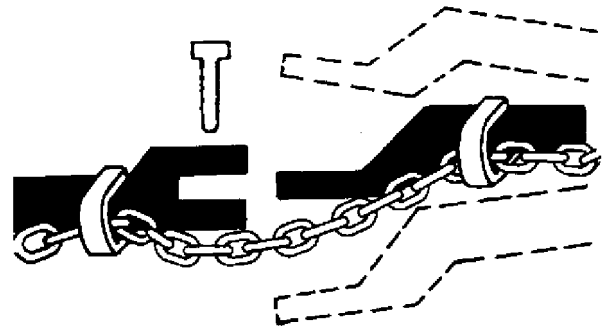

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88



TRANSPORT SAFELY


Shift tractor into lower gear when transporting down steep slopes or hills.

Make sure reflectors and SMV emblem are easily visible from rear.

ALWAYS travel at a reasonable and safe speed. Refer to machine specifications, Tow Loads Safely (in this section) and tractor Operator's Manual to ensure that machine can be safely transported with your tractor. Do not exceed weight and speed guidelines shown in Tow Loads Safely.

Stop slowly.

Know the transport width for your machine.

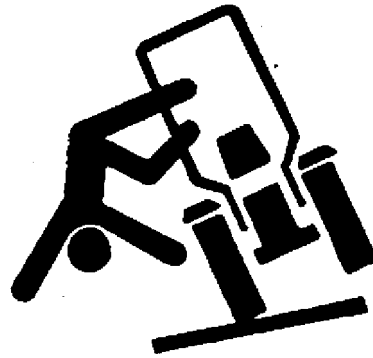

Machine Size	Transport Width
3.1 m (10 ft.)	3.2 m (10 ft. 6 in.)
4.6 m (15 ft.)	4.7 m (15 ft. 6 in.)
6.1 m (20 ft.)	6.4 m (20 ft. 7 in.)

Always lock-up opener lift cylinders before transporting drill. Hydraulic failure can allow openers to fall rapidly.

If drill is set up with marker arm attachment, be sure marker arms are raised and locked into position before transporting.

NX,750OMC,A4 -19-01OCT96

N39084 -UN-30MAR89




TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

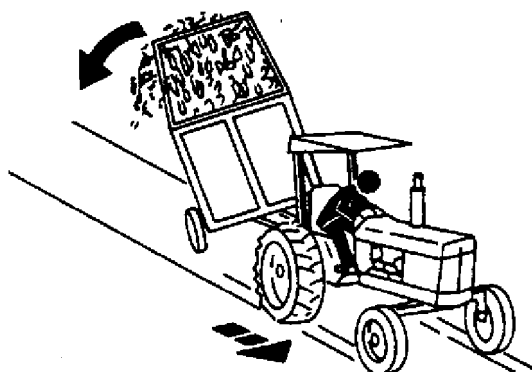

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading





SERVICE SAFELY

To help prevent personal injury caused by unexpected movement, be sure to service machine on level surface.

If machine is connected to tractor, engage parking brake and/or place transmission in "Park", shut off engine and remove key.

If machine is detached from tractor, block wheels and use safety stands to prevent movement.

Lock-up opener lift cylinders before performing any maintenance or adjustments under machine.

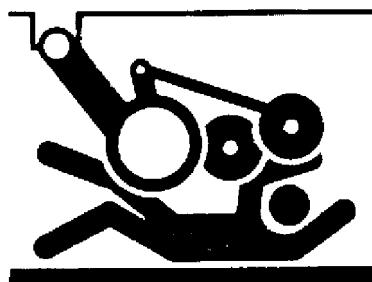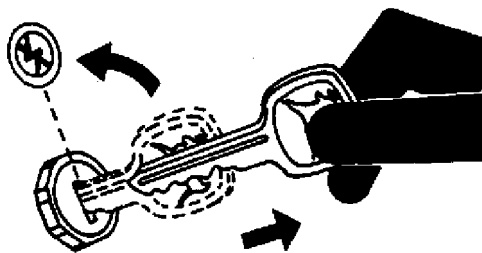

NX,7500MC,A5 -19-01OCT96

-UN-24MAY69

TS230

-UN-06OCT88

N39645

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

-UN-23AUG88

TS218




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

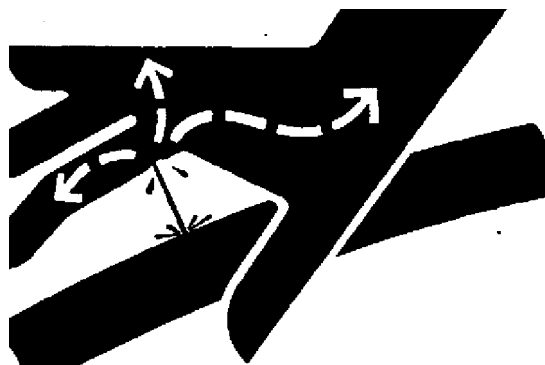

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

SERVICE TIRES SAFELY


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

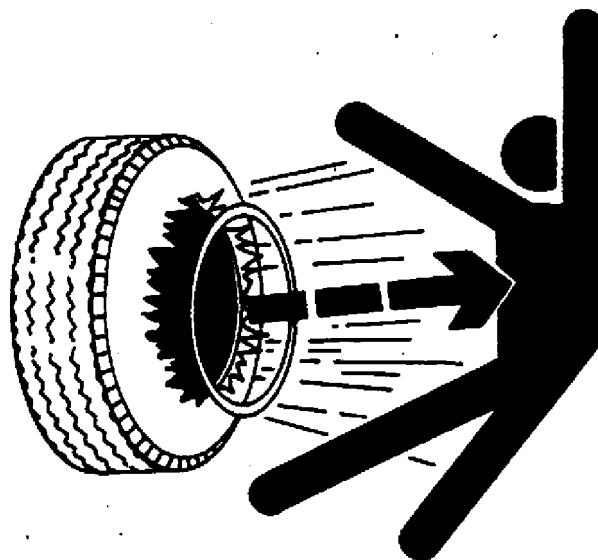

T5211 -UN-23AUG88

DX,RIM -19-24AUG90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>