

NEW HOLLAND
CR920
CR940
CR960
CR970
CR980


REPAIR
MANUAL



NEW HOLLAND



NEW HOLLAND

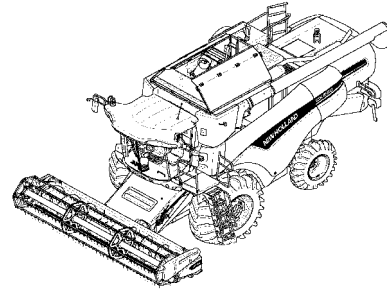

**CR920 - CR940 - CR960 - CR970
CR980
COMBINES**

REPAIR MANUAL

SECTIONS

GENERAL INFORMATION

ENGINE	10
LIVE PTO	14
TRANSMISSION	21
FRONT MECHANICAL DRIVE	25
HYDROSTATIC DRIVE	29
BRAKES AND CONTROLS	33
HYDRAULIC SYSTEMS	35
TOWING HOOKS & BALLASTING	37
STEERING AXLE	41
SUSPENSION & TRACKS	48
CLIMATE CONTROL	50
ELECTRICAL SYSTEM	55
PRODUCT FEEDING	60
THRESHING	66
SEPARATION	72
CLEANING SYSTEM	74
GRAIN STORAGE	80
ACCESSORIES	88
PLATFORM, CAB, BODYWORK AND DECALS	90

S E R V I C E

SECTION 00 - GENERAL INFORMATION

CONTENTS

Section	Description	Page
00 000	Foreword	2
	Part and Accessories	2
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety	3
	Safety Precautions	3
	Personal Considerations	3
	Equipment Considerations	4
	General Considerations	5
	Operational Considerations	5
	Antifreeze (See Fire, Solvents, i.e., Isopropanol, Ethylene Glycol, Methanol)	7
	Battery Acids (See Acids and Alkalis)	7
	Brake and Clutch Linings and Pads (See Legal Aspects)	7
	Brazing (See Welding)	7
	Chemical Materials - General (See Legal Aspects)	7
	Clutch Linings and Pads (See Brake and Clutch Linings and Pads)	8
	Corrosion Protection Materials (See Solvents, Fire)	8
	Cutting (See Welding)	8
	Dewaxing (See Solvents and Fuels - Kerosene)	8
	Dusts	8
	Electric Shock	8
	Exhaust Fumes	9
	Fiber Insulation (See Dusts)	9
	Fire (See Welding, Foams, Legal Aspects)	9
	First Aid	9
	Foams- Polyurethane (See Fire)	9
	Fuels (See Fire, Legal Aspects, Chemicals - General, Solvents)	10
	Gas Cylinders (See Fire)	10
	General Workshop Tools and Equipment	10
	High-Pressure Air, Lubrication and Oil Test Equipment	11
	Legal Aspects	11
	Lubricants and Greases	11
	Paints (See Solvents and Chemical Materials - General)	11
	Solder (See Welding)	11
	Product Identification	15
	Standard Torque Data for Hydraulic Tubes and Fittings	18
	Pipe Thread Fitting Torque	19
	Installation of ORFs (O-ring Flat Faced) Fittings	19
	Lubrication	20
	Sealants	23

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

FOREWORD

Appropriate service methods and correct repair procedures are essential for the safe, reliable operation of all equipment, as well as the personal safety of the individual performing the repair.

This Repair Manual provides troubleshooting, overhaul, and pressure-testing instructions using recommended procedures and equipment. Following these instructions will ensure the safe, efficient, and timely completion of the service or repair.

There are numerous variations in procedures, techniques, tools, and parts for servicing machines, as well as in the skill of the individual doing the work. This manual cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this manual must first establish that their personal safety, the safety of others, and the integrity of the machine will not be compromised by the choice of methods, tools or parts.

The manual is divided into sections which are subdivided into chapters: Each chapter contains information on general operating principles, detailed inspection, overhaul and, where applicable, specific troubleshooting, special tools, and specifications.

Any reference in this manual to right, left, rear, front, top, or bottom is as viewed from the operator's seat, looking toward the normal direction of travel.

All data and illustrations in this manual are subject to variations in build specification. This information was correct at the time of issue, but New Holland policy is one of continuous improvement, and, the right to change specifications, equipment, or design at any time, without notice, is reserved.

ABOUT IMPROVEMENTS

New Holland is continually striving to improve its products. We must, therefore, reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

PART AND ACCESSORIES

Genuine NEW HOLLAND parts and accessories have been specifically designed for NEW HOLLAND MACHINES.

We would like to point out that "NON GENUINE" parts and accessories have not been examined and

released by NEW HOLLAND. The installation and or use of such products could have a negative effect upon the design characteristics of your machine and thereby affect its safety. NEW HOLLAND is not liable for any damage caused by the use of "NON GENUINE" NEW HOLLAND parts and accessories.

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“DANGER”, “WARNING”, and “CAUTION”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



This word “DANGER” indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.



This word “WARNING” indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.



This word “CAUTION” indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

FAILURE TO FOLLOW THE “DANGER”, “WARNING”, AND “CAUTION” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY

The additional precautionary statement (“IMPORTANT”) is followed by specific instructions. This statement is intended for machine safety.

IMPORTANT: *The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

INFORMATION

NOTE: *Instructions used to identify and present supplementary information.*

SAFETY PRECAUTIONS

Practically all service work involves the need to drive the combine. The operator’s manual, supplied with each combine, contains detailed safety precautions relating to driving, operating, and servicing the combine. These precautions are as applicable to the service technician as they are to the operator and should be read, understood and practiced by all personnel.

Prior to undertaking any maintenance, repair, overhaul, dismantling or reassembly operations, whether within a workshop facility or in the field, consideration should be given to factors that may have an effect upon safety, not only upon the mechanic carrying out the work, but also upon bystanders.

PERSONAL CONSIDERATIONS

The wrong clothes or carelessness in dress can cause accidents. Be sure to wear suitable clothing when servicing equipment.

Some jobs require special protective equipment; be sure to use protective equipment when required.

Skin Protection

Used motor oil may cause skin cancer. Follow work practices that minimize the amount of skin exposed and length of time used oil stays on your skin.

Eye Protection

The smallest eye injury may cause loss of vision. Injury can be avoided by wearing eye protection when engaged in chiselling, grinding, discing, welding, and painting.

Breathing Protection

Fumes, dust, and paint spray are unpleasant and harmful. These can be avoided by wearing respiratory protection.

Hearing Protection

Loud noise may damage your hearing, and the greater the exposure the worse the damage. If the noise is excessive, wear ear protection.

Lifting Protection

Avoid injury by correctly handling components. Make sure you are capable of lifting the object. If in doubt get help.

Hand Protection

It is advisable to use a protective cream before work to prevent irritation and skin contamination. After work clean your hands with soap and water. Solvents such as mineral spirit and kerosene may harm the skin.

Foot Protection

Substantial or protective foot wear with reinforced toe caps will protect your feet from falling objects. Additionally, oil-resistant soles will help to avoid slipping.

Special Clothing

For certain work it may be necessary to wear flame or acid-resistant clothing.

EQUIPMENT CONSIDERATIONS**Machine Guards**

Before using any machine, check to ensure that the machine guards are in position and serviceable. These guards not only prevent parts of the body or clothing coming in contact with the moving parts of the machine, but also ward off objects that might fly off the machine and cause injury.

Lifting Devices

Always ensure that lifting equipment, such as chains, slings, lifting brackets, hooks and eyes, are thoroughly checked and in good condition before use. If in doubt of weight capacity, select stronger equipment than is necessary.

Never stand under a suspended load or raised implement.

Compressed Air

The pressure from a compressed-air line often exceeds 100 PSI (690 kPa). It is perfectly safe if used correctly. Any misuse may cause injury.

Never use compressed air to blow dust, filing, and dirt away from your work area unless the correct type of nozzle is fitted.

Compressed air is not a cleaning agent; it will only move dust from one place to another. Look around before using an air hose as bystanders may get grit into their eyes, ears, or skin.

Hand Tools

Many cuts, abrasions and injuries are caused by defective tools. Never use the wrong tool for the job, as this generally leads either to an injury, a poor job, or damaged equipment.

When removing or replacing hardened pins, use a copper or brass drift rather than a hammer.

For dismantling, overhaul, and assembly of major and sub-components, always use the Special Service Tools recommended. These will reduce the work effort, labor time, and the repair cost.

Electricity

Electricity has become so familiar in day to day usage, that its potentially dangerous properties are often overlooked. Misuse of electrical equipment can endanger life.

Before using any electrical equipment particularly portable appliances - make a visual check to make sure that the wiring is not worn or frayed and that the plugs and sockets are intact. Make sure you know where the nearest isolating switch for your equipment is located.

GENERAL CONSIDERATIONS

Solvents

Use cleaning fluids and solvents that are known to be safe. Certain types of fluids can cause damage to components such as seals and can cause skin irritation. Solvents should be checked that they are suitable not only for the cleaning of components and individual parts, but also that they do not affect the personal safety of the user.

Housekeeping

Many injuries result from tripping over or slipping on objects or material left lying around by a careless worker. Prevent these accidents from occurring. If you notice a hazard, remove the hazard.

A clean, hazard-free place of work improves the surroundings and daily environment for everybody.

Fire

Fire has no respect for persons or property. The destruction that a fire can cause is not always fully realized. Everyone must be constantly on guard.

Extinguish matches, cigars, and cigarettes before throwing them away.

Work cleanly, disposing of waste material into proper containers.

Locate the fire extinguishers and find out how to operate them.

Do not panic - warn those near and raise the alarm.

Do not allow or use an open flame near the combine fuel tank, battery, or component parts.

First Aid

In the type of work that mechanics are engaged in, dirt, grease, and fine dusts settle upon the skin and clothing. If a cut, abrasion or burn is disregarded it may become infected within a short time. Seek medical aid immediately.

Cleanliness

Cleanliness of the combine hydraulic system is essential for optimum performance. When carrying out service and repairs, plug all hose ends and component connections to prevent dirt entry.

Clean the exterior of all components before carrying out any form of repair. Dirt and abrasive dust can reduce the efficiency and working life of a component and lead to costly replacement. Use of a high-pressure washer or steam cleaner is recommended.

OPERATIONAL CONSIDERATIONS

Stop the engine, if at all possible, before performing any service.

Place a warning sign on the combine which, due to service or overhaul, would be dangerous to start. Disconnect the battery leads if leaving such a unit unattended.

Do not attempt to start the engine while standing beside the combine or attempt to bypass the safety start switch.

Avoid prolonged running of the engine in a closed building or in an area with inadequate ventilation as exhaust fumes are highly toxic.

Always turn the radiator cap to the first stop to allow pressure in the system to dissipate when the coolant is hot.

Never work beneath a combine which is on soft ground. Always take the unit to an area which has a hard working surface, preferably concrete.

If it is found necessary to raise the combine for ease of servicing or repair, make sure that safe and stable supports are installed beneath axle housings, casings, etc., before starting work.

Use ladders or working platforms when servicing those areas of a combine that are not within easy reach.



WARNING



Do not use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Stop the engine and relieve pressure before connecting or disconnecting lines.

Tighten all connections before starting the engine or pressurizing lines.

If any fluid is injected into the skin, obtain medical attention immediately or gangrene may result.



WARNING



Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury.

Before loosening any hoses or tubes connecting implements to remote control valves, etc., switch off the engine, remove all pressure in the lines by operating levers several times. This will remove the danger of personal injury by oil pressure.

Prior to pressure testing, make sure all hoses and connectors of the combine and the test equipment are in good condition and tightly sealed. Pressure readings must be taken with the gauges specified. The correct procedure should be rigidly observed to prevent damage to the system or the equipment, and to eliminate the possibility of personal injury.

Always lower equipment to the ground when leaving the combine.

Beware of overhead power, electric or telephone cables when travelling.

Do not park or attempt to service a combine on an incline. If unavoidable, take extra care and block all wheels.

Observe recommended precautions as indicated in this Repair Manual when dismantling the air conditioning system as escaping refrigerant can cause frostbite.

Prior to removing wheels and tires from the combine, check to determine whether additional ballast (liquid or weights) has been added. Seek assistance and use suitable equipment to support the weight of the wheel assembly.

When inflating tires, beware of over inflation - constantly check the pressure. Over inflation can cause tires to burst and result in personal injury.

HEALTH AND SAFETY PRECAUTIONS

Many of the procedures associated with vehicle maintenance and repair involve physical hazards or other risks to health. This section lists, alphabetically, some of these hazardous operations, materials and equipment associated with them. The precautions necessary to avoid these hazards are identified.

The list is not inclusive; all operations, procedures, and handling of materials should be carried out with health and safety in mind.

ACIDS AND ALKALIS (SEE BATTERY ACIDS, I.E., CAUSTIC SODA, SULPHURIC ACID)

Used in batteries and cleaning materials.

Irritating and corrosive to the skin, eyes, nose and throat. Causes burns.

Avoid splashes to the skin, eyes, and clothing. Wear suitable protective gloves and goggles. Can destroy ordinary protective clothing. Do not breathe mists.

Ensure access to water and soap is readily available for splashing accidents.

ADHESIVES AND SEALERS (SEE FIRE)

—————  **CAUTION**  —————

Highly flammable, combustible.

Generally should be stored in "NO SMOKING" areas; cleanliness and tidiness while in use should be observed, i. e., from applications where possible, disposable paper should be dispensed to cover benches. Containers, including secondary containers, should be labelled.

Solvent-Based Adhesives/Sealers (See Solvents)

Follow manufacturer's Instructions

Water-Based Adhesives/Sealers

Those based on polymer emulsions and rubber lattices may contain small amounts of volatile toxic and harmful chemicals.

Skin and eye contact should be avoided, and adequate ventilation provided during use.

Follow manufacturer's Instructions

Resin-Based Adhesive/Sealers (i.e., Epoxide and Formaldehyde Resin Based)

Mixing should only be carried out in well-ventilated areas as harmful or toxic volatile chemicals may be released.

Skin contact with uncured resins and hardeners can result in irritation, dermatitis, and absorption of toxic, or harmful chemicals through the skin. Splashes can damage the eyes.


Provide adequate ventilation; avoid skin and eye contact. Follow manufacturer's instructions.

SECTION 10 - ENGINE

Chapter 1 - 7.5L Engine

CONTENTS

Section	Description	Page
10 000	Specifications	2
	Tightening Torques	8
	Special Tools	9
	Troubleshooting	11
	Description and Operation	15
10 001	Engine Overhaul - Introduction	22
	Injection Pump Timing Check	23
	Overhaul	27
10 101	Cylinder Head, Valves and Related Parts	27
10 106	Engine Front Cover and Timing Gears	40
10 102	Oil Pan	45
10 103	Flywheel	46
10 102	Rear Cover Plate	48
10 102	Oil Pump	50
10 102	Oil Pressure Relief Valve	52
10 106	Camshaft	53
	Camshaft Bearings	54
10 105	Pistons	56
	Connecting Rod Bush Replacement	58
10 105	Cylinder Block Overhaul	60
	Cylinder Bore	61
	Sleeving - Boring and Honing	62
	Installing Piston Assembly Into Block	65
10 103	Crankshaft	66
10 003	Front Crankshaft Cassette Oil Seal Replacement	71
10 001	Engine Compression Test	77

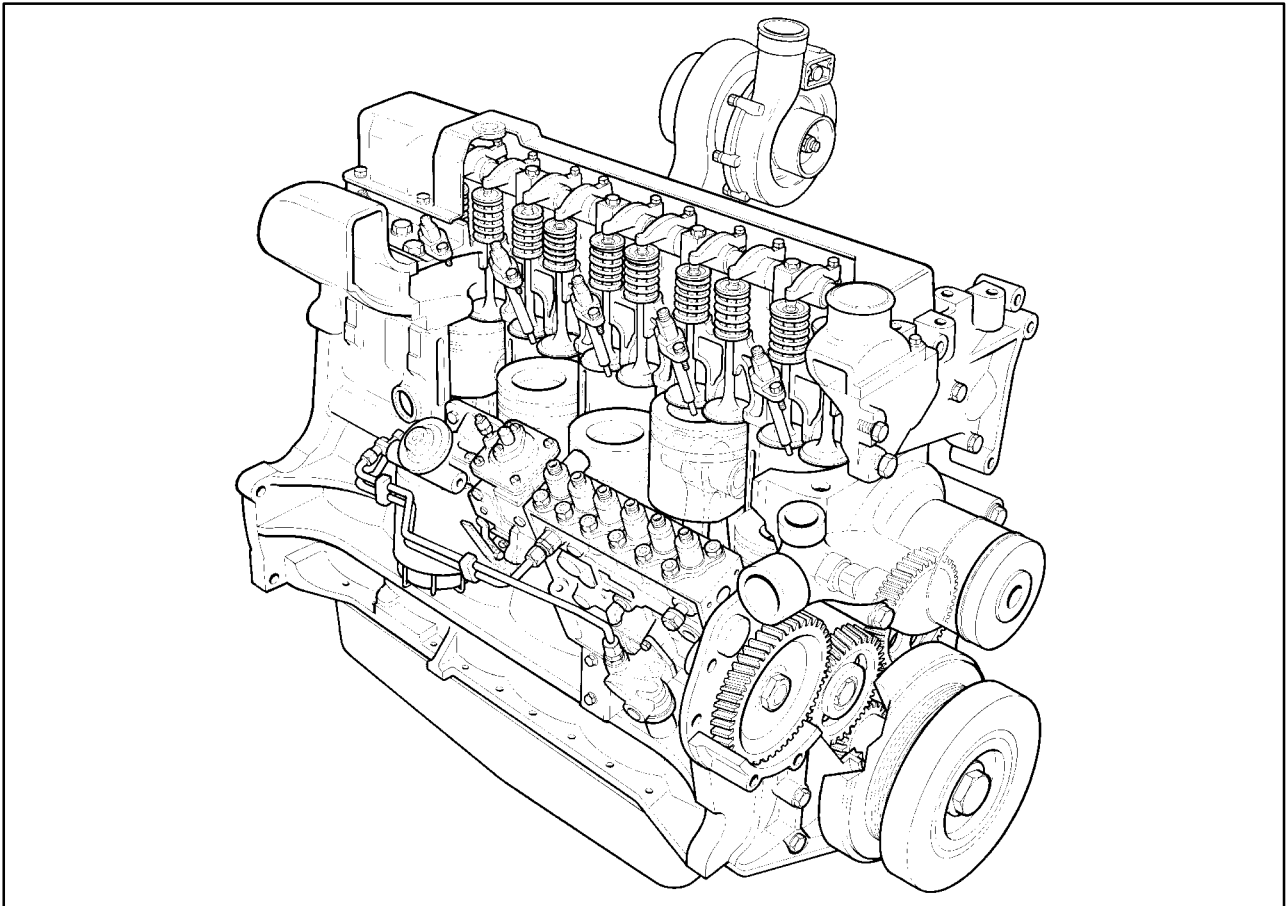DESCRIPTION AND OPERATION

2

The 7.5 Litre engine is a 6-cylinder turbocharged and aftercooled, having a bore of 111.8 mm (4.4") and a stroke of 127 mm (5.0") which generates a displacement of 7.5L (456 in³).

The engine uses a mechanical or electronically controlled in line injection pump depending on model and has been designed to meet current emission regulations and must only be serviced by an authorized service agent. For a detailed description and operation of the fuel system, reference must be made to the "Fuel System" chapter in this Section of the manual.

All engines feature cross flow cylinder heads, with the inlet and exhaust manifolds on opposite sides of the cylinder head. The fuel and air combustion process, takes place in the specially designed bowl in the crown of the pistons.

Cylinder Block Assembly

The cylinder block is an alloy cast iron with deep cylinder skirts, and water jackets for cooling the cylinders. The cylinder bores are machined integral with the cylinder block, during the manufacturing process.

Cylinders are in line and vertical and numbered 1 to 6 from the front to the rear of the engine. They can be bored oversize for the fitment of sleeves, which are available in service.

The oil pan is the reservoir for the engine oil lubrication system and a cast iron front cover on the front of the engine covers the timing gear assembly.


Cylinder Head Assembly

The cylinder head incorporates an inlet and exhaust valve per cylinder with the valve rocker arm shaft assembly bolted to the cylinder block through the cylinder head. Cylinder head retaining bolts are evenly spaced with a six point pattern around each cylinder, this ensures an even clamping load across the cylinder head area.

The intake and exhaust manifolds are bolted to the head, the intake manifold is mounted on the right hand side of the engine, with the diesel injectors mounted outside the rocker cover. The exhaust manifold is mounted on the left hand side of the engine. Water outlet connections and thermostats being attached to the front of the cylinder block.

Valve guides are integral in the cylinder head, and valves with oversize stems are available in service. Special replaceable sintered iron valve seats are pressed into each valve port during manufacture and oversize valve seats also available in service.

All valves are fitted with positive valve rotators and valve stem oil seals. Valve clearance is maintained by adjustment of the self locking adjusting screw, mounted in each of the rocker arms.

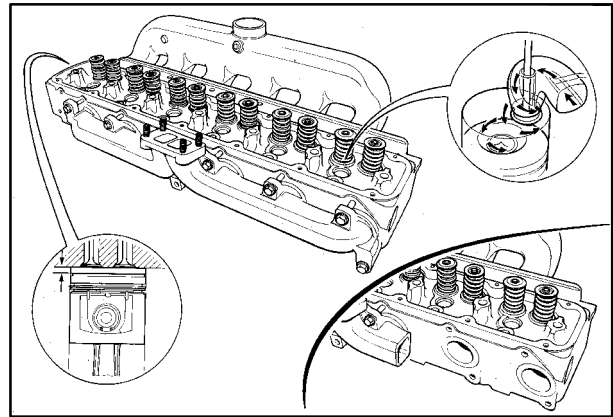


3

Camshaft Assembly

The camshaft runs in 5 replaceable bearings. The camshaft drive gear is in mesh with and driven by the camshaft idler gear which is driven by the crankshaft timing gear.

Camshaft end thrust is controlled by a thrust plate bolted to the block, and located between the camshaft gear and the front camshaft journal.

A helical gear is mounted on the rear of the camshaft, and drives the engine oil lubrication pump mounted forward of the flywheel.

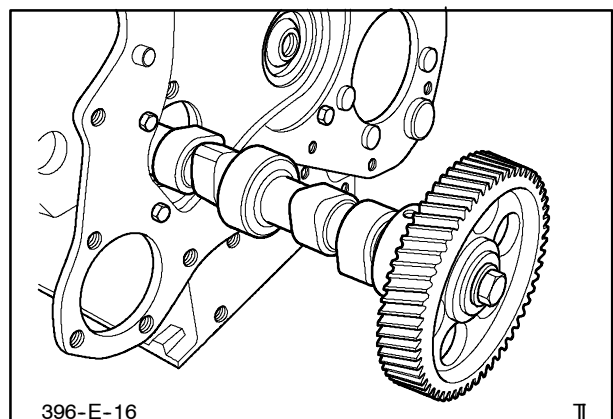

4


Crankshaft Assembly

The crankshaft is supported in the cylinder block by 7 main bearings.

The crankshaft is manufactured from steel with machined finished crank webs

End thrust is controlled by a thrust bearing incorporated in the center main bearing of the crankshaft.

An external damper is fitted to the crankshaft pulley to ensure smooth running operation. Front and rear crankshaft oil sealing is effected by cassette type seals that are designed for long and durable service life.

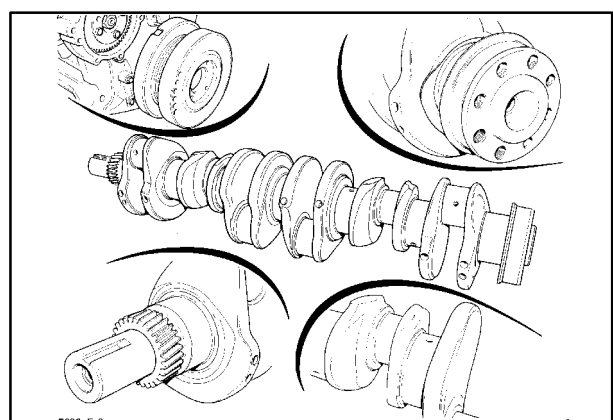


5

Connecting Rods

Connecting rods "Teepee" (wedge) shaped at the small end have been designed to reduce the reciprocating weight at the piston end. The connecting rods are of a heavy beam construction and are assembled as a matched set to each engine.

They are retained in position by the connecting rod big end cap and secured by two bolts per rod. The small end of the connecting rod is fitted with a replaceable bronze bushing, through which the free floating piston pin is fitted. The steel pin being held in place within the piston by two snap rings.

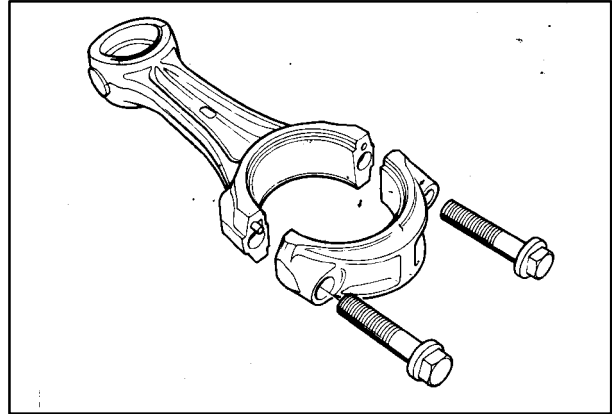


6

Pistons

Pistons are constructed of an aluminium silicon alloy with an iron insert for the top ring. The combustion chamber being recessed into the piston crowns.

Each piston has two compression rings and one oil control ring, to reduce friction and increase positive sealing. All rings are located above the piston pin.

- A Engines with Electronically Controlled Injection Pump
- B Engines with Mechanically Controlled Injection Pump

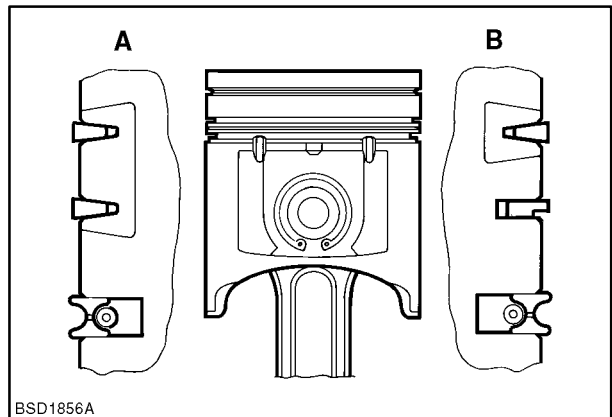


BSD1856A

7

Manifolds

The cross flow design aluminium intake, and cast iron exhaust manifolds, are on opposite sides of the cylinder head. This is designed to maintain balanced heat distribution within the cylinder head. The configuration of the manifolds also ensures minimum heat transfer to the intake manifold.

A grid heater is fitted to the intake manifold to assist in cold starting of the engine when coolant water temperature is below 30°C.

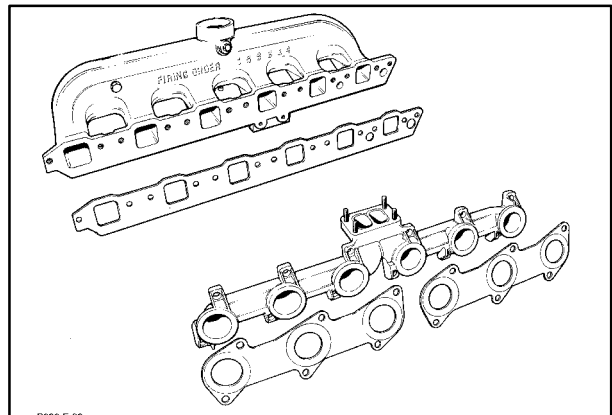


D996 E 00

8

Timing Gears


The crankshaft timing gear is heated and press fitted on to the front of the crankshaft, to a high degree of accuracy during manufacturing. This enables precise timing being maintained during the life of the engine. The crankshaft gear, 2, drives the idler gear, 3, which is attached to the front of the cylinder block. The idler gear then drives the camshaft gear, 1, and the injection pump gear, 4.

The camshaft gear is bolted to the front of the camshaft, and is keyed to maintain position of the gear on the camshaft.

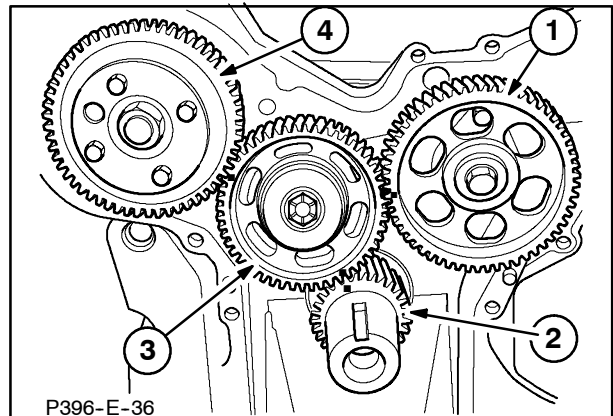

9


Lubrication System

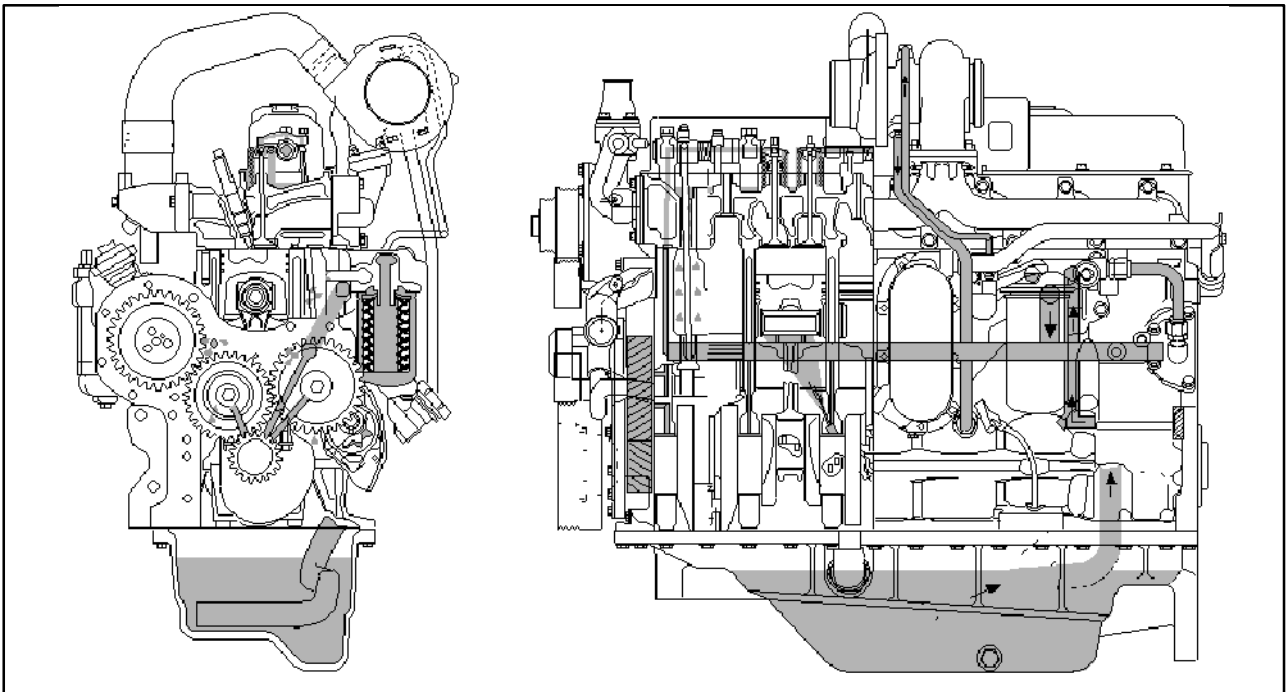

10


Engine Lubrication System

Lubrication of the engine, Figure 10, is maintained by a rotor type oil pump mounted in the rear of the engine block, forward of the flywheel on the left hand side of the engine.

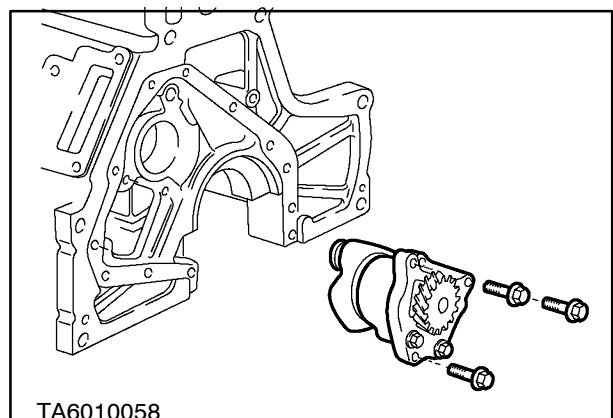


11

The oil pump is driven from the rear of the camshaft and draws oil from the engine oil pan through a tube and screen assembly.

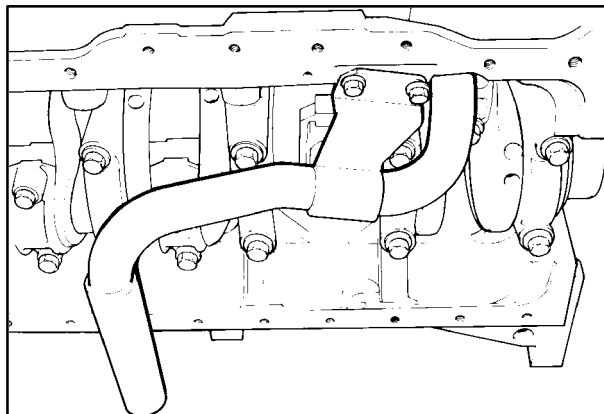


12

A spring loaded relief valve is integral with the dummy oil filter head mounted on the left hand side of the engine block and prevents over pressurisation of the system.

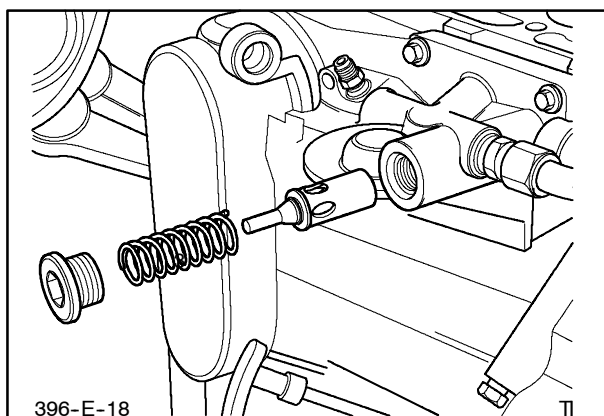

13

The spin on type oil filter is mounted at the rear of the engine.

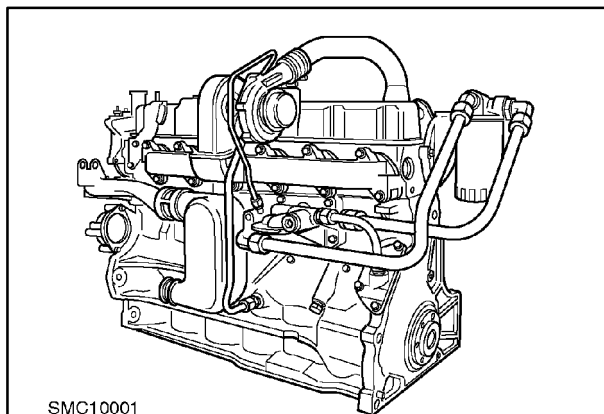


14

Oil flows from the filter to the main oil gallery, which runs the length of the cylinder block and also intersects the camshaft follower chamber.


The main gallery supplies oil to the crankshaft main bearings, connecting rods and both big and small ends. The underside of the pistons and pins, are lubricated by oil pressure jets mounted adjacent to each main journal housing.

The camshaft drive gear bushing is pressure lubricated through a drilled passage from the front main bearing. The gear has small oil passages machined on both sides allowing excess oil to escape.

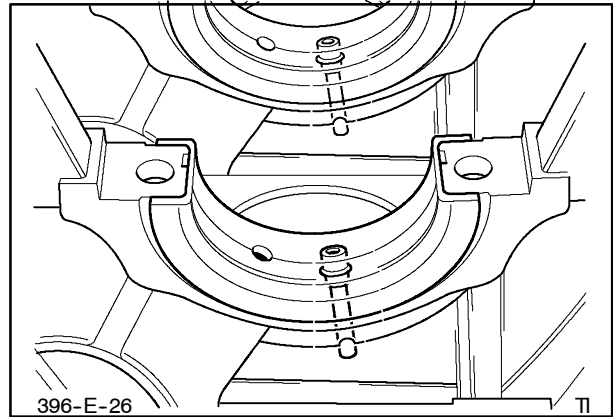


15

An intermittent flow of oil is directed to the valve rocker arm shaft assembly via a drilled passage in the cylinder block. This is located vertically above No.1 camshaft bearing, 1, and aligns to a hole in the cylinder head. The rotation of the camshaft allows a controlled intermediate flow of lubrication.

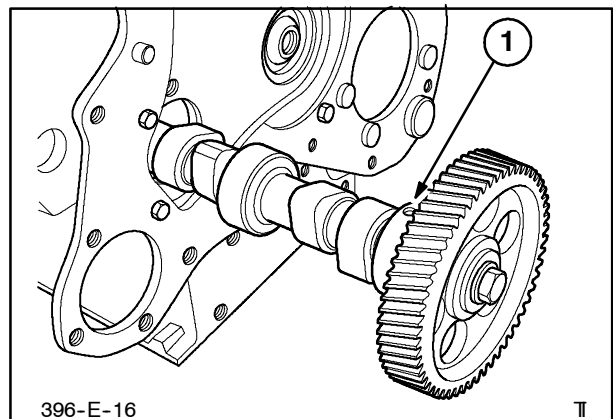


16

Timing gears are lubricated by splashed oil from the cam follower chamber, and the pressure lubricated camshaft drive gear bushing.

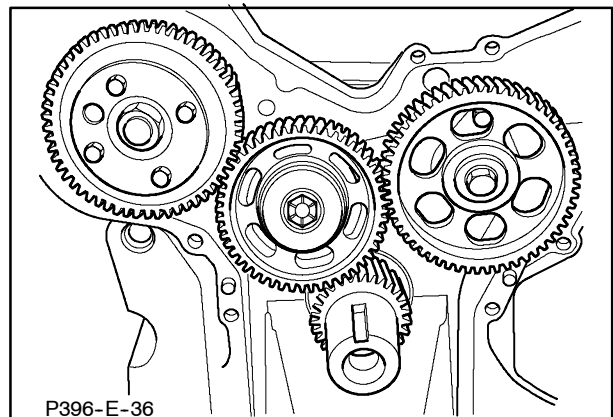


17

The turbocharger is supplied with oil from the oil filter support housing, 1, mounted on the left hand side of the engine.

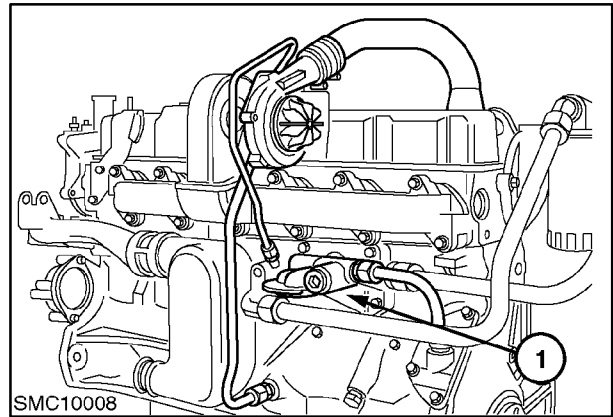


18

The fuel injection pump is pressure lubricated from a port, 1, on the right hand side of the engine block. The fuel pump is either electronically controlled using an electronic control unit, Figure 19 or mechanically controlled depending on model build, Figure 20.

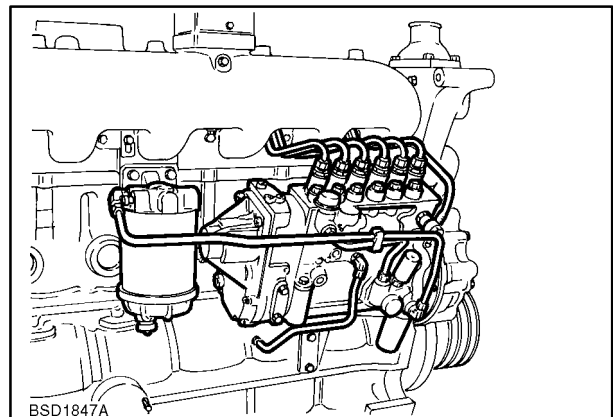

19

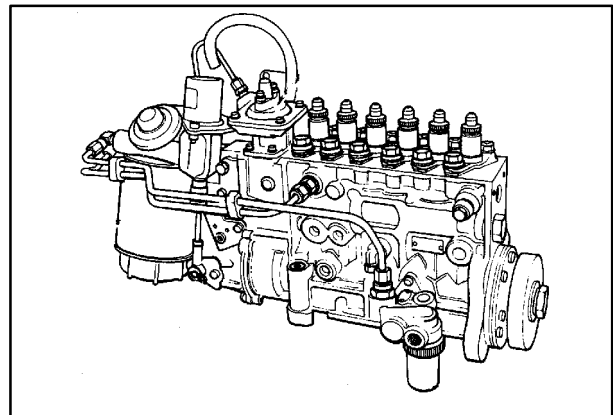

20



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

ENGINE OVERHAUL - INTRODUCTION

In the following procedures and illustrations the engine is shown removed from the vehicle however there are certain operations that can be performed with the engine installed.

Where it is necessary to remove the engine use a suitable hoist or overhead gantry and standard engineering procedures. Removal of the engine is described in Section 10, Chapter 3 of this manual.

Dismantle the engine following conventional techniques and by referring to the appropriate overhaul sections of this chapter. Always refer to the specification section as necessary.

NOTE: *Where it is necessary to remove additional items to gain access to the components on the engine Refer to Chapter 3 "Remove and Replace, 7.5L Engine".*

NOTE: *All gaskets, seals, and O rings must be replaced during re-assembly. Where new sealant is to be applied refer to "Engine Specifications".*

For concerns relating to the fuel system refer to the "Fuel System" chapter in this manual. On engines fitted with the electronically controlled fuel injection pump refer to the "Engine Fault Codes" chapter in the electrical section of the manual.

Operations or repairs that can be performed with the engine still in the vehicle.

1. Front timing cover, Pump drive gear and idler gear. Removal of engine is required in order to remove and replace the camshaft timing gear.
2. Front pulley and damper assembly.
3. Cylinder head and associated inlet and exhaust components.
4. Fuel injection pump removal and timing.
5. Water pump, thermostat, and associated components .
6. Oil pump relief valve.
7. Turbocharger.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>